- A smooth, quiet ride

The suggested method of tire rotation is (Fig. 4). Other rotation methods can be used, but they will not provide all the tire longevity benefits.

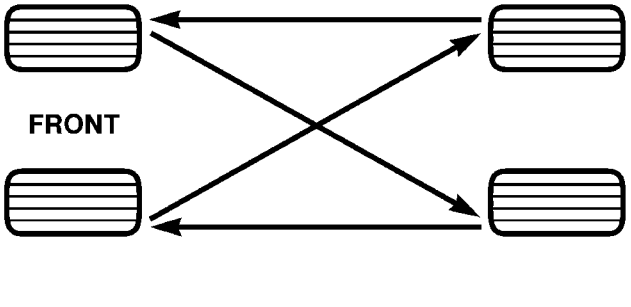


Fig. 4 Tire Rotation Pattern

STANDARD PROCEDURE - MATCH MOUNTING

Tires and wheels are currently match mounted at the factory. Match mounting is a technique used to reduce runout in the wheel/tire assembly. This means that the high spot of the tire is aligned with the low spot on the wheel rim. The high spot on the tire is marked with a paint mark or a bright colored adhesive label on the outboard sidewall. The low spot on the rim is identified with a label on the outside of the rim and a dot on the inside of the rim. If the outside label has been removed the tire will have to be removed to locate the dot on the inside of the rim.

Before dismounting a tire from its wheel, a reference mark should be placed on the tire at the valve stem location. This reference will ensure that it is remounted in the original position on the wheel.

(1) Use a dial indicator to locate the high spot of the tire on the center tread rib (Fig. 5). Record the indicator reading and mark the high spot on the tire. Place a mark on the tire at the valve stem location (Fig. 6).

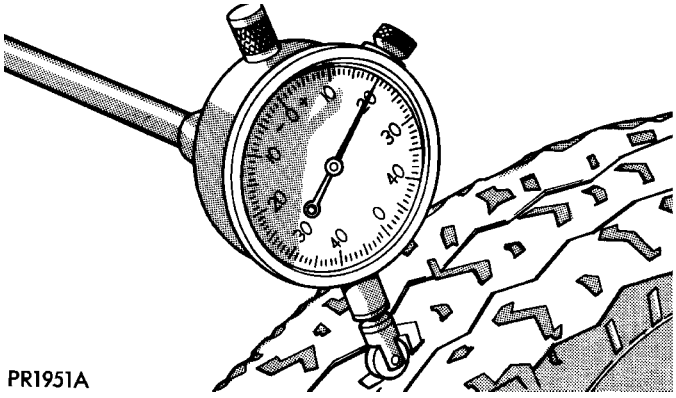


Fig. 5 Dial Indicator

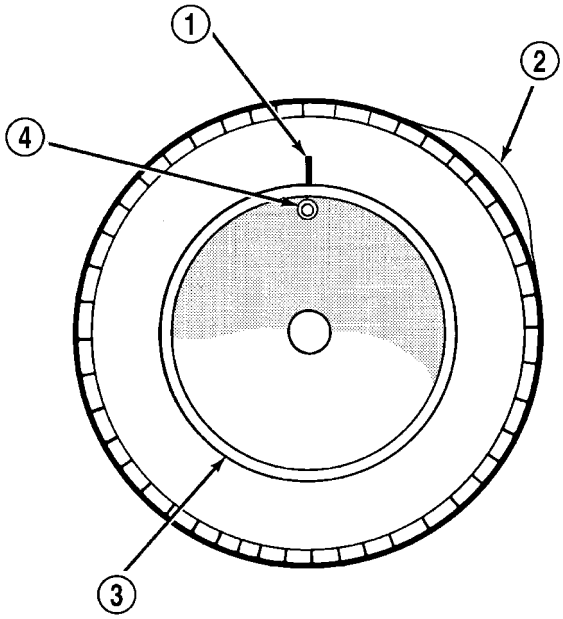


Fig. 6 First Measurement On Tire

1 - REFERENCE MARK
2 - 1ST MEASUREMENT HIGH SPOT MARK TIRE AND RIM
3 - WHEEL
4 - VALVE STEM

(2) Break down the tire and remount it 180 degrees on the rim (Fig. 7).

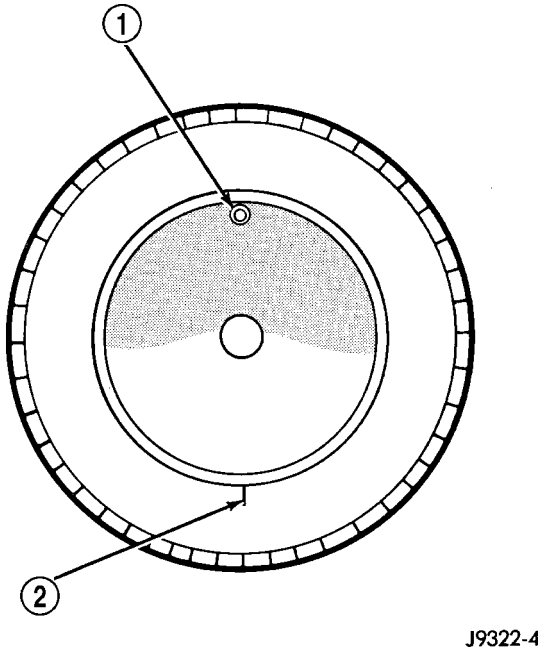


Fig. 7 Remount Tire 180 Degrees

1 - VALVE STEM
2 - REFERENCE MARK

(3) Measure the total runout again and mark the tire to indicate the high spot.

(4) If runout is still excessive use the following procedures.