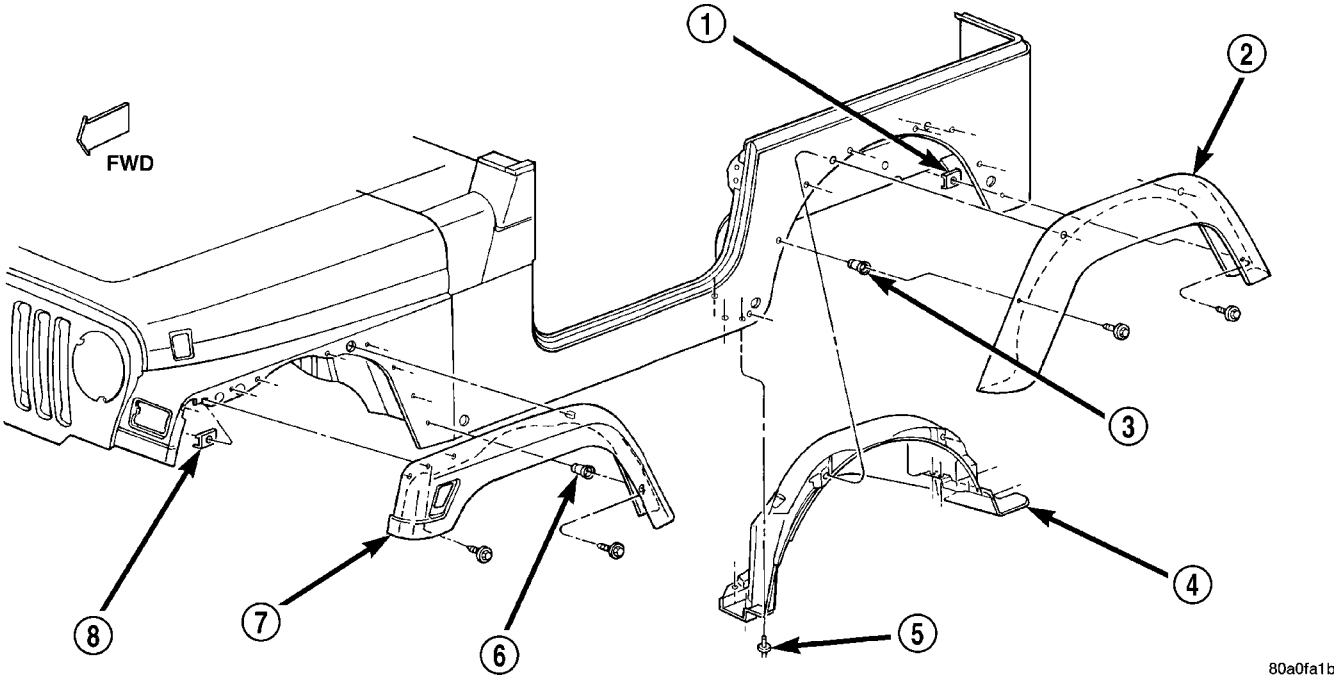

Fig. 7 FENDER FLARES

1 - U-NUT
2 - FENDER FLARE
3 - NUTSERT
4 - SPLASH SHIELD
5 - RIVET
6 - NUTSERT
7 - FENDER FLARE
8 - U-NUT

INSTALLATION

(1) Clean the contact surface on the body.

(2) Clean the contact surface on the flare and position it on the front fender or wheelhouse.

(3) Install the screws attaching the flares to the front fender or wheelhouse.

(4) If removed, install the side marker lamp.

EXHAUSTER

REMOVAL

(1) Remove the spare tire carrier. (Refer to 22 - TIRES/WHEELS/TIRES/SPARE TIRE CARRIER - REMOVAL)

(2) Using a trim stick C-4755 or equivalent, separate the exhauster from the tailgate. (Fig. 8)

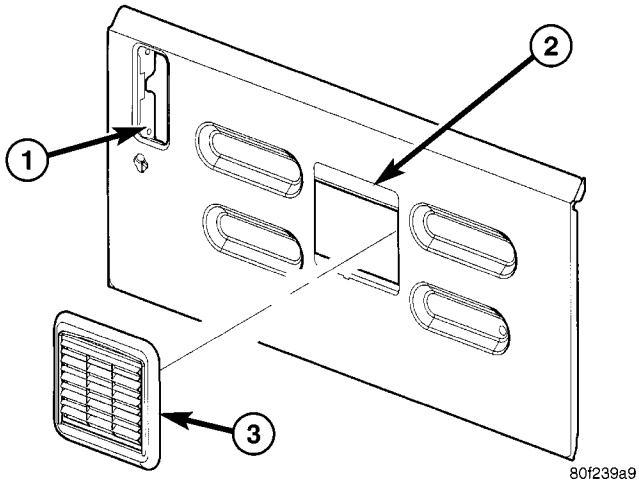

Fig. 8 BODY EXHAUSTER

1 - TAILGATE HANDLE
2 - EXHAUSTER OPENING
3 - EXHAUSTER

INSTALLATION

(1) Install the exhauster and seat fully.

(2) Install the spare tire carrier. (Refer to 22 - TIRES/WHEELS/TIRES/SPARE TIRE CARRIER - INSTALLATION)