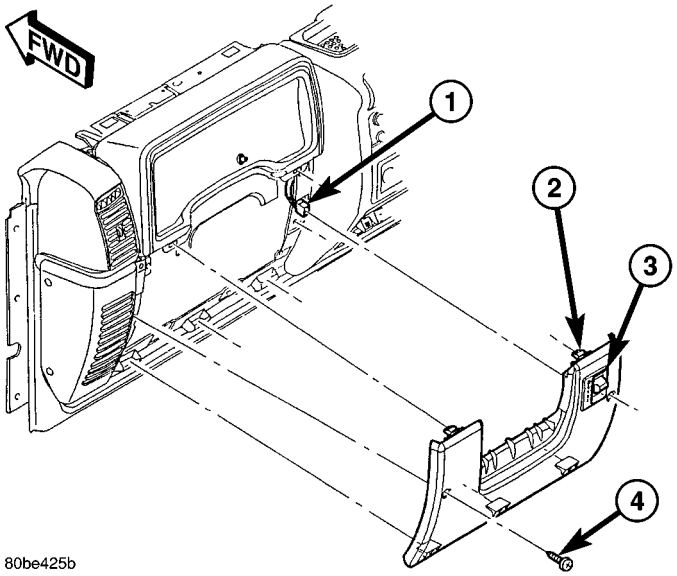

Fig. 15 STEERING COLUMN OPENING COVER REMOVE/INSTALL

1 - WIRE HARNESS CONNECTOR
2 - STEERING COLUMN OPENING COVER
3 - HEADLAMP LEVELING SWITCH
4 - SCREW (2)

(4) Using a trim stick or another suitable wide flat-bladed tool, gently pry the top of the steering column opening cover away from the instrument panel on each side of the steering column far enough to disengage the two snap clip retainers from their receptacles in the instrument panel base trim.

(5) If the vehicle is so equipped, roll the top of the steering column opening cover downward far enough to access and disconnect the wire harness connector for the headlamp leveling switch from the switch connector receptacle.

(6) Pull the top of the steering column opening cover rearward far enough to disengage the hinge hook formations on the lower edge of the cover from the hinge pins on the lower edge of the instrument panel.

(7) Remove the steering column opening cover from the instrument panel.

INSTALLATION

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Position the steering column opening cover to the instrument panel.

(2) Engage the hinge hook formations on the lower edge of the steering column opening cover with the hinge pins on the lower edge of the instrument panel (Fig. 15).

(3) If the vehicle is so equipped, roll the top of the steering column opening cover upward far enough to reconnect the wire harness connector for the headlamp leveling switch to the switch connector receptacle.

(4) Tilt the upper edge of the steering column opening cover up and align the two snap clip retainers on the cover with their receptacles in the instrument panel base trim.

(5) Using hand pressure, press firmly on the steering column opening cover over each of the snap clip locations until each of the snap clips is fully engaged in its receptacle in the instrument panel base trim.

(6) Install and tighten the two screws that secure the steering column opening cover to the instrument panel structural support. Tighten the screws to 2 N·m (20 in. lbs.).

(7) Reconnect the battery negative cable.

TOP COVER

REMOVAL

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect and isolate the battery negative cable.

(2) Using a trim stick or another suitable wide flat-bladed tool, gently pry the instrument panel top cover up and away from the instrument panel far enough to disengage the five snap clip retainers from their receptacles in the instrument panel structural support (Fig. 16).