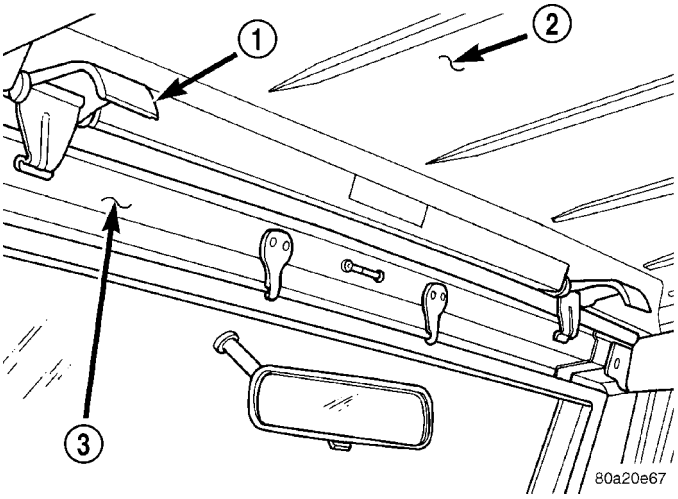

Fig. 1 HARD TOP LATCH

1 - LATCH
2 - HARD TOP
3 - WINDSHIELD FRAME

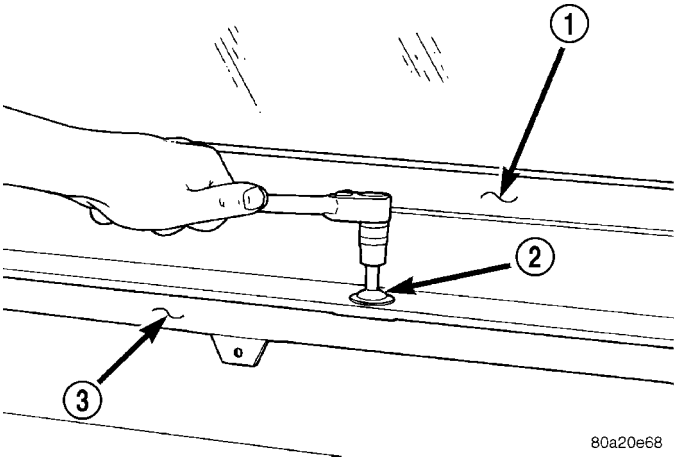

Fig. 2 HARD TOP REMOVAL

1 - HARD TOP
2 - HOLD DOWN BOLT
3 - BODY RAIL

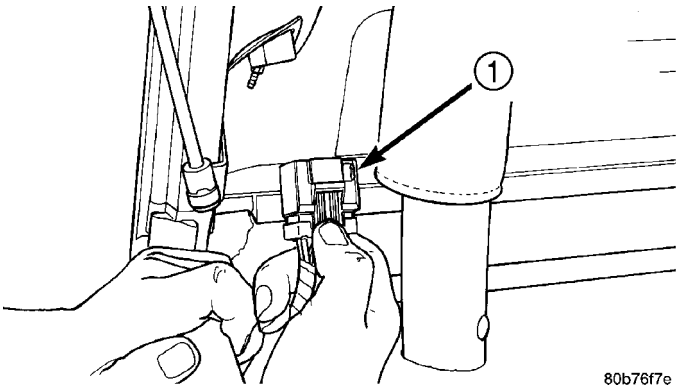

Fig. 3 REAR WIPER WIRE HARNESS CONNECTOR

1 - WIPER MOTOR CONNECTOR

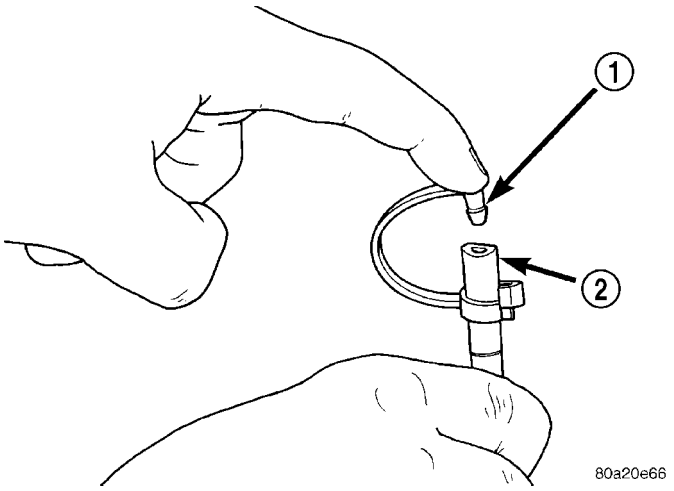

Fig. 4 REAR WASHER FLUID TUBE

1 - WASHER HOSE CAP
2 - REAR WASHER SUPPLY HOSE - BODY HALF

INSTALLATION

(1) Inspect the hard top seals for damage and replace, if necessary.

(2) Inspect the windshield header seal and make sure it is clean, undamaged, and free of debris.

(3) Carefully position the hard top assembly on the vehicle making sure that the latches are not pinched between the windshield frame and top.

CAUTION: Do not over tighten the top bolts. Over tightening can cause cracking of the hardtop assembly.

(4) Loosely install the six bolts. Ensure that the top is centered on the vehicle and tighten the bolts to 17 N·m (150 in. lbs.).

(5) Connect the wire wiper motor harness connector.

(6) Connect the rear washer fluid hose.

(7) Engage the latches at windshield frame and snap the clamps home.

SOFT TOP

REMOVAL

(1) Disengage the retainers attaching the rear window to the body.

(2) Remove rear window, unzipping from right to left.

(3) Disengage J-straps at soft top rear corners (Fig. 5).

(4) Unzip quarter windows, disengage J-strap and remove quarter windows.

(5) Starting at the rear of the upper door opening frame and working forward, disengage drip rail retainers attaching the soft top to the door opening frame.

(6) Unlatch top at windshield frame.