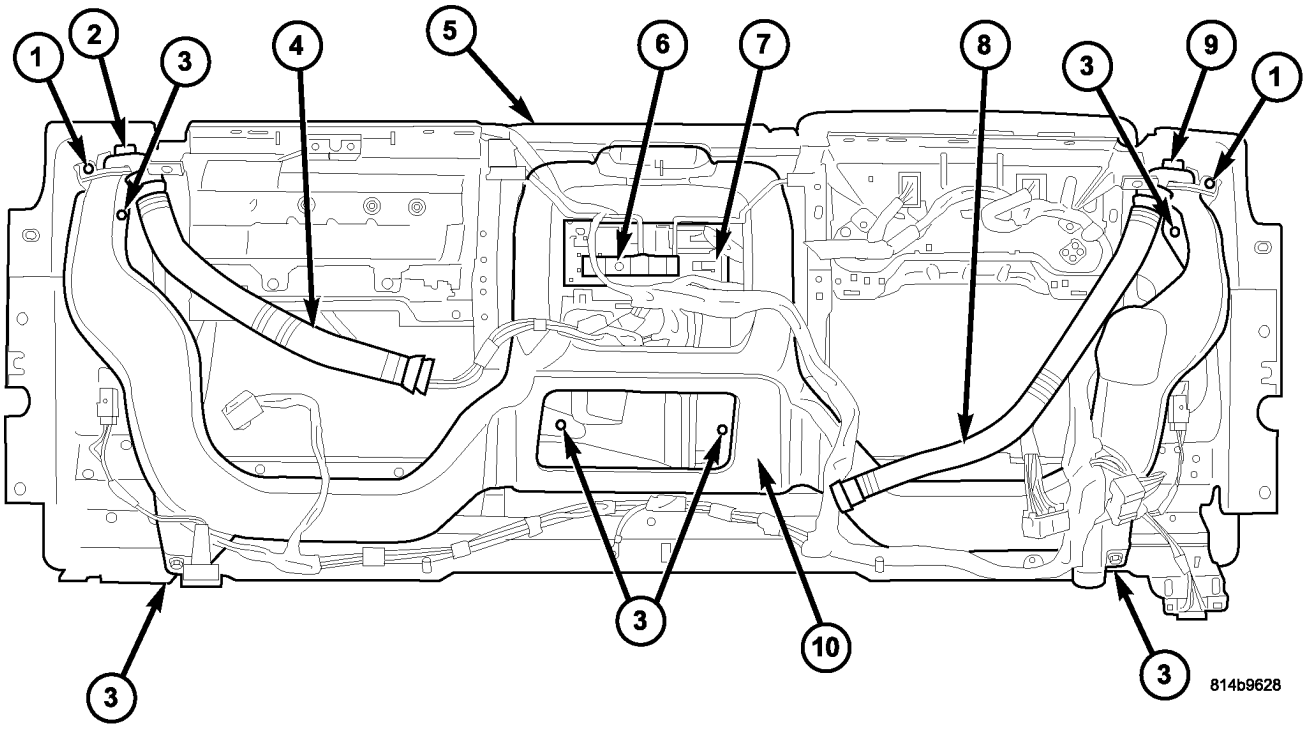

Fig. 39 Instrument Panel Duct - LHD shown, RHD typical

1 - SCREW (2)
2 - RH DEMISTER OUTLET
3 - SCREW (10)
4 - RH DEMISTER DUCT
5 - INSTRUMENT PANEL
6 - RADIO REAR SUPPORT BRACKET
7 - RADIO
8 - LH DEMISTER DUCT
9 - LH DEMISTER OUTLET
10 - INSTRUMENT PANEL DUCT

INSTALLATION

(1) Position the instrument panel duct into the instrument panel.

(2) Install the ten screws that secure the instrument panel duct to the instrument panel. Tighten the screws to 2 N·m (17 in. lbs.).

(3) Engage the instrument panel wire harness retainers to the instrument panel duct and connect the wire harness to the left and right courtesy lamps.

(4) Install the demister outlets and the demister ducts (Refer to 24 - HEATING & AIR CONDITIONING/DISTRIBUTION/INSTRUMENT PANEL DEMISTER DUCTS - INSTALLATION.

(5) Install the accessory switch bezel, A/C-heater control and the radio and the radio rear support bracket into the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/ACCESSORY SWITCH BEZEL - INSTALLATION), (Refer to 24 - HEATING & AIR CONDITIONING/CONTROLS/A/C HEATER CONTROL - INSTALLATION) and (Refer to 8 - ELECTRICAL/AUDIO/RADIO - INSTALLATION).

(6) Install the center bezel onto the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/INSTRUMENT PANEL CENTER BEZEL - INSTALLATION).

(7) Install the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/INSTRUMENT PANEL ASSEMBLY - INSTALLATION).

(8) Reconnect the negative battery cable.