FUSES (FB)

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	20A	L177 20WT/OR	FUSED B(+)
1	20A	L177 18WT/OR	FUSED B(+)
2	20A	A103 18GY/RD	FUSED B(+)
3	20A	X13 16BK/RD (SUBWOOFER)	FUSED B(+)
4	10A	Z902 20BK	GROUND
5	10A	F100 18PK/VT	FUSED IGNITION SWITCH OUTPUT (RUN)
6	20A	F302 18GY/PK (HARDTOP)	FUSED IGNITION SWITCH OUTPUT (RUN)
7	10A	F102 20PK/DB	FUSED IGNITION SWITCH OUTPUT (RUN)
8	10A	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
9	10A	F201 18PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
10	10A	F505 20PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
11	10A	F960 20PK/LG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
12	10A	F1 20PK/WT	FUSED IGNITION SWITCH OUTPUT (RUN-START)
13	10A	L5 20WT/LB	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
14	10A	X112 16DG/GY	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
15	10A	C15 12BK/WT	REAR WINDOW DEFOGGER RELAY OUTPUT
15	10A	C515 20LB/OR (HARDTOP)	FUSED REAR WINDOW DEFOGGER RELAY OUTPUT
16	10A	L45 18WT/OR (EXPORT)	DIMMER SWITCH LOW BEAM OUTPUT
16	10A	L45 18WT/OR (EXPORT)	DIMMER SWITCH LOW BEAM OUTPUT
17	25A	F993 12PK/YL	IGNITION SWITCH OUTPUT (RUN-ACC)
17	25A	F300 16OR/PK	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
18	15A	A207 18RD/LG	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
19	-	-	-
20	-	-	-

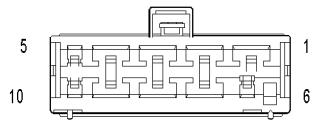

IGNITION SWITCH

IGNITION SWITCH - 10 WAY

CAV	CIRCUIT	FUNCTION
1	A1 16RD	FUSED B(+)
2	F951 16PK/LG	IGNITION SWITCH OUTPUT (RUN-START)
3	F993 12PK/YL	IGNITION SWITCH OUTPUT (RUN-ACC)
4	A991 12 RD	FUSED B(+)
5	G15 20VT/TN	KEY-IN IGNITION SWITCH SENSE
6	F26 16PK/OR	IGNITION SWITCH OUTPUT (START)
7	F982 16PK/YL	IGNITION SWITCH OUTPUT (RUN-ACC)
8	F921 14PK/YL	IGNITION SWITCH OUTPUT (RUN)
9	A8 14RD	FUSED B(+)
10	Z902 16BK	GROUND