PROPELLER SHAFT (Continued)

NOTE: This measurement will give you the pinion shaft or Input Yoke Angle (B).

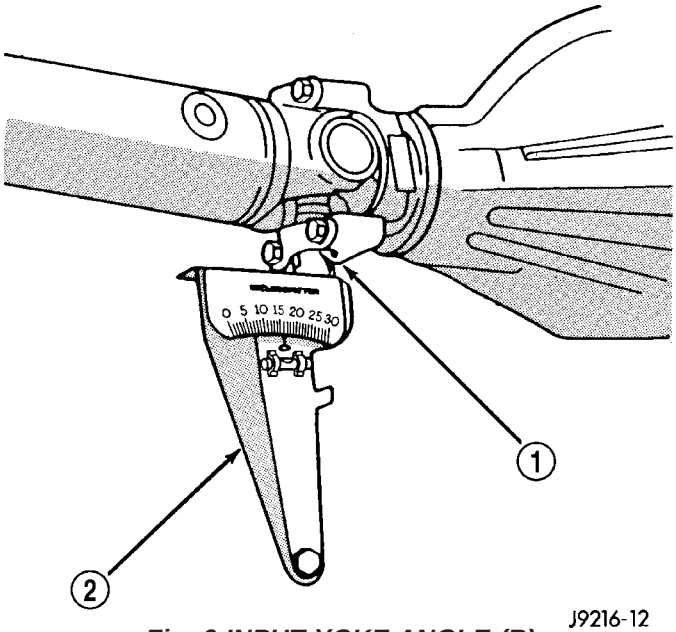

Fig. 6 INPUT YOKE ANGLE (B)

1 - PINION YOKE BEARING CAP
2 - INCLINOMETER

(9) Subtract smaller figure from larger (C minus B) to obtain axle Input Operating Angle.

Refer to rules given below and the example in (Fig. 7) for additional information.

- Good cancellation of U-joint operating angles (within 1°).
- Operating angles less than 3°.
- At least 1/2 of one degree continuous operating (propeller shaft) angle.

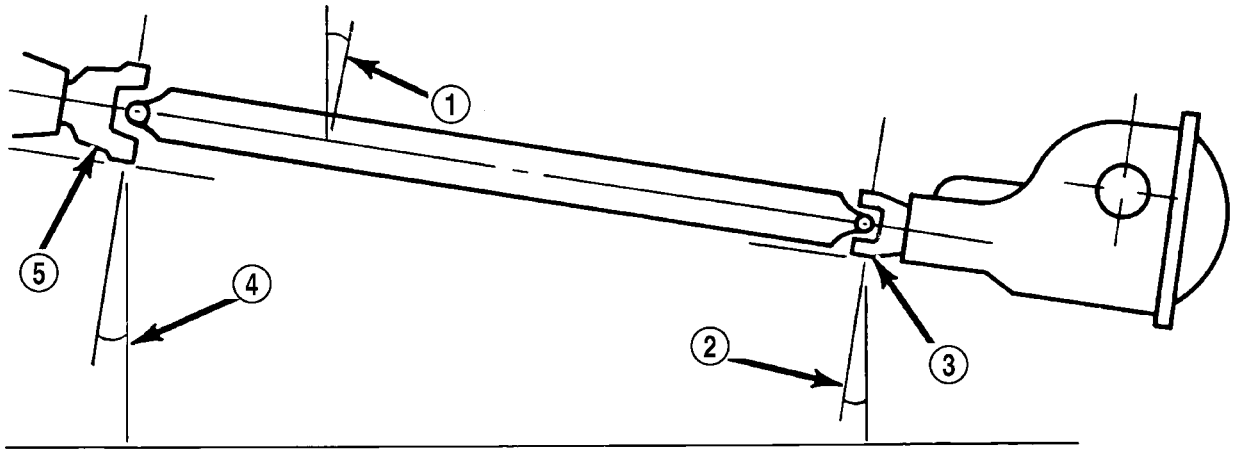

(A) Output Yoke = 3.0°	or 4.9°	(B) Axle Input Yoke = 3.2°	or 4.9°
(C) Prop. Shaft = 4.9°	-3.0°	(C) Prop. Shaft = 4.9°	-3.2°
Transmission Output Operating Angle	1.9°	Axle Input Operating Angle	1.7°

Trans. Output Operating Angle	1.9°
Axle Input Operating Angle	-1.7°
Amount of U-Joint Cancellation	0.2°

J9316-3

Fig. 7 UNIVERSAL JOINT ANGLE EXAMPLE

1 - 4.9° Angle (C)
2 - 3.2° Angle (B)
3 - Input Yoke
4 - 3.0° Angle (A)
5 - Output Yoke