FRONT AXLE - 181FBI (Continued)

(3) Install upper and lower suspension arms in the axle brackets and loosely install bolts and nuts (Fig. 4).

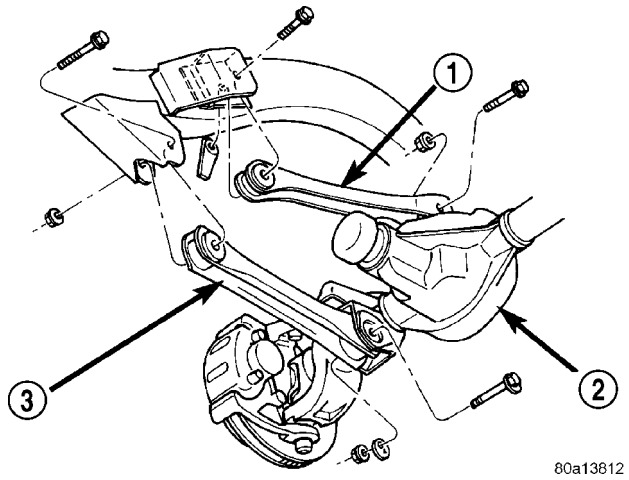

Fig. 4 UPPER & LOWER SUSPENSION ARMS

1 - UPPER SUSPENSION ARM
2 - FRONT AXLE
3 - LOWER SUSPENSION ARM

(4) Connect the vent hose to the axle shaft tube.

(5) Install track bar to the axle bracket and loosely install bolt (Fig. 5).

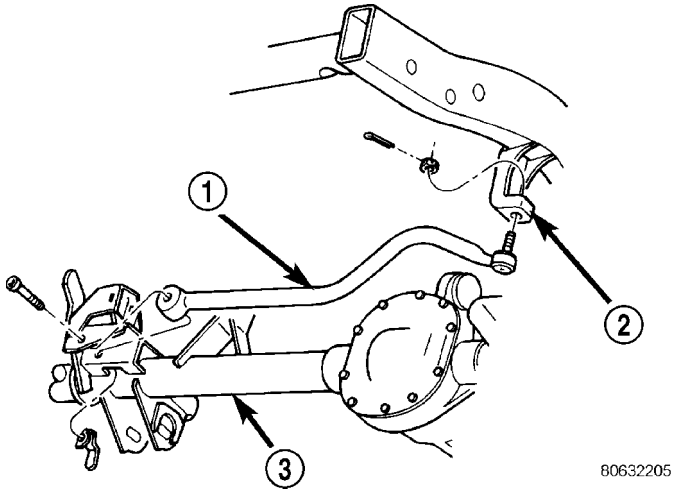

Fig. 5 TRACK BAR

1 - TRACK BAR
2 - FRAME BRACKET
3 - FRONT AXLE

(6) Install shock absorbers and tighten the bolts (Fig. 6) to torque specification.

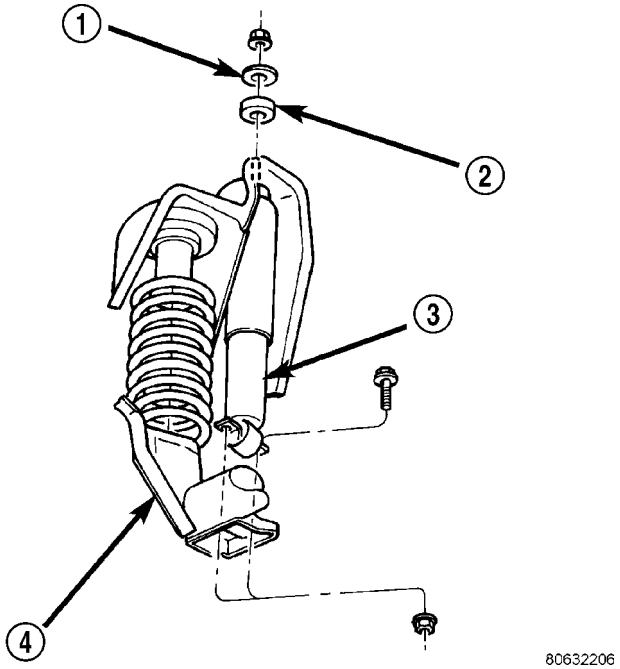

Fig. 6 COIL SPRING & SHOCK ABSORBER

1 - RETAINER
2 - GROMMET
3 - SHOCK
4 - FRONT AXLE

(7) Install stabilizer bar links to the axle brackets and tighten nuts (Fig. 7) to torque specification.

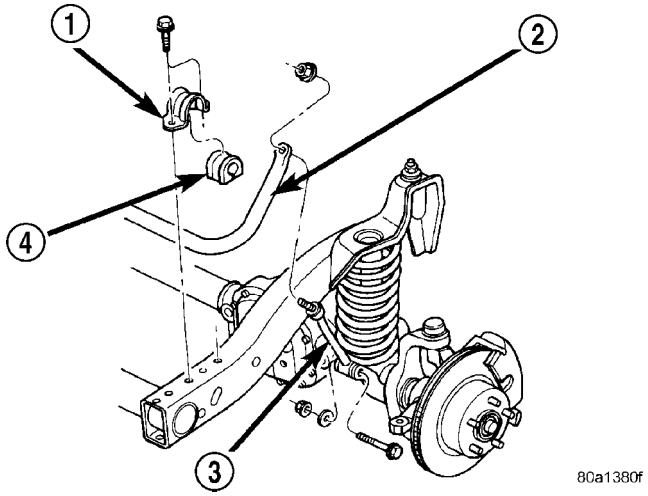

Fig. 7 STABILIZER BAR

1 - RETAINER
2 - STABILIZER BAR
3 - LINK
4 - BUSHING