FRONT AXLE - 216FBI (Continued)

(3) Install upper and lower suspension arms in the axle brackets and loosely install bolts and nuts (Fig. 4).

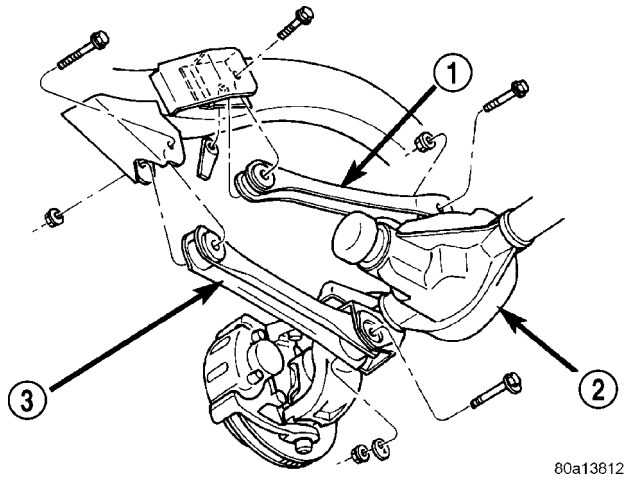

Fig. 4 UPPER AND LOWER SUSPENSION ARMS

1 - UPPER SUSPENSION ARM
2 - FRONT AXLE
3 - LOWER SUSPENSION ARM

(4) Connect the vent hose to the axle shaft tube.

(5) Install track bar to the axle bracket and loosely install bolt (Fig. 5).

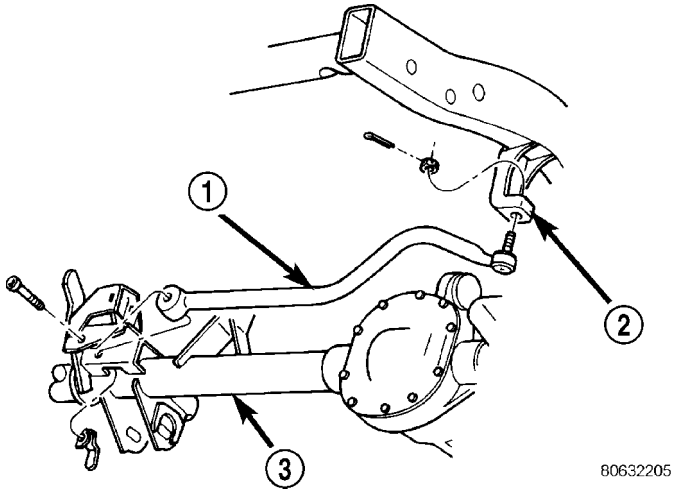

Fig. 5 TRACK BAR

1 - TRACK BAR
2 - FRAME BRACKET
3 - FRONT AXLE

(6) Install shock absorbers and tighten the bolts (Fig. 6) to torque specification.

(7) Install stabilizer bar links to the axle brackets and tighten nuts (Fig. 7) to torque specification.

(8) Install drag link and tie rod and tighten nut to torque specification

(9) Install steering damper to the axle bracket and tighten nut to torque specification.

(10) Install brake components.

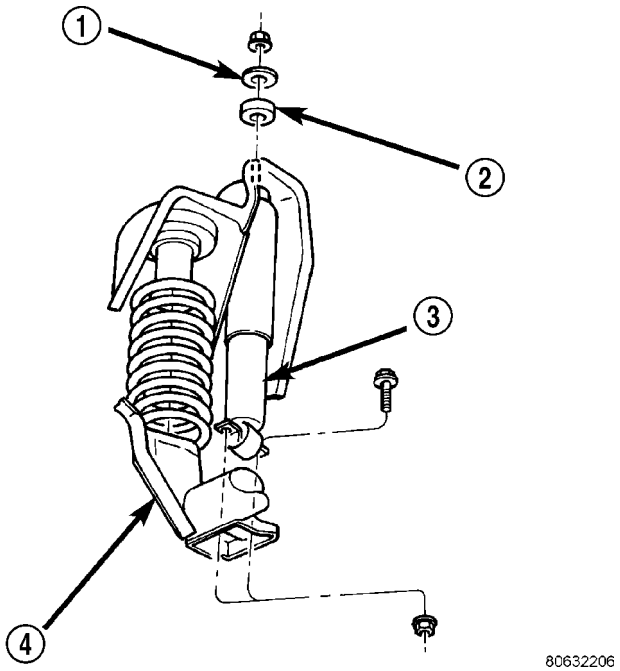

Fig. 6 COIL SPRING AND SHOCK ABSORBER

1 - RETAINER
2 - GROMMET
3 - SHOCK
4 - FRONT AXLE

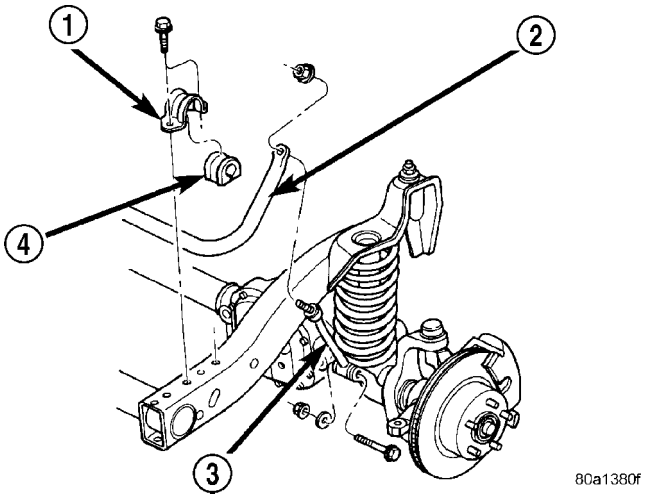

Fig. 7 STABILIZER BAR

1 - RETAINER
2 - STABILIZER BAR
3 - LINK
4 - BUSHING

(11) Install propeller shaft.

(12) Remove lift from the axle and lower vehicle.

(13) Tighten upper and lower control arm nuts to torque specification.

(14) Tighten track bar bolt at the axle bracket to torque specification.

(15) Check the front wheel alignment.