DISC BRAKE CALIPERS (Continued)

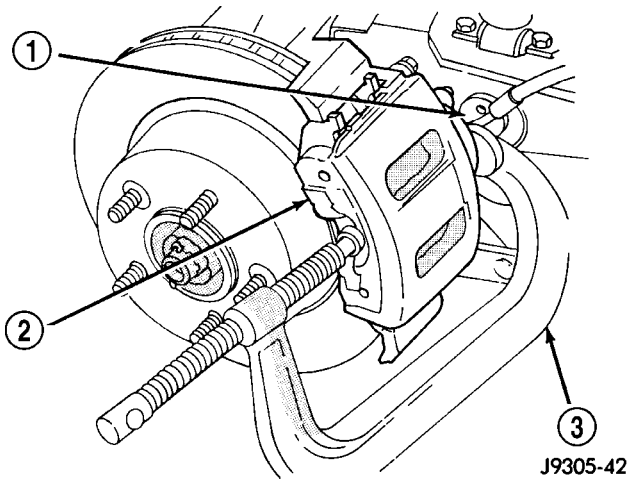



***Fig. 7 Bottoming Caliper Piston With C-Clamp***

1 - CALIPER BOSS
2 - OUTBOARD BRAKESHOE
3 - C-CLAMP

(5) Remove brake hose mounting bolt and discard washers (Fig. 8).

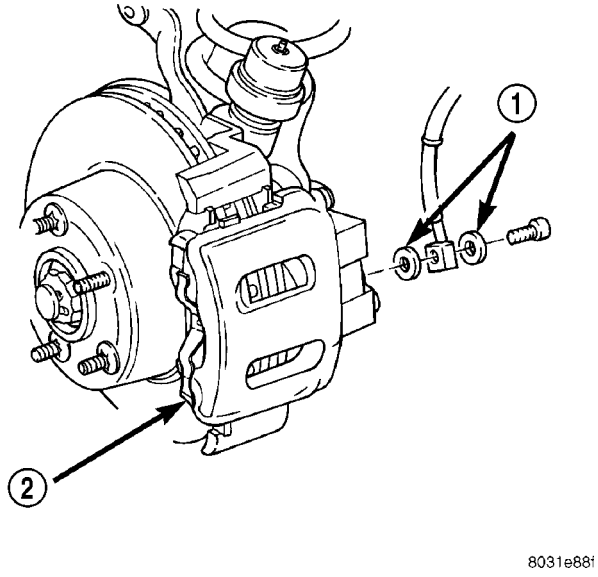



***Fig. 8 Brake Hose And Bolt***

1 - FITTING WASHERS
2 - CALIPERS

(6) Remove caliper mounting bolts (Fig. 9).

(7) Tilt top of caliper outward with pry tool if necessary (Fig. 10) and remove caliper.

(8) Remove caliper from vehicle.

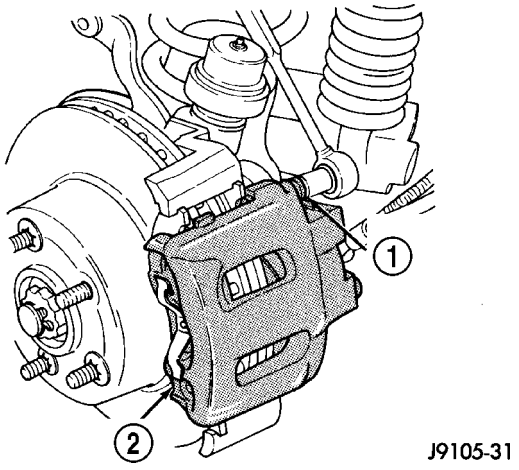



***Fig. 9 Caliper Mounting Bolts***

1 - CALIPER MOUNTING BOLT (2)
2 - CALIPER

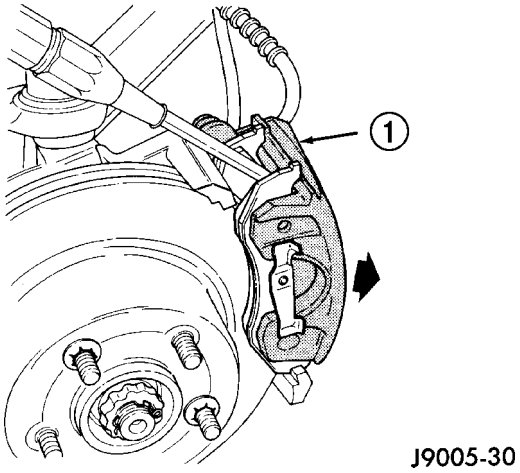



***Fig. 10 Caliper Removal***

1 - TILT CALIPER OUTBOARD TO REMOVE

## REMOVAL - REAR

(1) Install prop rod on the brake pedal to keep pressure on the brake system.

(2) Raise and support vehicle.

(3) Remove the wheel and tire assembly.

(4) Remove the brake hose banjo bolt if replacing caliper.

(5) Remove the caliper mounting slide pin bolts (Fig. 11).

(6) Remove the caliper from vehicle.