DISC BRAKE CALIPERS (Continued)

(4) Install brake hose to caliper with **new seal washers** and tighten fitting bolt to 31 N·m (23 ft. lbs.).

CAUTION: Verify brake hose is not twisted or kinked before tightening fitting bolt.

(5) Bleed base brake system. (Refer to 5 - BRAKES - STANDARD PROCEDURE).
(6) Install wheel and tire assemblies. (Refer to 22 - TIRES/WHEELS/WHEELS - STANDARD PROCEDURE).
(7) Remove supports and lower vehicle.
(8) Verify firm pedal before moving vehicle.

INSTALLATION - REAR

(1) Install the brake pads if removed.
(2) Lubricate ant-rattle clips for the disc brake pads (Fig. 26).

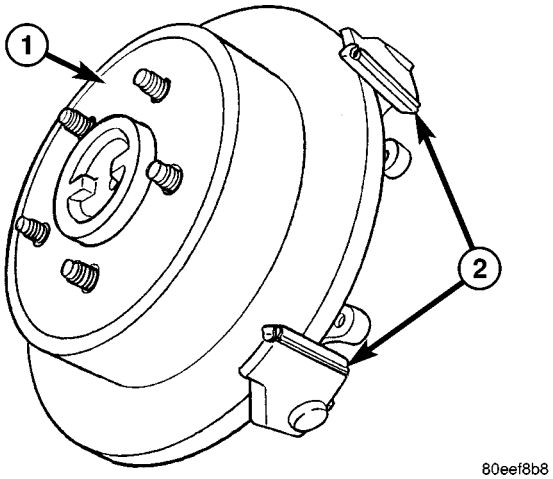

Fig. 26 ANTI-RATTLE CLIPS

1 - ROTOR
2 - ANTI-RATTLE CLIPS

(3) Install caliper to the caliper adapter.
(4) Coat the caliper mounting slide pin bolts with silicone grease. Then install and tighten the bolts to 15 N·m (11 ft. lbs.).
(5) Install the brake hose banjo bolt if removed (Fig. 27).
(6) Install the brake hose to the caliper with **new seal washers** and tighten fitting bolt to 31 N·m (23 ft. lbs.).

CAUTION: Verify brake hose is not twisted or kinked before tightening fitting bolt.

(7) Remove the prop rod from the vehicle.
(8) Bleed the base brake system, (Refer to 5 - BRAKES - STANDARD PROCEDURE) OR (Refer to 5 - BRAKES - STANDARD PROCEDURE).

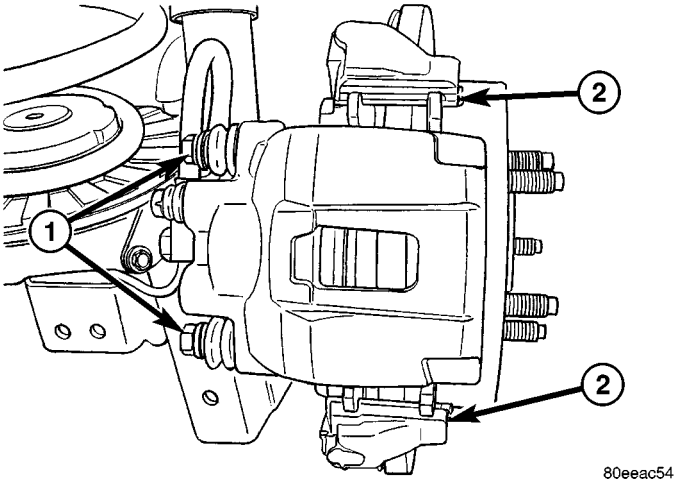

Fig. 27 CALIPER INSTALLED

1 - CALIPER MOUNTING BOLTS
2 - CALIPER SLIDES

(9) Install the wheel and tire assemblies (Refer to 22 - TIRES/WHEELS/WHEELS - STANDARD PROCEDURE).
(10) Remove the supports and lower the vehicle.
(11) Verify a firm pedal before moving the vehicle.

BRAKE PADS/SHOES

REMOVAL

REMOVAL - FRONT PADS

(1) Raise and support vehicle.
(2) Remove wheel and tire assembly.
(3) Remove caliper. (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - REMOVAL).
(4) Pressing one end of outboard shoe inward to disengage shoe lug. Then rotate shoe upward until retainer spring clears caliper. Press opposite end of shoe inward to disengage shoe lug and rotate shoe up and out of caliper (Fig. 28).
(5) Grasp ends of inboard shoe and tilt shoe outward to release springs from caliper piston (Fig. 29) and remove shoe from caliper.

NOTE: If original brake shoes will be used, keep them in sets left and right. They are not interchangeable.

(6) Secure caliper to nearby suspension part with wire. **Do not allow brake hose to support caliper weight.**
(7) Wipe caliper off with shop rags or towels.