BRAKE PADS/SHOES (Continued)

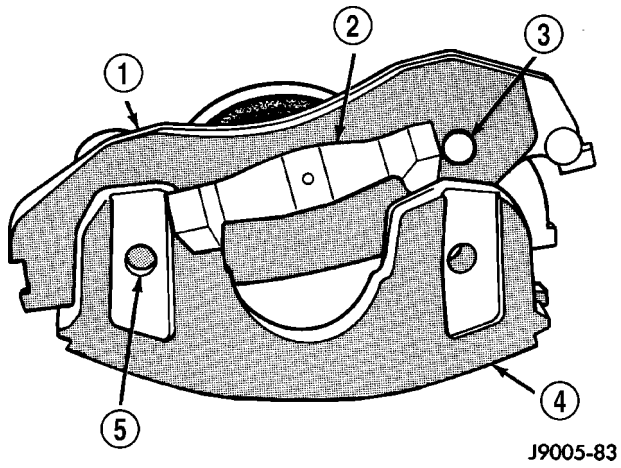


Fig. 28 Outboard Brake Shoe Removal

1 - OUTBOARD BRAKESHOE
2 - SHOE SPRING
3 - LOCATING LUG
4 - CALIPER
5 - LOCATING LUG

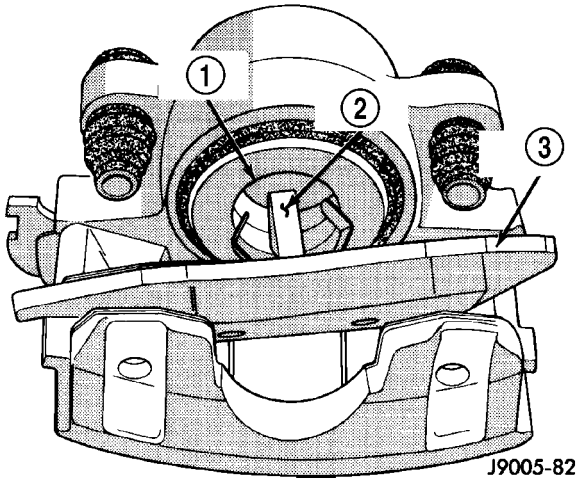


Fig. 29 Inboard Brake

1 - CALIPER PISTON
2 - SHOE SPRINGS
3 - INBOARD BRAKESHOE

CAUTION: Do not use compressed air, this can unseat dust boot and force dirt into piston bore.

REMOVAL - DRUM BRAKE SHOES

(1) Raise vehicle and remove rear wheels.
(2) Remove and discard spring nuts securing drums to wheel studs.
(3) Remove brake drums.

NOTE: If drums are difficult to remove, back off adjuster through support plate access hole with brake tool and screwdriver.

(4) Remove U-clip and washer securing adjuster cable to parking brake lever (Fig. 30).
(5) Remove primary and secondary return springs from anchor pin with brake spring pliers.
(6) Remove hold-down springs, retainers and pins with standard retaining spring tool.
(7) Install spring clamps on wheel cylinders to hold pistons in place.
(8) Remove adjuster lever, adjuster screw and spring.
(9) Remove adjuster cable and cable guide.
(10) Remove brake shoes and parking brake strut.
(11) Disconnect cable from parking brake lever and remove lever.

REMOVAL - REAR DISC BRAKE PADS

(1) Raise and support vehicle.
(2) Remove the wheel and tire assemblies.
(3) Compress the caliper.
(4) Remove the caliper, (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - REMOVAL).
(5) Remove the caliper by tilting the top up and off the caliper adapter.

NOTE: Do not allow brake hose to support caliper assembly.

(6) Support and hang the caliper.
(7) Remove the inboard brake pad from the caliper adapter.
(8) Remove the outboard brake pad from the caliper adapter.

INSTALLATION

INSTALLATION - FRONT PADS

(1) Install inboard shoe in caliper and verify shoe retaining is fully seated into the piston.
(2) Starting one end of outboard shoe in caliper and rotating shoe downward into place. Verify shoe locating lugs and shoe spring are seated.
(3) Install caliper. (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - INSTALLATION).
(4) Install wheel and tire assembly. (Refer to 22 - TIRES/WHEELS/WHEELS - STANDARD PROCEDURE).
(5) Remove support and lower vehicle.
(6) Pump brake pedal until caliper pistons and brake shoes are seated.
(7) Top off brake fluid level if necessary.

INSTALLATION - DRUM BRAKE SHOES

(1) Clean support plate with brake cleaner.