BRAKE PADS/SHOES (Continued)

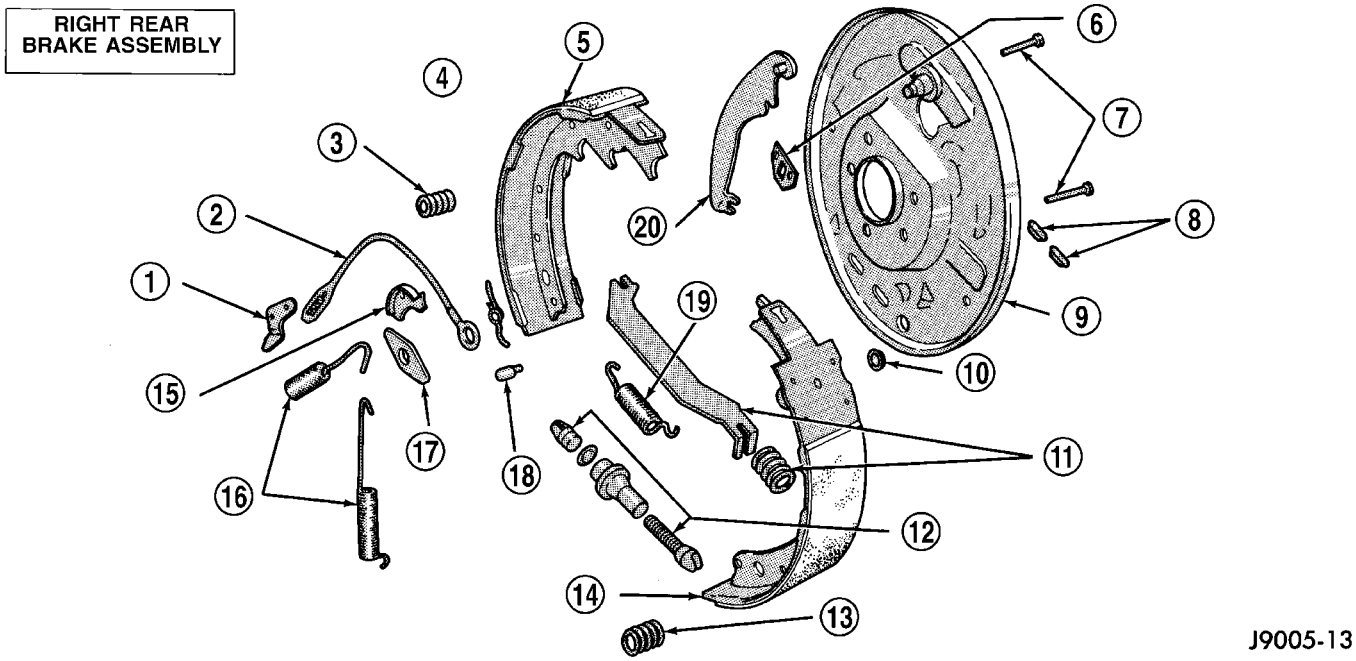


Fig. 30 Drum Brake Components—Typical

1 - ADJUSTER LEVER
2 - ADJUSTER CABLE
3 - HOLDDOWN SPRING AND RETAINERS
4 - ADJUSTER LEVER SPRING
5 - TRAILING SHOE
6 - CYLINDER-TO-SUPPORT SEAL
7 - HOLDDOWN PINS
8 - ACCESS PLUGS
9 - SUPPORT PLATE
10 - CABLE HOLE PLUG
11 - PARK BRAKE STRUT AND SPRING
12 - ADJUSTER SCREW ASSEMBLY
13 - HOLDDOWN SPRING AND RETAINERS
14 - LEADING SHOE
15 - CABLE GUIDE
16 - SHOE RETURN SPRINGS
17 - SHOE GUIDE PLATE
18 - PIN
19 - SHOE SPRING
20 - PARK BRAKE LEVER

(2) If new drums are being installed, remove protective coating with carburetor cleaner or brake cleaner.

(3) Apply multi-purpose grease to brake shoe contact surfaces of support plate (Fig. 31).

(4) Lubricate adjuster screw threads and pivot with spray lube.

(5) Attach parking brake lever to secondary brake shoe. Use new washer and U-clip to secure lever.

(6) Remove wheel cylinder clamps.

(7) Attach parking brake cable to lever.

(8) Install brake shoes on support plate. Secure shoes with new hold-down springs, pins and retainers.

(9) Install parking brake strut and spring.

(10) Install guide plate and adjuster cable on anchor pin.

(11) Install primary and secondary return springs.

(12) Install adjuster cable guide on secondary shoe.

(13) Lubricate and assemble adjuster screw.

(14) Install adjuster screw, spring and lever and connect to adjuster cable.

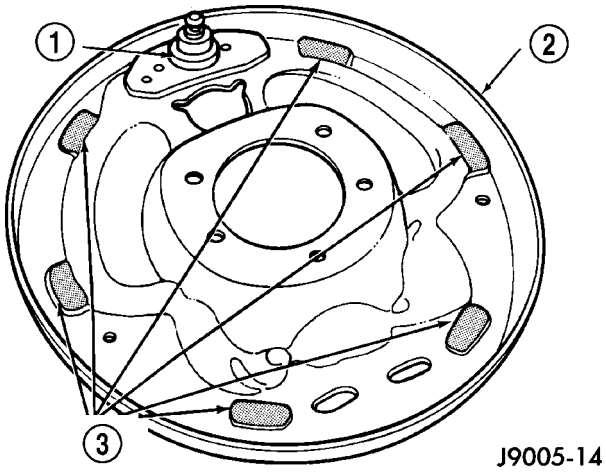


Fig. 31 Shoe Contact Surfaces

1 - ANCHOR PIN
2 - SUPPORT PLATE
3 - SHOE CONTACT SURFACES

(15) Adjust shoes to drum. (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DRUM - ADJUSTMENTS).