FLUID (Continued)

only Mopar brake fluid or an equivalent from a tightly sealed container.

CAUTION: Never use reclaimed brake fluid or fluid from an container which has been left open. An open container of brake fluid will absorb moisture from the air and contaminate the fluid.

CAUTION: Never use any type of a petroleum-based fluid in the brake hydraulic system. Use of such type fluids will result in seal damage of the vehicle brake hydraulic system causing a failure of the vehicle brake system. Petroleum based fluids would be items such as engine oil, transmission fluid, power steering fluid, etc.

FLUID RESERVOIR

REMOVAL

(1) Remove reservoir cap and empty fluid into drain container.

(2) Remove pins that retain reservoir to master cylinder. Use hammer and pin punch to remove pins (Fig. 37).

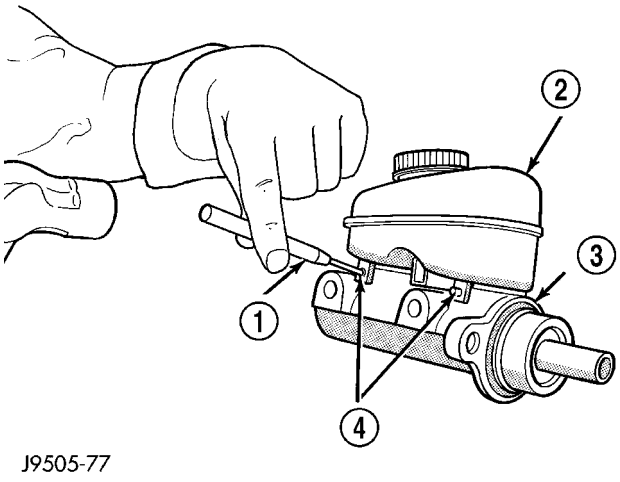

Fig. 37 Reservoir Retaining Pins

1 - PIN PUNCH
2 - RESERVOIR
3 - BODY
4 - ROLL PINS

(3) Clamp cylinder body in vise with brass protective jaws.

(4) Loosen reservoir from grommets with pry tool (Fig. 38).

(5) Remove reservoir by rocking it to one side and pulling free of grommets (Fig. 39).

(6) Remove old grommets from cylinder body (Fig. 40).

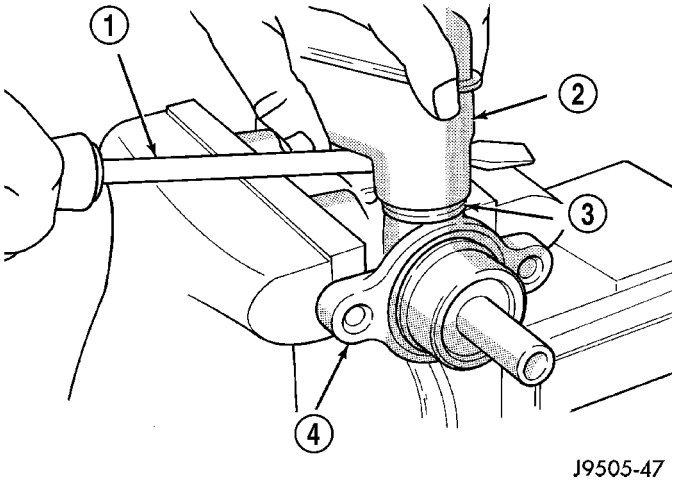

Fig. 38 Loosening Reservoir

1 - PRY TOOL
2 - RESERVOIR
3 - GROMMET
4 - MASTER CYLINDER BODY

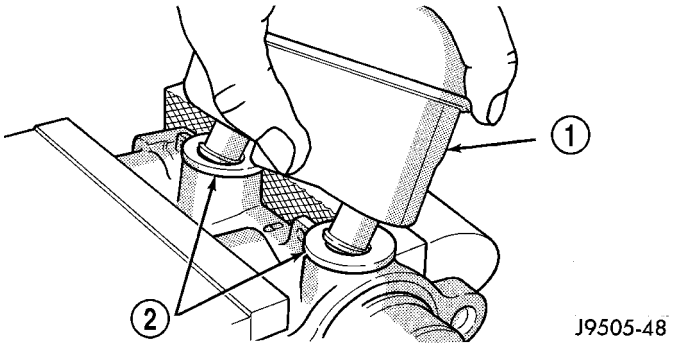

Fig. 39 Reservoir Removal

1 - RESERVOIR
2 - GROMMETS

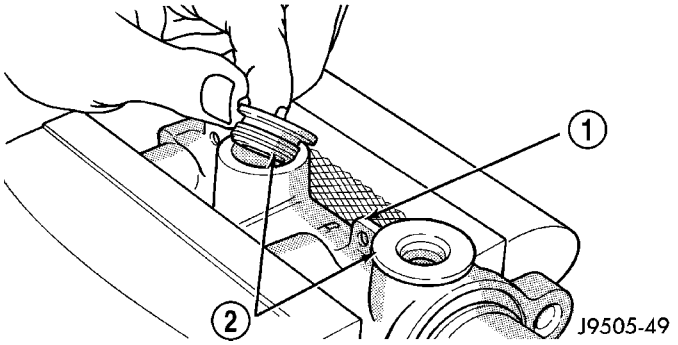

Fig. 40 Grommet Removal

1 - MASTER CYLINDER BODY
2 - GROMMETS