MASTER CYLINDER (Continued)

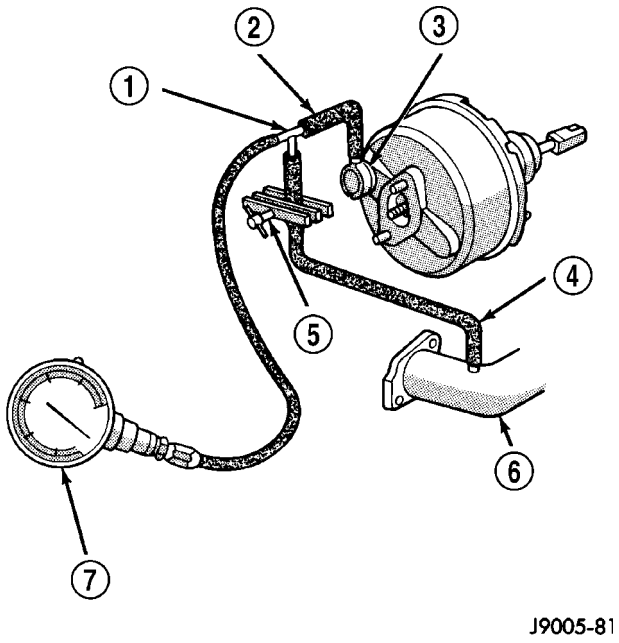

Fig. 42 Typical Booster Vacuum Test Connections

1 - TEE FITTING
2 - SHORT CONNECTING HOSE
3 - CHECK VALVE
4 - CHECK VALVE HOSE
5 - CLAMP TOOL
6 - INTAKE MANIFOLD
7 - VACUUM GAUGE

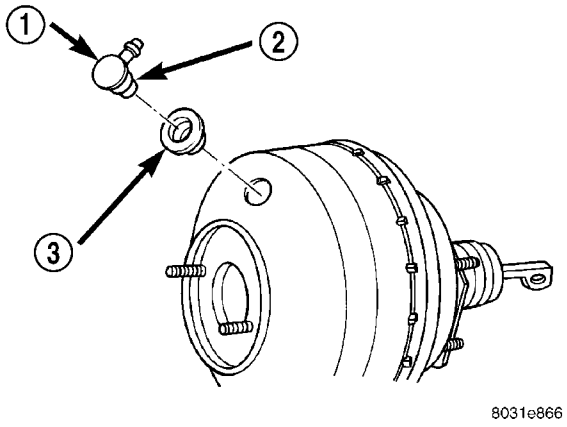

Fig. 43 Vacuum Check Valve And Seal

1 - BOOSTER CHECK VALVE
2 - APPLY TEST VACUUM HERE
3 - VALVE SEAL

STANDARD PROCEDURE - MASTER CYLINDER BLEEDING

A new master cylinder should be bled before installation on the vehicle. Required bleeding tools include bleed tubes and a wood dowel to stroke the pistons. Bleed tubes can be fabricated from brake line.

(1) Mount master cylinder in vise.

(2) Attach bleed tubes to cylinder outlet ports. Then position each tube end into the reservoir (Fig. 44).

(3) Fill reservoir with fresh brake fluid.

(4) Press cylinder pistons inward with wood dowel. Then release pistons and allow them to return under spring pressure. Continue bleeding operations until air bubbles are no longer visible in fluid.

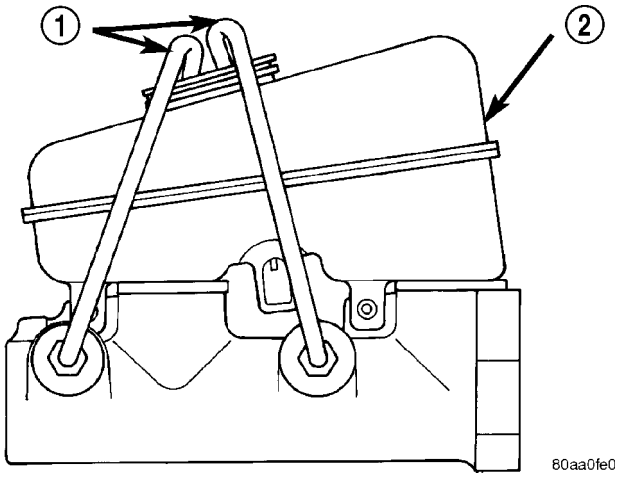

Fig. 44 Master Cylinder Bleeding

1 - BLEEDING TUBES
2 - RESERVOIR

REMOVAL

(1) Remove evaporative canister.

(2) Disconnect brake lines to master cylinder and combination valve (Fig. 45).

(3) Remove combination valve bracket mounting nuts and remove valve.

(4) Remove master cylinder mounting nuts and remove master cylinder.

(5) Remove cylinder cover and drain fluid.

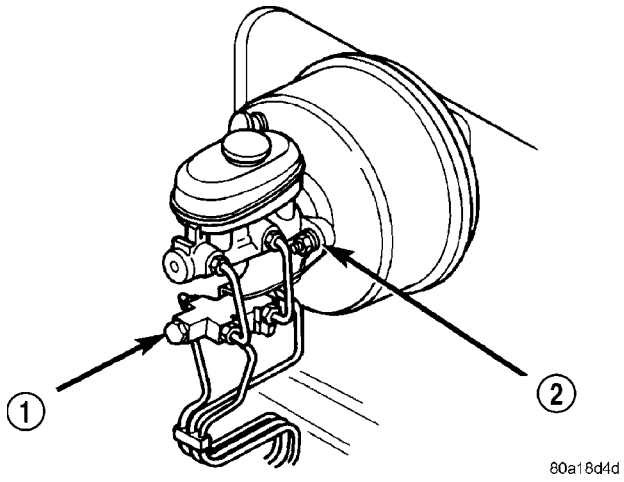

Fig. 45 Master

1 - COMBINATION VALVE
2 - MASTER CYLINDER