SHOES (Continued)

CAUTION: Before moving vehicle, pump brake pedal several times to ensure the vehicle has a firm enough pedal to stop the vehicle.

NOTE: After parking brake lining replacement, it is recommended that the parking brake system be conditioned prior to use. This is done by making one stop from 25 mph on dry pavement or concrete using light to moderate force on the parking brake hand lever.

(17) Road test the vehicle to ensure proper function of the vehicle's brake system.

ADJUSTMENT - WITH ADJUSTING TOOL

Adjustment can be made with a standard brake gauge or with adjusting tool. Adjustment is performed with the complete brake assembly installed on the backing plate.

(1) Be sure parking brake lever is fully released.

(2) Raise vehicle so rear wheels can be rotated freely.

(3) Remove plug from each access hole in brake support plates.

(4) Loosen parking brake cable adjustment nut until there is slack in front cable.

(5) Insert adjusting tool through support plate access hole and engage tool in teeth of adjusting screw star wheel (Fig. 68).

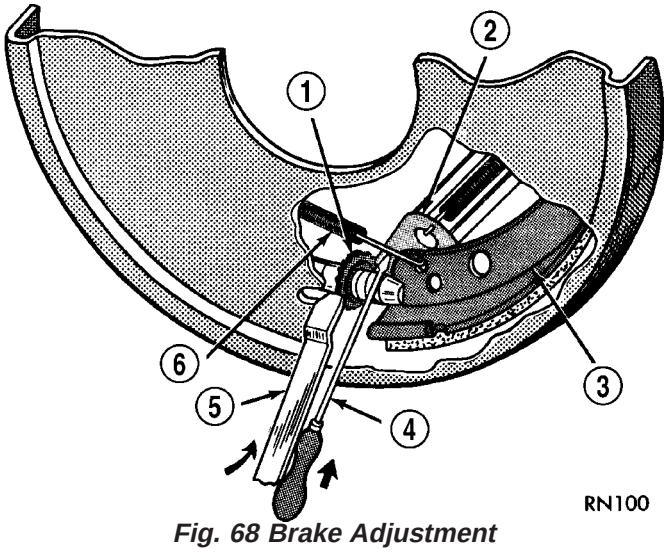

Fig. 68 Brake Adjustment

1 - STAR WHEEL
2 - LEVER
3 - BRAKE SHOE WEB
4 - SCREWDRIVER
5 - ADJUSTING TOOL
6 - ADJUSTER SPRING

(6) Rotate adjuster screw star wheel (move tool handle upward) until slight drag can be felt when wheel is rotated.

(7) Push and hold adjuster lever away from star wheel with thin screwdriver.

(8) Back off adjuster screw star wheel until brake drag is eliminated.

(9) Repeat adjustment at opposite wheel. Be sure adjustment is equal at both wheels.

(10) Install support plate access hole plugs.

(11) Adjust parking brake cable and lower vehicle.

(12) Depress park brake lever and make sure park brakes hold the vehicle staionary.

(13) Release park brake lever.

CABLES

REMOVAL

REMOVAL - DRUM BRAKES

(1) Raise vehicle and loosen equalizer nuts until rear cables are slack.

(2) Disengage cable from equalizer and remove cable.

(3) Remove cable bracket from upper suspension arm (Fig. 69).

(4) Remove rear wheel and brake drum.

(5) Remove secondary brake shoe and disconnect cable from lever on brake shoe.

(6) Compress cable retainer with worm drive hose clamp (Fig. 70) and remove cable from backing plate.

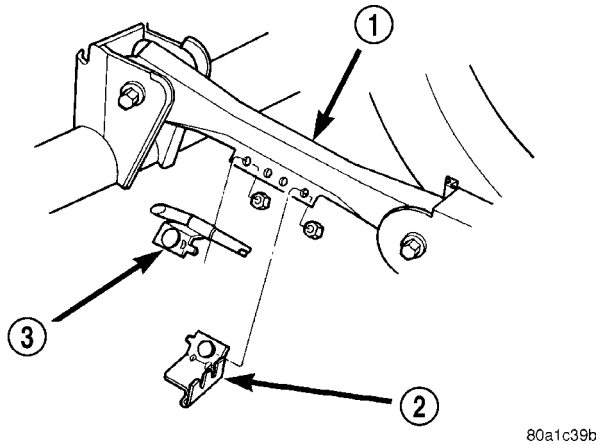

Fig. 69 Parking Brake Cable Bracket

1 - UPPER SUSPENSION ARM
2 - WIRING BRACKET
3 - PARKING BRAKE CABLE BRACKET