HEADLAMP (Continued)

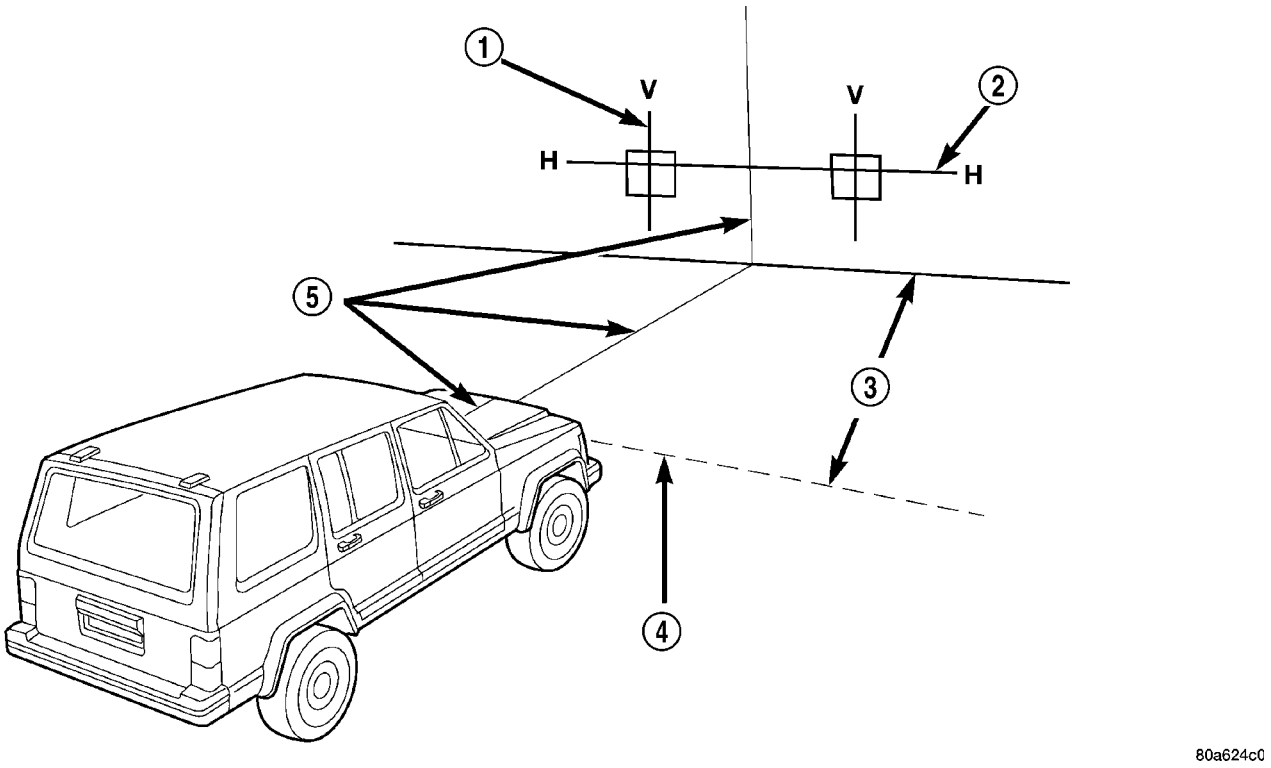

Fig. 20 Headlamp Alignment Screen - Typical

1 - CENTER OF VEHICLE TO CENTER OF HEADLAMP LENS
2 - FLOOR TO CENTER OF HEADLAMP LENS
3 - 7.62 METERS (25 FEET)
4 - FRONT OF HEADLAMP
5 - VEHICLE CENTERLINE

(3) Turn the upper, outboard (up/down) adjustment screw (Fig. 21)until the headlamp beam pattern on screen/wall is similar to the pattern depicted in (Fig. 20)

NOTE: When using a headlamp aiming screen:

- Adjust the headlamps so that the beam horizontal position is at 0.
- Adjust the beam vertical position is 25 mm (1 in) downward from the lamp horizontal centerline.

(4) Rotate the lower, inboard (left/right) adjustment screw (Fig. 21) until the headlamp beam pattern on the aiming screen/wall similar to the pattern in (Fig. 20).

(5) Cover front of the headlamp that has been adjusted and adjust the other headlamp beam as instructed above.

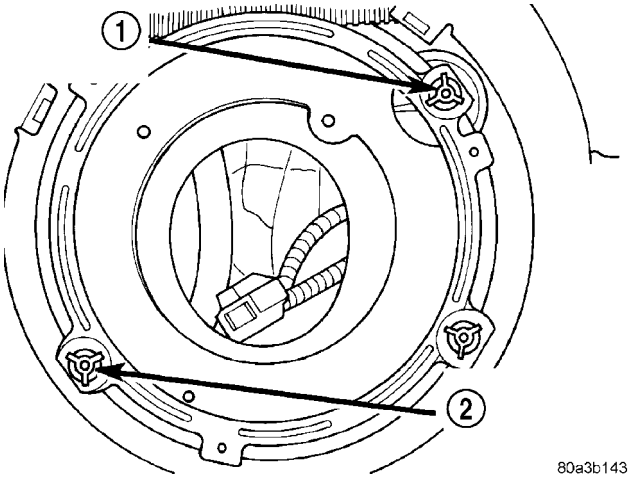

Fig. 21 Headlamp Adjustment Screws

1 - UP/DOWN ADJUSTMENT SCREW
2 - LEFT/RIGHT ADJUSTMENT SCREW