CHILD RESTRAINT ANCHOR

DESCRIPTION

This model is equipped with a Lower Anchors and Tether for CHildren, or LATCH child restraint anchorage system (Fig. 9). The LATCH system provides for the installation of suitable child restraints in certain seating positions without using the standard equipment seat belt provided for that seating position. All vehicles without a rear seat are equipped with a fixed-position child restraint upper tether anchor (Fig. 10) and two child restraint lower anchors (Fig. 11) for the front passenger seating position. Vehicles with an optional rear seat are equipped with fixed-position child restraint upper tether anchors (Fig. 12) and two child restraint lower anchors (Fig. 13) for each rear outboard seating position. All front passenger seat child restraint anchors are deleted on models equipped with the optional rear seat.

The upper tether anchor and both lower anchors for the front passenger seat are integral to the front passenger seat riser bracket. The upper tether anchor is accessed from behind the front seat. The lower anchors for the front passenger seat are formed from round steel bar stock that is formed into a U-shape, then securely welded to the seat riser bracket. They are accessed from the front of the seat, at each side where the seat back meets the seat cushion. The upper and lower front seat child restraint anchors cannot be adjusted or repaired and, if faulty or damaged, they must be replaced as a unit with the seat riser bracket.

The upper tether anchors for the rear seat are stamped steel brackets that are secured by screws to the rear cargo floor panel just forward of the tailgate

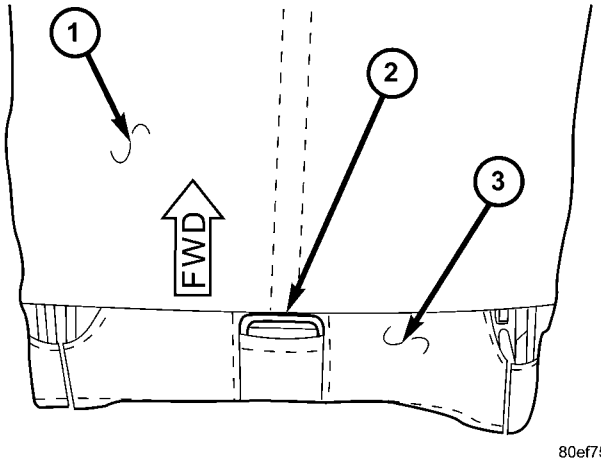

Fig. 10 Front Passenger Seat Upper Anchor

1 - SEAT BACK
2 - UPPER ANCHOR
3 - SEAT CUSHION

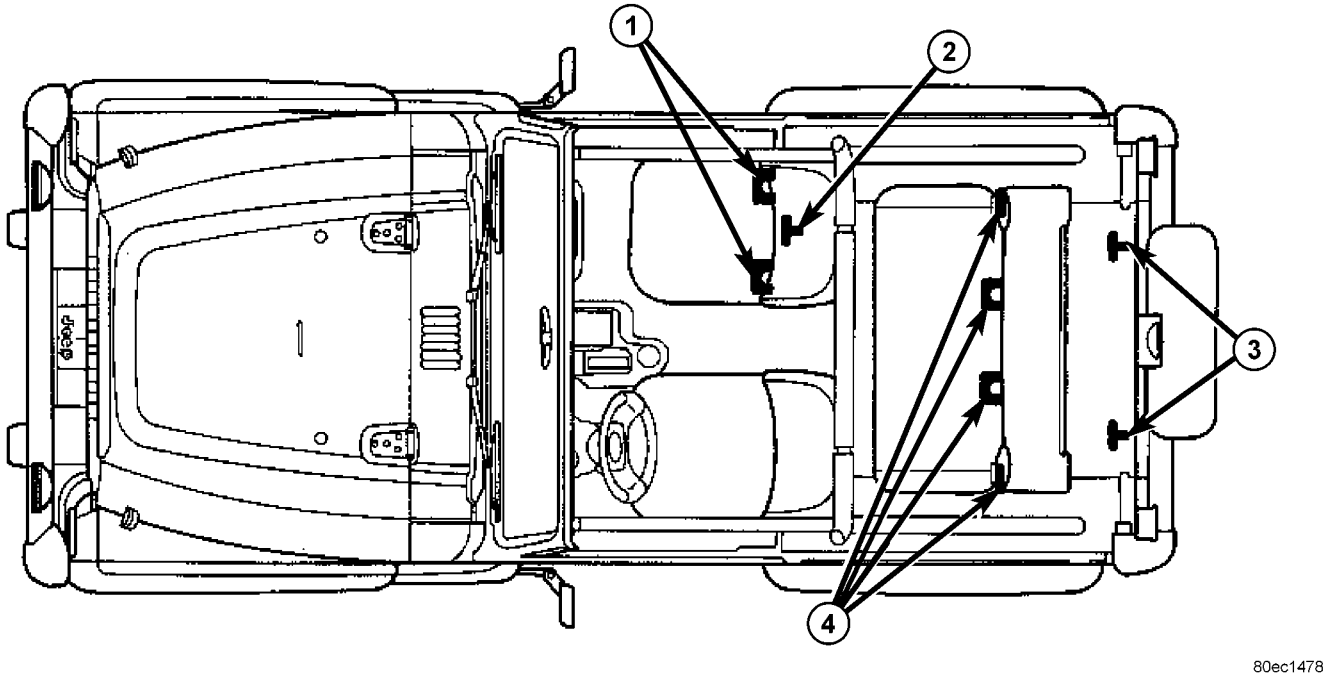

Fig. 9 Child Restraint Anchor Locations

1 - LOWER ANCHOR (MODELS WITHOUT A REAR SEAT ONLY)
2 - TETHER ANCHOR (MODELS WITHOUT A REAR SEAT ONLY)
3 - LOWER ANCHOR (PROVIDED FOR REAR OUTBOARD SEATING POSITIONS ONLY)
4 - TETHER ANCHOR (PROVIDED FOR REAR OUTBOARD SEATING POSITIONS ONLY)