it has comparatively lower spring tension, as evidenced by a lower scale reading.

(4) Inspect the wiper blades and squeegees for any indications of damage, contamination, or rubber deterioration (Fig. 2). If the wiper blades or squeegees are contaminated with any foreign material, clean them and the glass as required. (Refer to 8 - ELECTRICAL/FRONT WIPERS/WASHERS - CLEANING). After cleaning the wiper blade and the glass, if the wiper blade still fails to clear the glass without smearing, streaking, chattering, hazing, or beading, replace the wiper blade. Also, if a wiper blade is damaged or the squeegee rubber is damaged or deteriorated, replace the wiper blade with a new unit. Do not attempt to repair a wiper blade that is damaged.

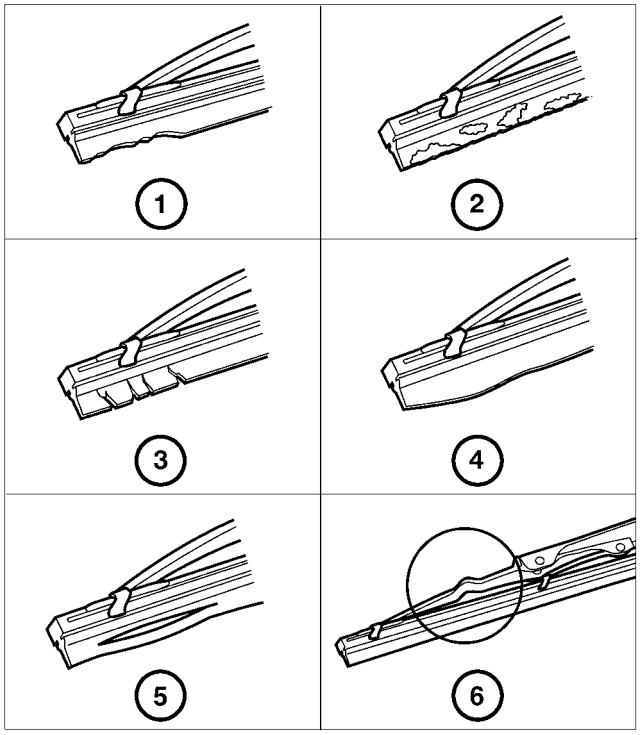

809ac961

Fig. 2 Wiper Blade Inspection

1 - WORN OR UNEVEN EDGES
2 - ROAD FILM OR FOREIGN MATERIAL DEPOSITS
3 - HARD, BRITTLE, OR CRACKED
4 - DEFORMED OR FATIGUED
5 - SPLIT
6 - DAMAGED SUPPORT COMPONENTS

WASHER SYSTEM

The washer system components should be inspected periodically, not just when washer performance problems are experienced. This inspection should include the following points:

(1) Check for ice or other foreign material in the washer reservoir. If contaminated, clean and flush the washer system. (Refer to 8 - ELECTRICAL/FRONT WIPERS/WASHERS - CLEANING).

(2) Inspect the washer plumbing for pinched, leaking, deteriorated, or incorrectly routed hoses and damaged or disconnected hose fittings. Replace damaged or deteriorated hoses and hose fittings. Leaking washer hoses can sometimes be repaired by cutting the hose at the leak and splicing it back together using an in-line connector fitting. Similarly, sections of deteriorated hose can be cut out and replaced by splicing in new sections of hose using in-line connector fittings. Whenever routing a washer hose or a wire harness containing a washer hose, it must be routed away from hot, sharp, or moving parts. Also, sharp bends that might pinch the washer hose must be avoided.

FRONT CHECK VALVE

DESCRIPTION

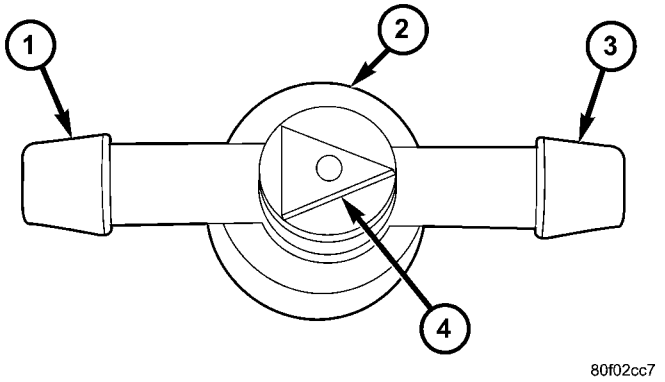

80f02cc7

Fig. 3 Check Valve

1 - INLET NIPPLE
2 - CHECK VALVE
3 - OUTLET NIPPLE
4 - FLOW DIRECTION ARROW

A single front washer system check valve is standard equipment on this model, and is installed in the front washer system plumbing (Fig. 3). The front check valve is located in the engine compartment in the washer supply hose on the underside of the hood panel about 5 centimeters (2 inches) from the barbed nipple of the front washer nozzle. The check valve consists of a molded plastic valve body with a raised arrowhead molded into its center section that indicates the direction of the flow through the valve. A barbed hose nipple is formed on each side of the raised center section of the valve body. Within the check valve body, a small diaphragm is held against the lip of an integral sump well by a small plastic piston and a coiled spring. The front check valve cannot be adjusted or repaired and, if faulty or damaged, it must be replaced.