REAR WIPER/WASHER SWITCH (Continued)

(1) Disconnect and isolate the battery negative cable.

(2) Remove the accessory switch bezel from the instrument panel center bezel from the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/ ACCESSORY SWITCH BEZEL - REMOVAL).

(3) Using a trim stick or another suitable wide flat-bladed tool, gently pry the latch tabs at the top and bottom of the rear wiper and washer switch receptacle on the back of the accessory switch bezel far enough to disengage the snap features on the top and bottom of the switch housing then pull the switch out of the receptacle (Fig. 25).

INSTALLATION

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

(1) Position the rear wiper and washer switch over the proper receptacle on the back of the accessory switch bezel (Fig. 25).

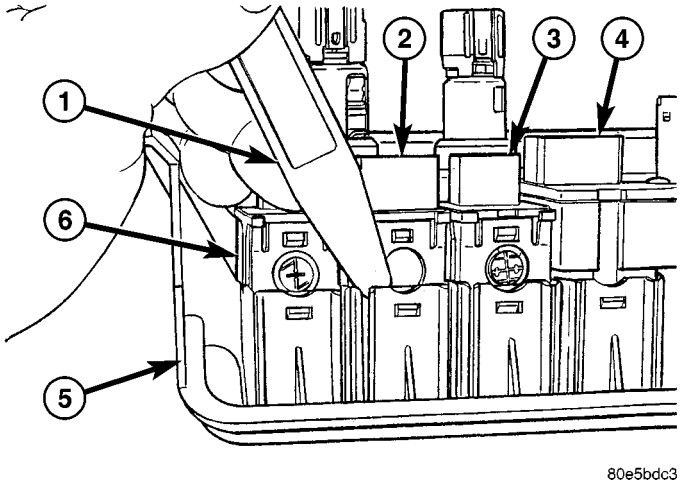

Fig. 25 Rear Wiper/Washer Switch Remove

1 - TRIM STICK
2 - REAR WIPER/WASHER SWITCH
3 - OVERDRIVE-OFF SWITCH
4 - AXLE LOCKER SWITCH
5 - ACCESSORY SWITCH BEZEL
6 - REAR WINDOW DEFOGGER SWITCH

(2) Gently and evenly push the rear wiper and washer switch into the receptacle until the snap features on the top and bottom of the switch housing are fully engaged by the latch tabs at the top and bottom of the receptacle.

(3) Reinstall the accessory switch bezel onto the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/ACCESSORY SWITCH BEZEL - INSTALLATION).

(4) Reconnect the battery negative cable.