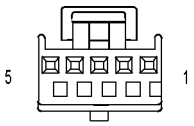

A/C-HEATER CONTROL C2 (EXCEPT HEATER ONLY)

A/C-HEATER CONTROL C2 (EXCEPT HEATER ONLY) - 5 WAY

CAV	CIRCUIT	FUNCTION
1	Z134 20BK/LG (LHD)	GROUND
1	F504 20GY/PK (RHD)	FUSED IGNITION SWITCH OUTPUT (RUN)
2	C132 20DB/YL	BLEND DOOR FEEDBACK SIGNAL
3	F504 20GY/PK (LHD)	FUSED IGNITION SWITCH OUTPUT (RUN)
3	Z134 20BK/LG (RHD)	GROUND
4	E2 20OR/BR	PANEL LAMPS FEED
5	Z1 20BK	GROUND



A/C-HEATER CONTROL C3 (EXCEPT HEATER ONLY)

A/C-HEATER CONTROL C3 (EXCEPT HEATER ONLY) - 3 WAY

CAV	CIRCUIT	FUNCTION
A	C221 20LB/OR	A/C SELECT SIGNAL
B	C805 12DB/WT	BLOWER MOTOR FEED
C	Z1 12BK	GROUND

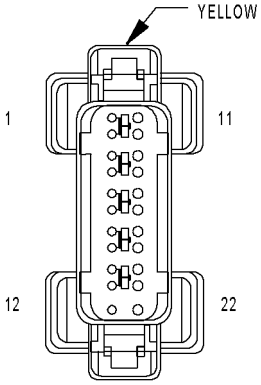

AIRBAG CONTROL MODULE

AIRBAG CONTROL MODULE - YELLOW 22 WAY

CAV	CIRCUIT	FUNCTION
1	R43 18LG/BR	DRIVER SQUIB 1 LINE 1
2	R45 18LG/OR	DRIVER SQUIB 1 LINE 2
3	-	-
4	-	-
5	R44 18LB/OR	PASSENGER SQUIB 1 LINE 2
6	R42 18LB/BR	PASSENGER SQUIB 1 LINE 1
7	-	-
8	G104 18VT/GY (PAD)	PASSENGER AIRBAG INDICATOR DRIVER
9	-	-
10	Z104 18BK/LG	GROUND
11	R106 18LG/LB (PAD)	PASSENGER AIRBAG MUX SWITCH SENSE
12	-	-
13	-	-
14	-	-
15	-	-
16	-	-
17	F201 18PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
18	D25 18WT/VT	PCI BUS
19	-	-
20	F100 18PK/VT	FUSED IGNITION SWITCH OUTPUT (RUN)
21	-	-
22	R104 18LB/LG (PAD)	PASSENGER AIRBAG MUX SWITCH RETURN