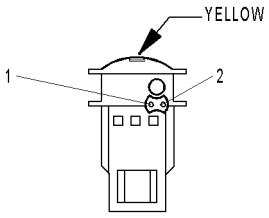

DRIVER AIRBAG SQUIB 1

DRIVER AIRBAG SQUIB 1 - YELLOW 2 WAY

CAV	CIRCUIT	FUNCTION
1	R45 18DG/LB	DRIVER SQUIB 1 LINE 2
2	R43 18BK/LB	DRIVER SQUIB 1 LINE 1

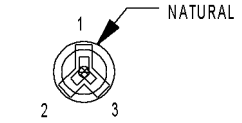

DRIVER DOOR AJAR SWITCH

DRIVER DOOR AJAR SWITCH - NATURAL 3 WAY

CAV	CIRCUIT	FUNCTION
1	M23 20YL/DG	DOOR AJAR SWITCH OUTPUT
2	-	-
3	G75 20VT	DRIVER DOOR AJAR SWITCH SENSE

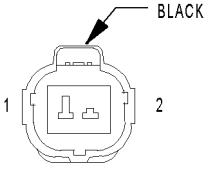

ENGINE COOLANT TEMPERATURE SENSOR

ENGINE COOLANT TEMPERATURE SENSOR - BLACK 2 WAY

CAV	CIRCUIT	FUNCTION
1	K900 20DB/DG (2.4L)	SENSOR GROUND
1	K2 18VT/OR (4.0L)	ECT SIGNAL
2	K2 20VT/OR (2.4L)	ECT SIGNAL
2	K900 20DB/DG (4.0L)	SENSOR GROUND

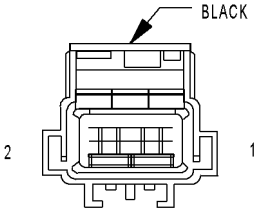

ENGINE OIL PRESSURE SWITCH

ENGINE OIL PRESSURE SWITCH - BLACK 2 WAY

CAV	CIRCUIT	FUNCTION
1	G6 20VT/GY	OIL PRESSURE SIGNAL
2	-	-



EVAP/PURGE SOLENOID

EVAP/PURGE SOLENOID - 2 WAY

CAV	CIRCUIT	FUNCTION
1	K70 20DB/BR	EVAP/PURGE SOL SIGNAL
2	K52 20DB/WT	EVAP/PURGE SOL CONTROL