ROCKER ARMS (Continued)

(5) Using Special Tools 8215 and 8436 slowly depress valve assembly until rocker arm can be removed (Fig. 33).

NOTE: It may be necessary to remove additional brackets or components to allow clearance for tool handle movement.

(6) Repeat removal procedure for each rocker arm.

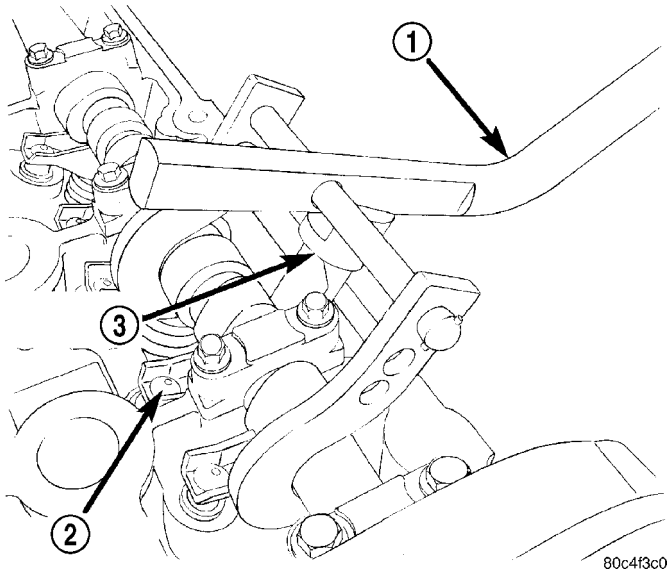

Fig. 33 Rocker Arm - Removal/Installation

1 - SPECIAL TOOL 8215
2 - ROCKER ARM
3 - SPECIAL TOOL 8436

INSPECTION

Inspect the rocker arm for wear or damage (Fig. 34). Replace as necessary.

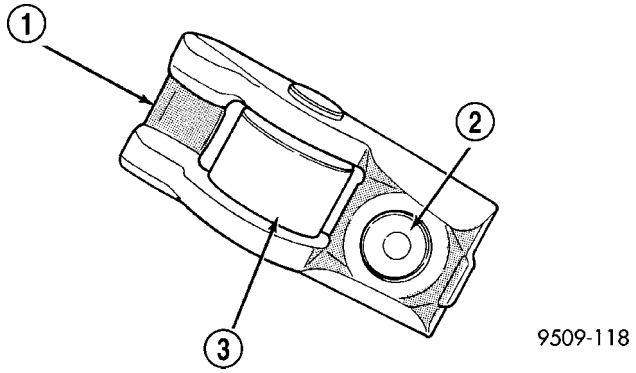

Fig. 34 Rocker Arm - Typical

1 - TIP
2 - LASH ADJUSTER POCKET
3 - ROLLER

INSTALLATION

(1) Lubricate rocker arm with clean engine oil.

(2) Using Special Tools 8215 and 8436 slowly depress valve assembly until rocker arm can be installed on the hydraulic lifter and valve stem.

(3) Repeat installation procedure for each rocker arm.

(4) Install spark plugs.

(5) Install fuel rail. (Refer to 14 - FUEL SYSTEM/ FUEL DELIVERY/FUEL RAIL - INSTALLATION)

(6) Install cylinder head cover. (Refer to 9 - ENGINE/CYLINDER HEAD/CYLINDER HEAD COVER(S) - INSTALLATION)

ENGINE BLOCK

DESCRIPTION

The cast iron cylinder block is a two-piece assembly, consisting of the cylinder block and bedplate (Fig. 35). The bedplate incorporates the main bearing caps and bolts to the cylinder block. This design offers a much stronger lower end and increased cylinder block rigidity. The rear oil seal retainer is integral with the block. The bedplate and block are serviced as an assembly.

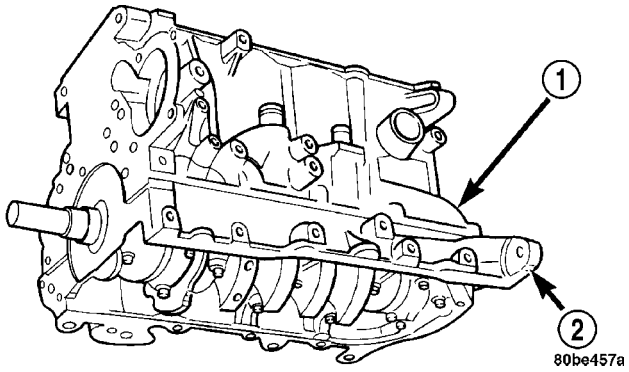

Fig. 35 2.4L Cylinder Block and Bedplate - Typical

1 - CYLINDER BLOCK
2 - BEDPLATE

STANDARD PROCEDURE

PISTON TO CYLINDER BORE FITTING

Piston and cylinder wall must be clean and dry. Piston diameter should be measured 90 degrees to piston pin about 14 mm (9/16 inch.) from the bottom of the skirt as shown in (Fig. 37). Cylinder bores should be measured halfway down the cylinder bore and transverse to the engine crankshaft center line shown in (Fig. 36). Refer to for Engine Specifications (Refer to 9 - ENGINE - SPECIFICATIONS). Correct piston to bore clearance must be established in order to assure quiet and economical operation.

NOTE: Pistons and cylinder bores should be measured at normal room temperature, 21°C (70°F).