QUICK CONNECT FITTING (Continued)

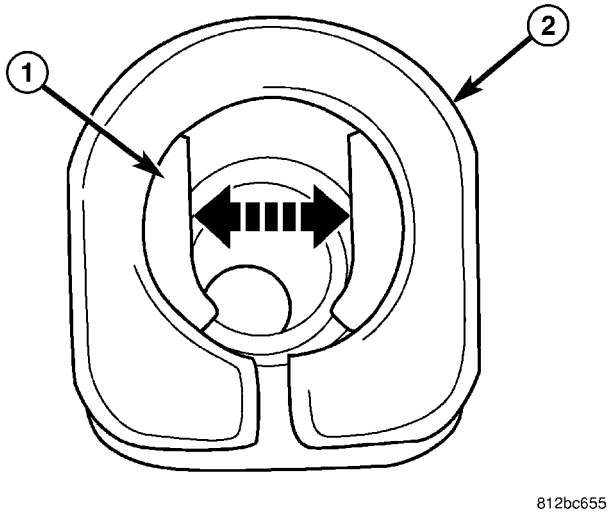

Fig. 26 FITTING LATCHES

1 - LATCHES
2 - QUICK-CONNECT FITTING

(5) **2–Button Type Fitting:** This type of fitting is equipped with a push-button located on each side of quick-connect fitting (Fig. 27). Press on both buttons simultaneously for removal. Special tools are not required for disconnection.

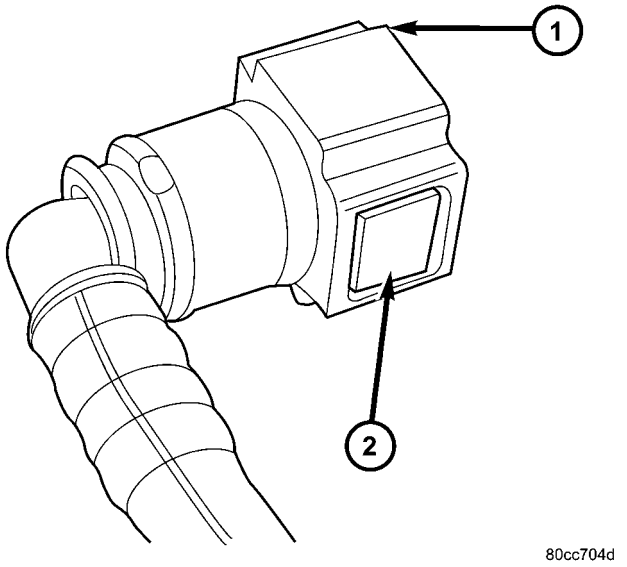

Fig. 27 2-BUTTON TYPE FITTING

1 - QUICK-CONNECT FITTING
2 - PUSH-BUTTONS (2)

(6) **Pinch-Type Fitting:** This fitting is equipped with two finger tabs. Pinch both tabs together while removing fitting (Fig. 28). Special tools are not required for disconnection.

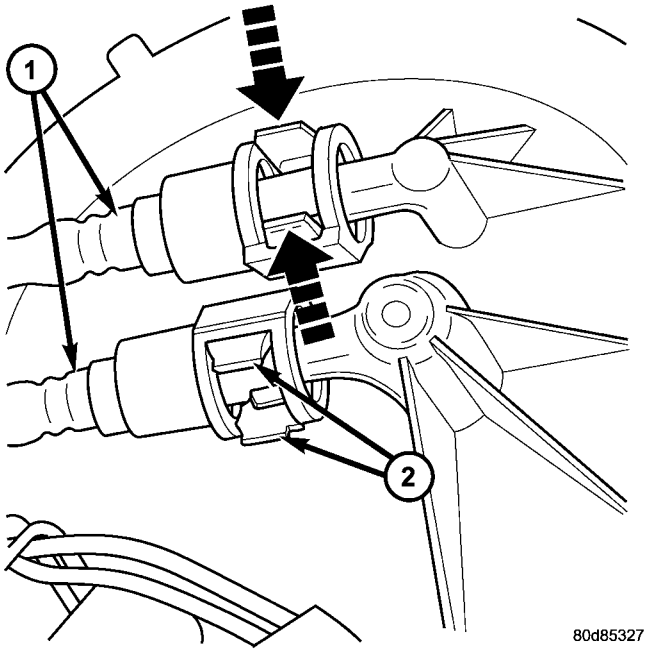

Fig. 28 PINCH TYPE QUICK-CONNECT FITTING

1 - QUICK-CONNECT FITTINGS
2 - PINCH TABS

(7) **Single-Tab Type Fitting:** This type of fitting is equipped with a single pull tab (Fig. 29). The tab is removable. After tab is removed, quick-connect fitting can be separated from fuel system component. Special tools are not required for disconnection.

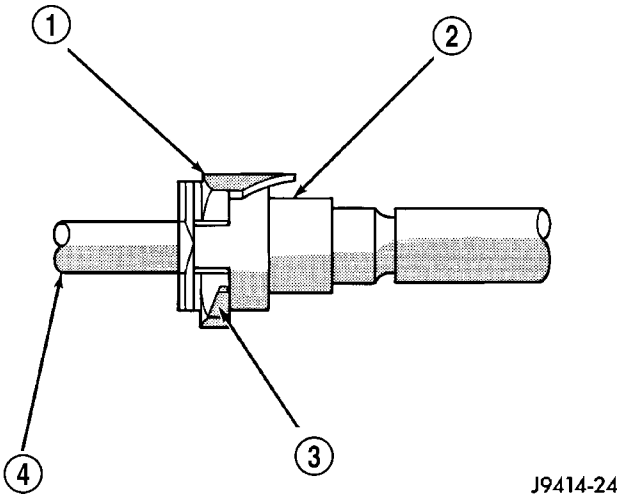

Fig. 29 SINGLE-TAB TYPE FITTING

1 - PULL TAB
2 - QUICK-CONNECT FITTING
3 - PRESS HERE TO REMOVE PULL TAB
4 - INSERTED TUBE END