COLUMN (Continued)

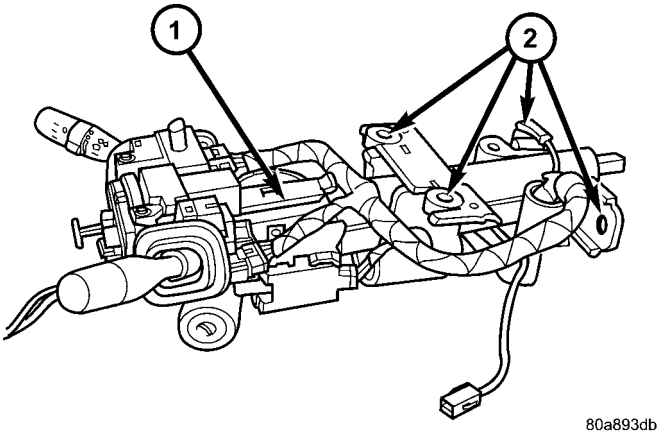

Fig. 5 STEERING COLUMN MOUNTING

1 - Steering Column
2 - Mounting Holes

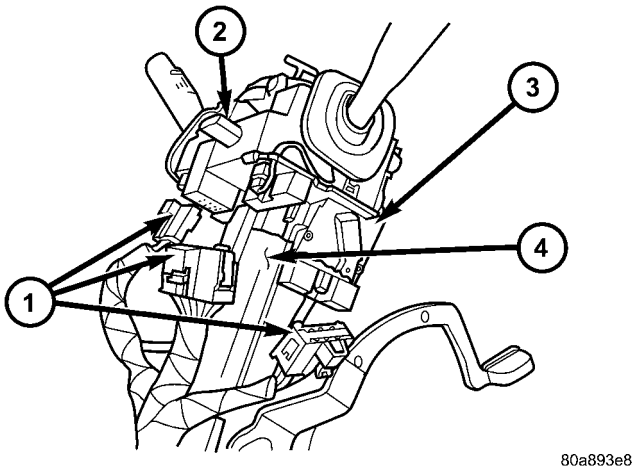

Fig. 6 WIRING HARNESS COLUMN

1 - Column Wiring Harness
2 - Multi-function Switch
3 - Ignition Switch
4 - Steering Column

(12) Remove clock spring (Fig. 7), switches, (SKIM if equipped) (Refer to 8 - ELECTRICAL/RESTRAINTS/CLOCKSPRING - REMOVAL).

INSTALLATION

(1) Align and install column into the steering coupler.

(2) Install column harness and connect harness to switches.

NOTE: If vehicle is equipped with automatic transmission, install shifter interlock cable. (Refer to 21 - TRANSMISSION/TRANSAXLE/AUTOMATIC - 30RH/ GEAR SHIFT CABLE - ADJUSTMENTS).

(3) Install the upper column shroud.

(4) Install the column onto the mounting studs.

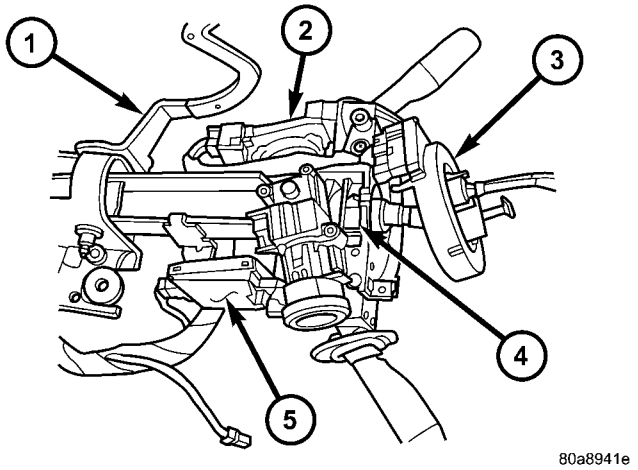

Fig. 7 CLOCK SPRING

1 - Tilt Lever
2 - Ignition Switch
3 - Clockspring
4 - Steering Column
5 - SKIM

CAUTION: Lower nuts must be installed and tightened first then the upper nuts in order to prevent damage to the capsules.

(5) Install the lower mounting nuts and tighten to 17 N·m (150 in. lbs.).

(6) Install the upper mounting nuts and tighten to 17 N·m (150 in. lbs.).

(7) Install the steering column coupler bolt and tighten to 49 N·m (36 ft. lbs.).

(8) Center the clock spring (if necessary) and install it on the column, (Refer to 8 - ELECTRICAL/ RESTRAINTS/CLOCKSPRING - INSTALLATION).

(9) Install the lower column shroud and install mounting screws.

(10) Install the ignition lock cylinder. (Refer to 19 - STEERING/COLUMN/LOCK CYLINDER HOUSING - INSTALLATION).

(11) Install the knee blocker and the knee blocker cover, (Refer to 23 - BODY/INSTRUMENT PANEL/ KNEE BLOCKER - INSTALLATION).

NOTE: Do not reuse the old steering wheel bolt (a new bolt must be used)

NOTE: If equipped with cruise control, connect clock spring harness to cruise switch harness on the steering wheel.

(12) Install the steering wheel and tighten bolt to 54 N·m (40 ft. lbs.).

(13) Install the airbag, (Refer to 8 - ELECTRICAL/ RESTRAINTS/DRIVER AIRBAG - INSTALLATION).

(14) Install the negative battery terminal.