AUTOMATIC TRANSMISSION - 42RLE (Continued)

(35) Remove the 2/4 clutch pack (Fig. 55).

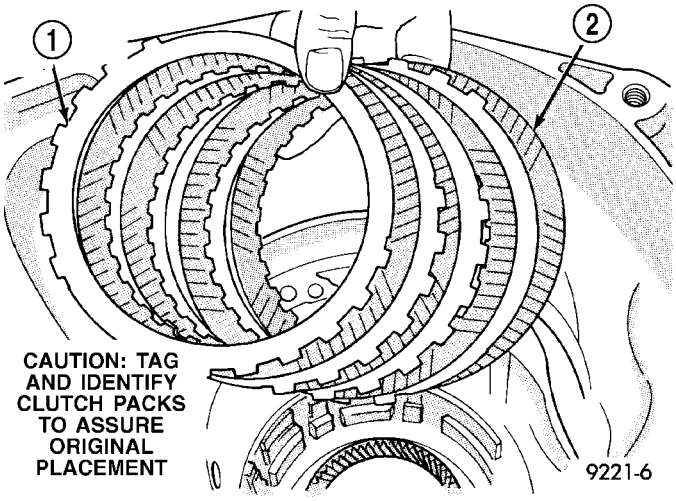


Fig. 55 Remove 2/4 Clutch Pack

1 - CLUTCH PLATE (4)
2 - CLUTCH DISC (4)

(36) Remove the tapered snap ring (Fig. 56).

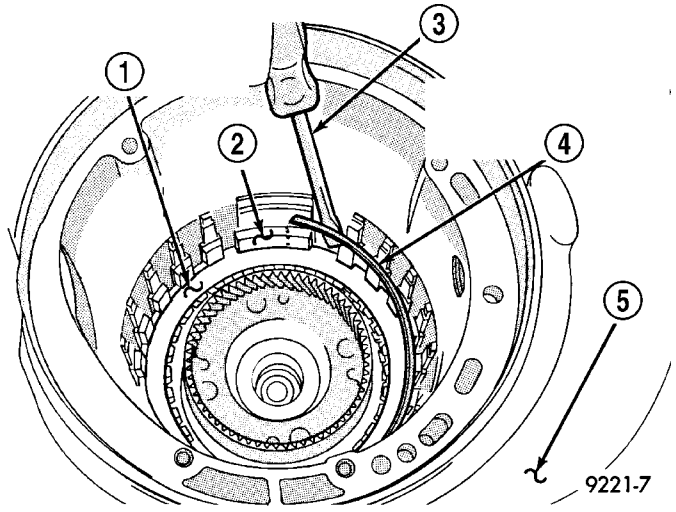


Fig. 56 Remove Tapered Snap Ring

1 - LOW/REVERSE CLUTCH REACTION PLATE
2 - LONG TAB
3 - SCREWDRIVER
4 - LOW/REVERSE TAPERED SNAP RING (TAPERED SIDE UP)
5 - OIL PAN FACE

(37) Remove the low/reverse reaction plate (Fig. 57).

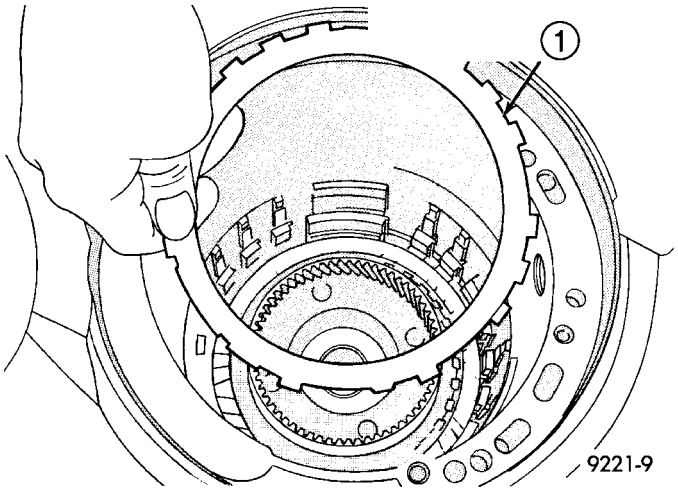


Fig. 57 Remove Low/Reverse Reaction Plate

1 - LOW/REVERSE REACTION PLATE (FLAT SIDE UP)

(38) Remove one (1) low/reverse clutch disc to facilitate snap ring removal (Fig. 58).

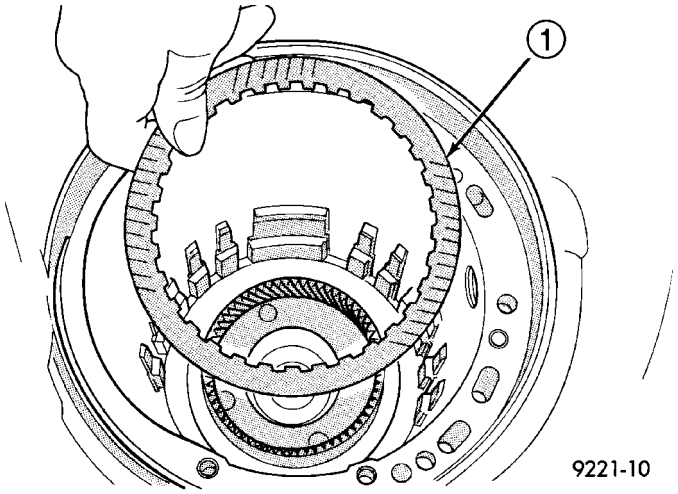


Fig. 58 Remove One Disc

1 - ONE DISC FROM LOW/REVERSE CLUTCH