INPUT CLUTCH ASSEMBLY (Continued)

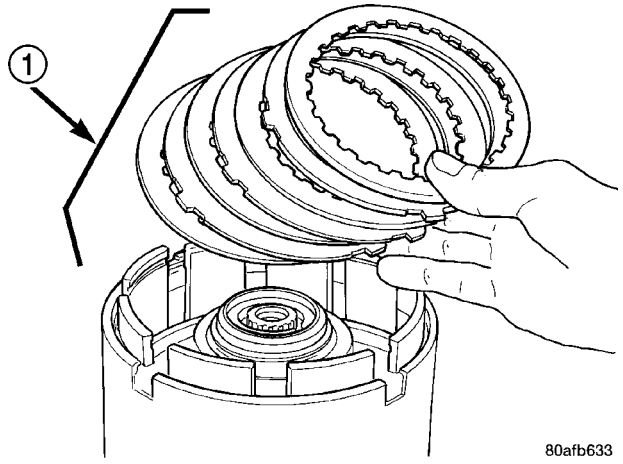

Fig. 205 Install OD Clutch Pack

1 - OVERDRIVE CLUTCH PACK

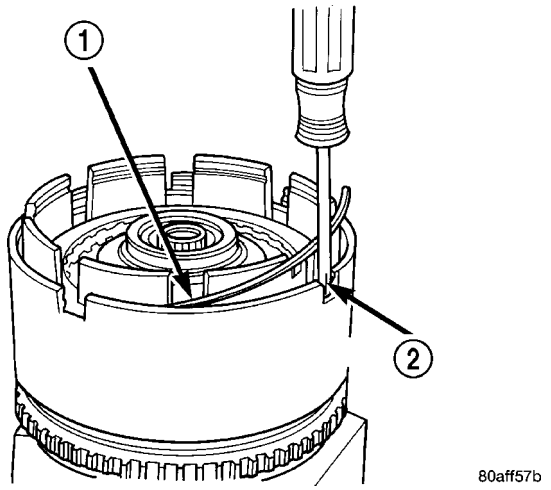

Fig. 206 Install Waved Snap Ring

1 - OVERDRIVE REACTION PLATE WAVED SNAP RING
2 - SCREWDRIVER

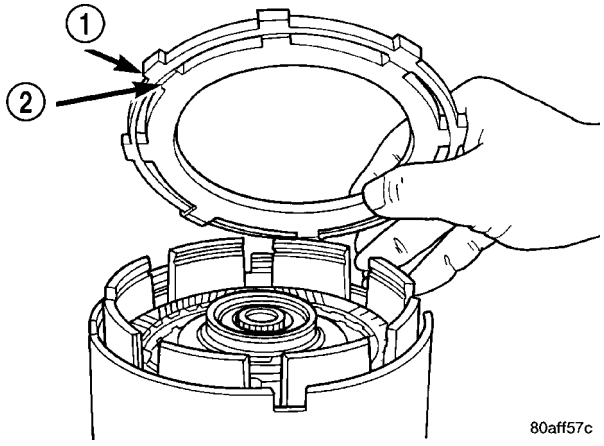

Fig. 207 OD/Reverse Reaction Plate

1 - OVERDRIVE/REVERSE PRESSURE PLATE
2 - (STEP SIDE DOWN)

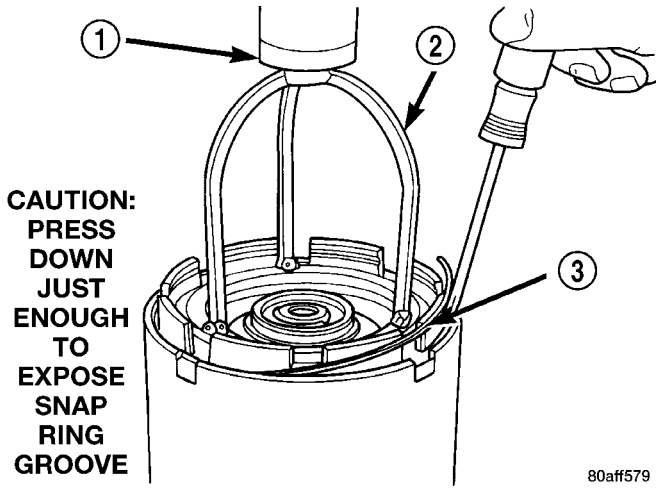

Fig. 208 Install Flat Snap Ring

1 - ARBOR PRESS RAM
2 - TOOL 5059A
3 - FLAT SNAP RING

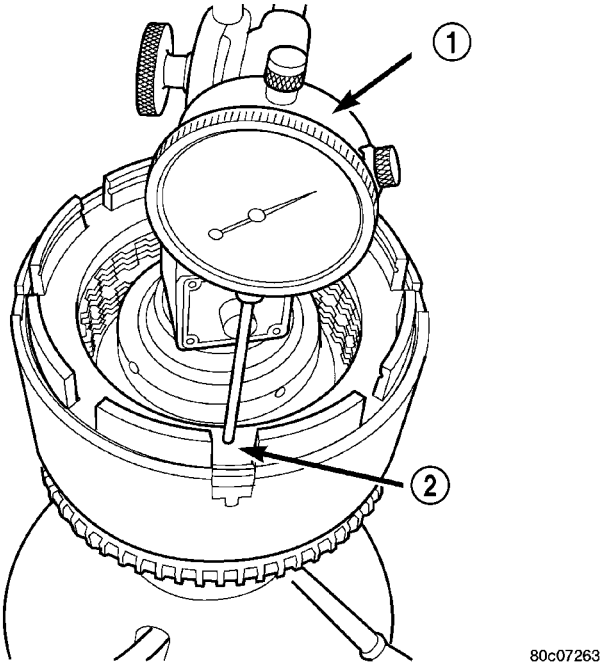

Fig. 209 Measure OD Clutch Pack Clearance

1 - DIAL INDICATOR
2 - OD/REVERSE PRESSURE PLATE

(28) Measure OD clutch pack clearance. Set up dial indicator (1) on top of the OD/Reverse reaction plate (2) (Fig. 209).

(29) Zero dial indicator and apply 30 psi (206 kPa) air pressure to the overdrive clutch hose on Tool 8391. Measure and record OD clutch pack measurement in four (4) places, 90° apart.

(30) Take average of four measurements and compare with OD clutch pack clearance specification. **The overdrive (OD) clutch pack clearance is 1.07-3.25 mm (0.042-0.128 in.).**