VALVE BODY (Continued)

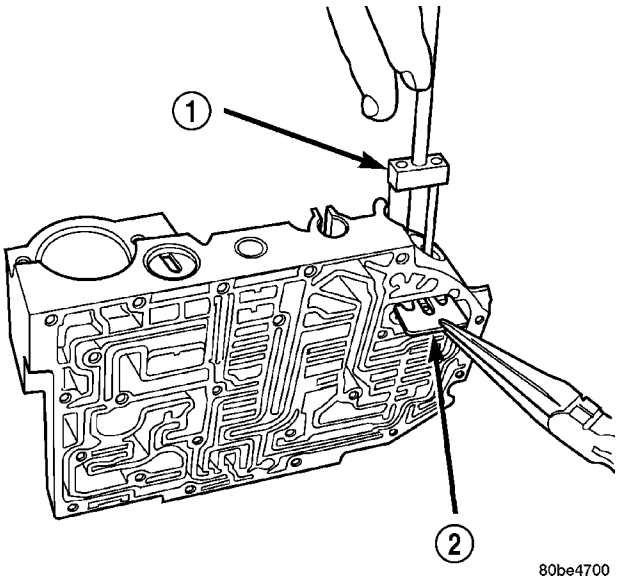

Fig. 289 Install Dual Retainer Plate using Tool 6301

1 - TOOL 6301
2 - RETAINER

(3) Install dual retainer plate (2) using Tool 6301 (1) (Fig. 289).

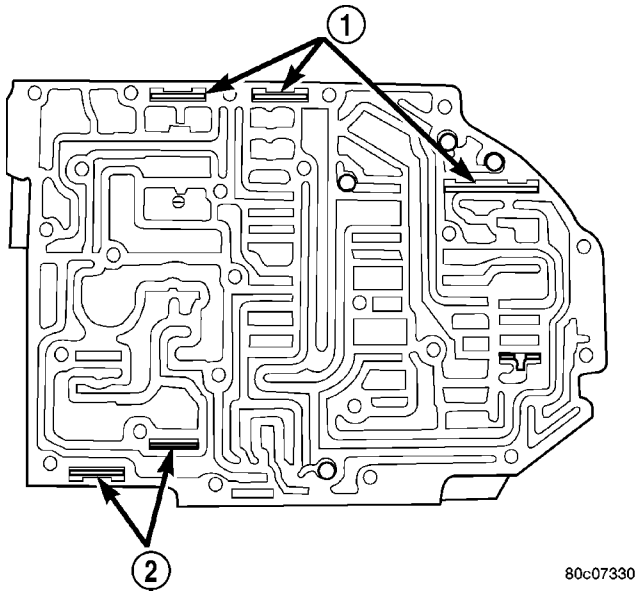

Fig. 290 Valve Retainer Location

1 - RETAINER
2 - RETAINER

(4) Verify that all retainers (1, 2) are installed as shown (Fig. 290). Retainers should be flush or below valve body surface.

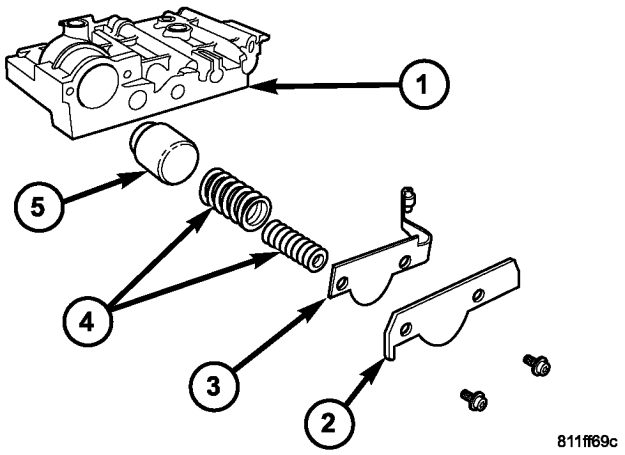

Fig. 291 2/4 Accumulator Assembly

1 - VALVE BODY
2 - RETAINER PLATE
3 - DETENT SPRING
4 - RETURN SPRINGS
5 - PISTON

(5) Install 2/4 Accumulator components (1-5) as shown (Fig. 291). Torque 2/4 Accumulator retainer plate to 5 N·m (45 in. lbs.).

(6) Install check balls into position as shown (Fig. 292). If necessary, secure them with petrolatum or transmission assembly gel for assembly ease.

(7) Install thermal valve (1) to the transfer plate (Fig. 293).

(8) Install the oil screen (1) to the transfer plate (Fig. 294).