TRANSFER CASE - NV231 (Continued)

(9) Install boot on output shaft slinger, or output shaft damper, and crimp retaining clamp with tool C-4975-A (Fig. 83).

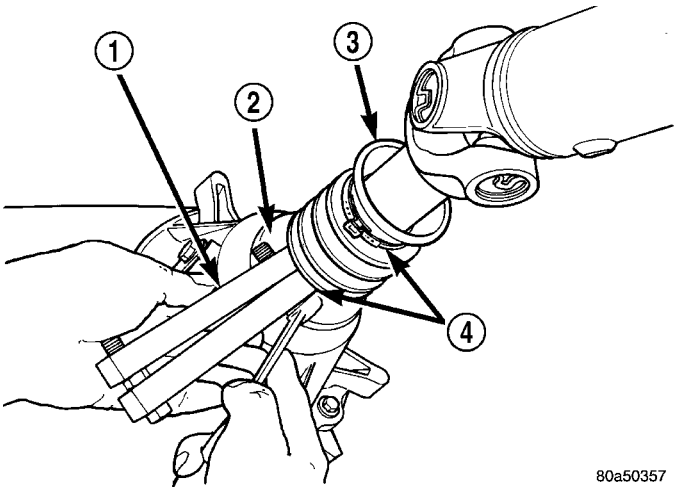

Fig. 83 Slinger Boot Installation - Typical

1 - SPECIAL TOOL C-4975–A
2 - SLINGER
3 - BOOT
4 - CLAMP

INSTALLATION

(1) Mount transfer case on a transmission jack.
(2) Secure transfer case to jack with chains.
(3) Position transfer case under vehicle.
(4) Align transfer case and transmission shafts and install transfer case on transmission.
(5) Install and tighten transfer case attaching nuts to 35 N·m (26 ft. lbs.) torque (Fig. 2).
(6) Connect vehicle speed sensor wires, and vent hose.
(7) Connect indicator switch harness to transfer case switch, if necessary. Secure wire harness to clips on transfer case.
(8) Align and connect propeller shafts. Refer to Differential and Driveline for proper procedures and specifications.
(9) Fill transfer case with correct fluid. Check transmission fluid level. Correct as necessary.
(10) Install rear crossmember, or skid plate. Tighten crossmember bolts to 41 N·m (30 ft. lbs.) torque.
(11) Remove transmission jack and support stand.
(12) Connect shift rod to transfer case range lever.
(13) Adjust transfer case shift linkage.
(14) Lower vehicle and verify transfer case shift operation.

SPECIFICATIONS

TRANSFER CASE - NV231

TORQUE

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Plug, Detent	16-24	12-18	-
Plug, Drain/Fill	20-34	15-25	-
Bolt, Front Brg. Retainer	21	16	-
Bolt, Case Half	27-34	20-25	-
Nut, Front Yoke	122-176	90-130	-
Nut, Range Lever	27-34	20-25	-
Bolt, Rear Retainer	35-46	26-34	-
Nuts, Mounting	35-47	26-35	-
Switch, Indicator	20-34	15-25	-