TAILGATE

REMOVAL

(1) Remove the spare tire.
(2) Open the tailgate and remove the center high mounted stop lamp (CHMSL) contact cover (Fig. 8).
(3) Disengage the CHMSL electrical connectors.
(4) Remove the screws that attach the tailgate hinge to the tailgate.
(5) Separate the tailgate from the vehicle.

INSTALLATION

NOTE: If necessary, transfer tailgate related components.

(1) Install the screws that attach the tailgate hinge to the tailgate.
(2) Engage the CHMSL electrical connectors.
(3) Install the CHMSL contact cover.
(4) Close the tailgate and install the spare tire.

ADJUSTMENTS

ADJUSTMENT

(1) Loosen the tailgate hinge-to-body screws.

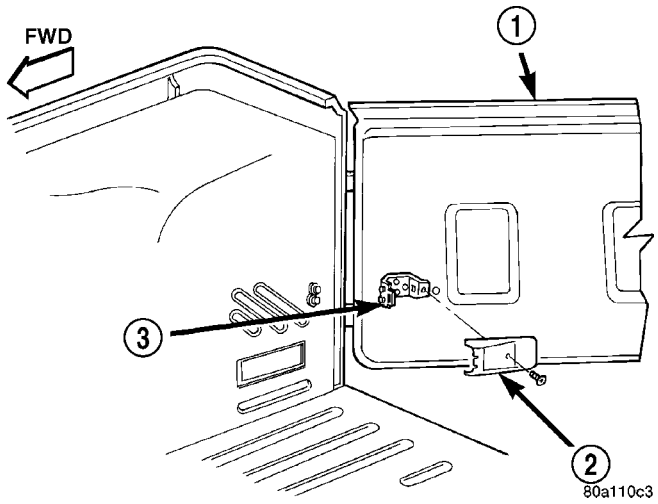

Fig. 8 CHMSL CONTACT COVER

1 - TAILGATE
2 - COVER
3 - CHMSL CONTACT COVER BRACKET

(2) Align the tailgate in the body opening and tighten the hinge screws. (Refer to 23 - BODY/BODY STRUCTURE/GAP AND FLUSH - SPECIFICATIONS)