SIDE VIEW MIRROR

REMOVAL

(1) Remove the screws attaching the mirror to the door hinge (Fig. 6).
(2) Remove the mirror from the door hinge.
(3) Disconnect the electrical connector, if equipped.

INSTALLATION

(1) Clean the door hinge-mirror base contact surface.
(2) Position the mirror base at the door hinge.
(3) Install the three screws attaching the mirror base to the door hinge.

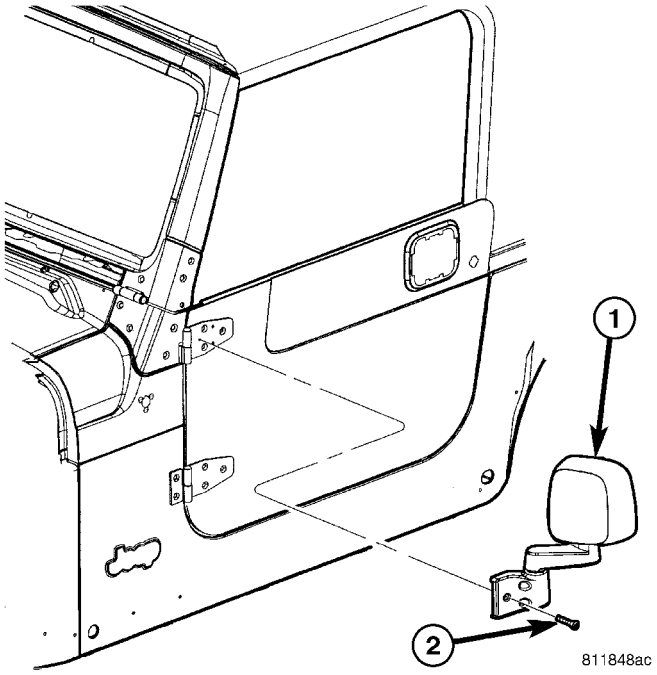

Fig. 6 SIDE VIEW MIRROR

1 - MIRROR ASSEMBLY
2 - SCREWS (3)

WHEEL OPENING FLARE MOLDING

REMOVAL

(1) Remove the side marker lamp. (Refer to 8 - ELECTRICAL/LAMPS/LIGHTING - EXTERIOR/ MARKER LAMP UNIT - REMOVAL)
(2) Remove the screws that attach the flare to the front fender or rear wheelhouse (Fig. 7).
(3) Separate the flare from the body.

INSTALLATION

(1) Clean the contact surface on the body.

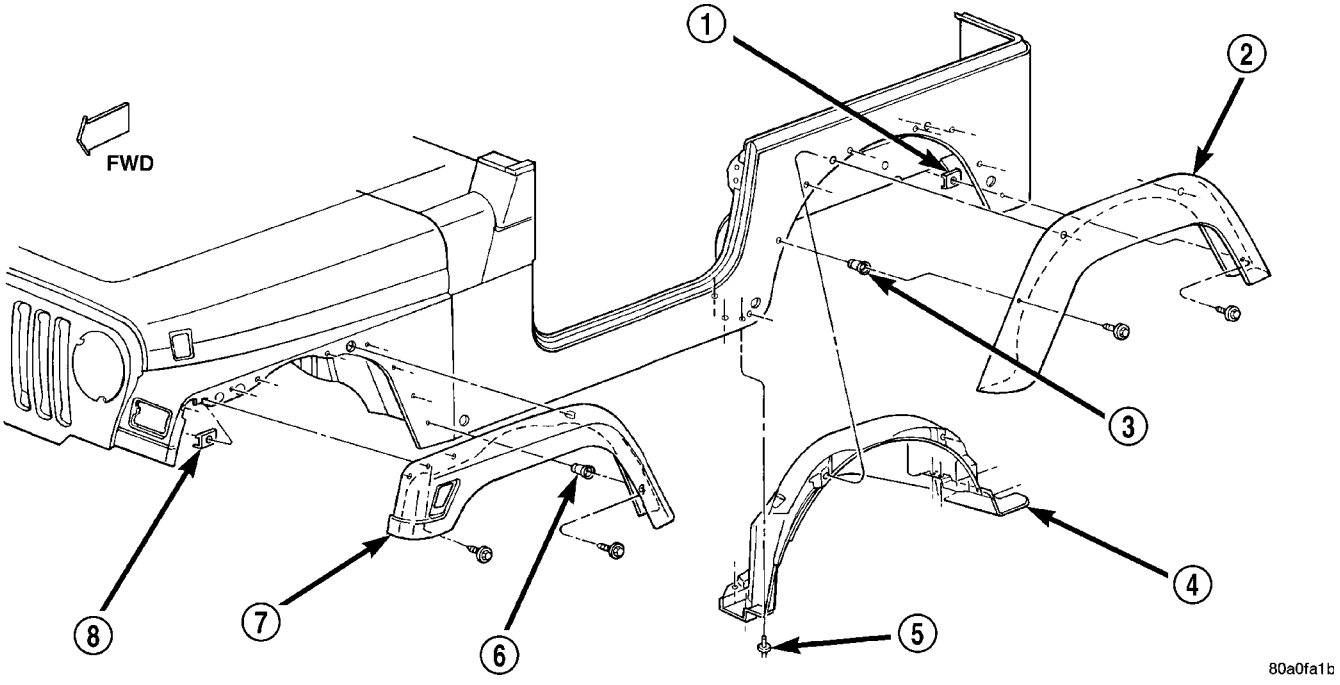

Fig. 7 FENDER FLARES

1 - U-NUT
2 - FENDER FLARE
3 - NUTSERT
4 - SPLASH SHIELD
5 - RIVET
6 - NUTSERT
7 - FENDER FLARE
8 - U-NUT