WHEELHOUSE CARPET

REMOVAL

(1) Position the rear seat in the full forward position.
(2) Remove the Add-A-trunk, if equipped. (Refer to 23 - BODY/INTERIOR/ADD-A-TRUNK - REMOVAL)
(3) Grasp wheelhouse carpet and remove from vehicle (Fig. 3).

INSTALLATION

(1) Position wheelhouse carpet in vehicle and adjust as necessary.
(2) Install the Add-A-trunk, if equipped. (Refer to 23 - BODY/INTERIOR/ADD-A-TRUNK - INSTALLATION)
(3) Return the rear seat to the full rearward position.

REAR VIEW MIRROR

REMOVAL

(1) Disconnect the electrical connector, if equipped. (Fig. 4)
(2) Loosen the mirror set screw.
(3) Slide the mirror up and off the support button (bracket).

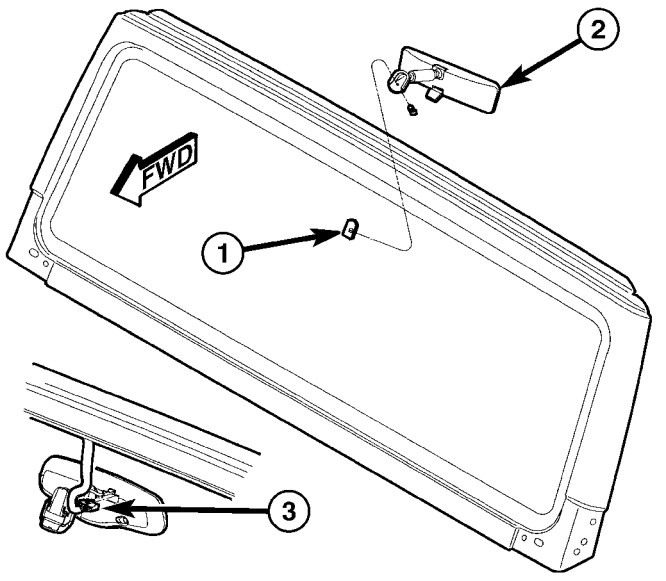

Fig. 4 REAR VIEW MIRROR

1 - SUPPORT BRACKET
2 - MIRROR ASSEMBLY
3 - ELECTRICAL CONNECTOR

INSTALLATION

(1) Slide the mirror onto the support button (bracket).

CAUTION: Do not over-tighten the setscrew because glass chipping and/or breakage could result.

(2) Tighten the mirror set screw to 1 N·m (9 in. lbs.).
(3) Connect the electrical connector, if equipped.

REAR VIEW MIRROR SUPPORT BRACKET

INSTALLATION

(1) Mark the position for the mirror bracket on the outside of the windshield glass with a wax pencil.
(2) Clean the bracket contact area on the glass. Use a mild powdered cleanser on a cloth saturated with isopropyl (rubbing) alcohol. Finally, clean the glass with a paper towel dampened with alcohol.
(3) Sand the surface on the support bracket with fine grit-sandpaper. Wipe the bracket surface clean with a paper towel.
(4) Apply accelerator to the surface on the bracket according to the following instructions:

- Crush the vial to saturate the felt applicator.
- Remove the paper sleeve.
- Apply accelerator to the contact surface on the bracket.
- Allow the accelerator to dry for five minutes.
- Do not touch the bracket contact surface after the accelerator has been applied.

(5) Apply adhesive accelerator to the bracket contact surface on the windshield glass. Allow the accelerator to dry for one minute. Do not touch the glass contact surface after the accelerator has been applied.
(6) Install the bracket according to the following instructions:

- Apply one drop of adhesive at the center of the bracket contact-surface on the windshield glass.
- Apply an even coat of adhesive to the contact surface on the bracket.
- Align the bracket with the marked position on the windshield glass.
- Press and hold the bracket in place for at least one minute.

NOTE: Verify that the mirror support bracket is correctly aligned, because the adhesive will cure rapidly.