# A-PILLAR TRIM

## REMOVAL

(1) Remove the a-pillar trim screws. (Fig. 13)

(2) Starting at the bottom, pull off the trim and remove.

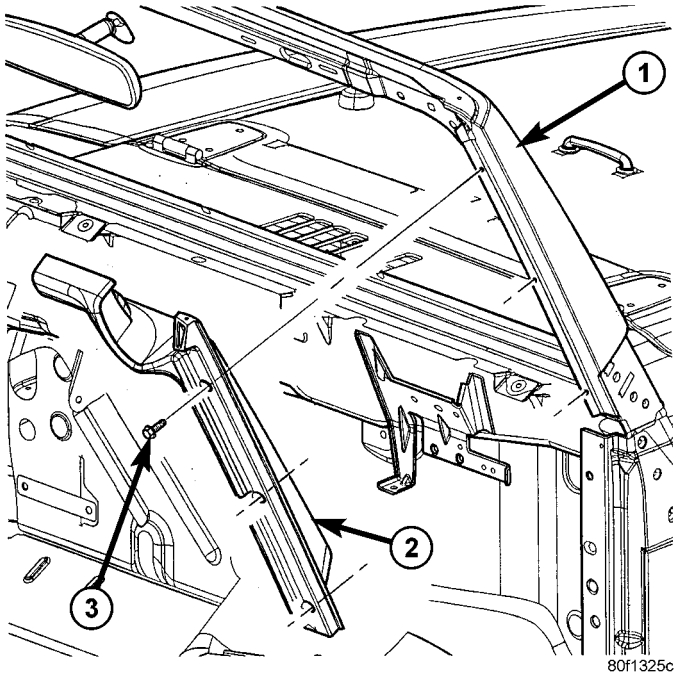



***Fig. 13 A-PILLAR TRIM***

1 - WINDSHIELD FRAME
2 - A-PILLAR TRIM
3 - SCREWS (3)

## INSTALLATION

(1) Install the trim over the sports bar and position into the top.

(2) Press the bottom into place and install the screws.

# REAR HEADER TRIM

## REMOVAL

(1) Disconnect the rear window defogger electrical connectors, if equipped.

(2) Remove the wiper motor cover and disconnect the wiper motor electrical connector and washer hose. (Fig. 14)

(3) Using a trim stick C-4755 or equivalent, separate the header trim and retainer clips from the top. (Fig. 15)

(4) Pull the wire harnesses and washer hose through the trim panel and remove.

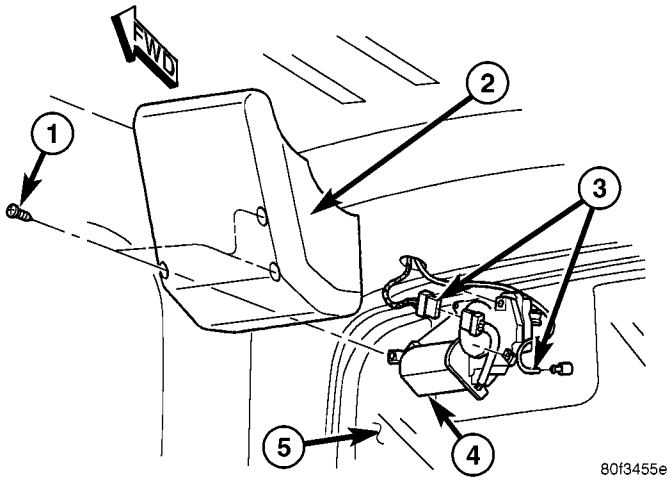



***Fig. 14 REAR WIPER MOTOR TRIM COVER REMOVE/INSTALL***

1 - SCREW (3)
2 - TRIM COVER
3 - ELECTRICAL & WASHER HOSE CONNECTIONS
4 - WIPER MOTOR
5 - LIFTGATE GLASS

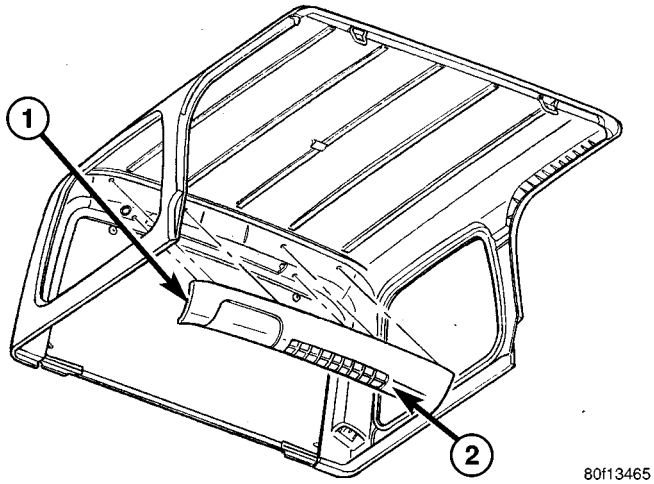



***Fig. 15 REAR HEADER TRIM***

1 - REAR HEADER TRIM
2 - WIRE OPENINGS (2)

## INSTALLATION

(1) Route the wire harnesses and washer hose through the trim panel.

(2) Install the header trim and seat the retaining clips fully.

(3) Connect the wiper motor electrical and the washer hose connection.

(4) Connect the rear window defogger electrical connectors, if equipped.