WINDSHIELD HEADER

REMOVAL

(1) Position both sun visors out.

(2) Using a trim stick C-4755 or equivalent, separate the retaining clips and remove the trim from behind the a-pillar trim panels. (Fig. 16)

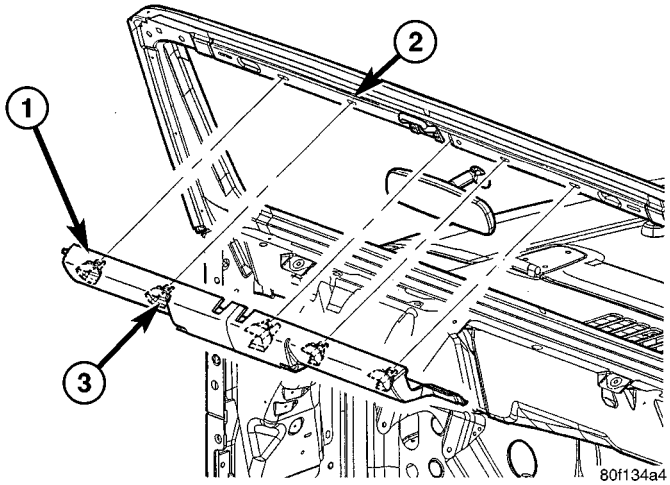

Fig. 16 WINDSHIELD HEADER MOLDING

1 - WINDSHIELD HEADER TRIM
2 - WINDSHIELD FRAME
3 - SPRING CLIPS (4)

INSTALLATION

(1) Install the windshield header trim and position the end tabs behind the a-pillar trim.

(2) Seat the retaining clips fully.

SPORT BAR - SPEAKER POD

REMOVAL

(1) On vehicles equipped with a soft top, unzip the side panel next to the pod.

(2) On vehicles equipped with a hard top, unclip the windshield clamps.

(3) Remove the bolts on side of the top next to the pod and loosen the opposite side bolts. (Refer to 23 - BODY/REMOVEABLE TOP/HARD TOP - REMOVAL)

(4) Lift up the side of the top to gain access to the pod bolts and support with a block of wood or similar.

(5) Remove the two bolts securing the pod to the sport bar.

(6) Separate the pod guide pin from the sport bar and disconnect the electrical connector.

INSTALLATION

(1) Connect the pod electrical connector and install the pod onto the guide pin.

(2) Install the bolts and tighten to 68 N·m (50 ft. lbs.).

(3) On vehicles equipped with a hard top, install the hard top. (Refer to 23 - BODY/REMOVABLE TOP/HARD TOP - INSTALLATION)

(4) On vehicles equipped with a soft top, zip up the side panel.