INSTRUMENT PANEL DEMISTER DUCTS (Continued)

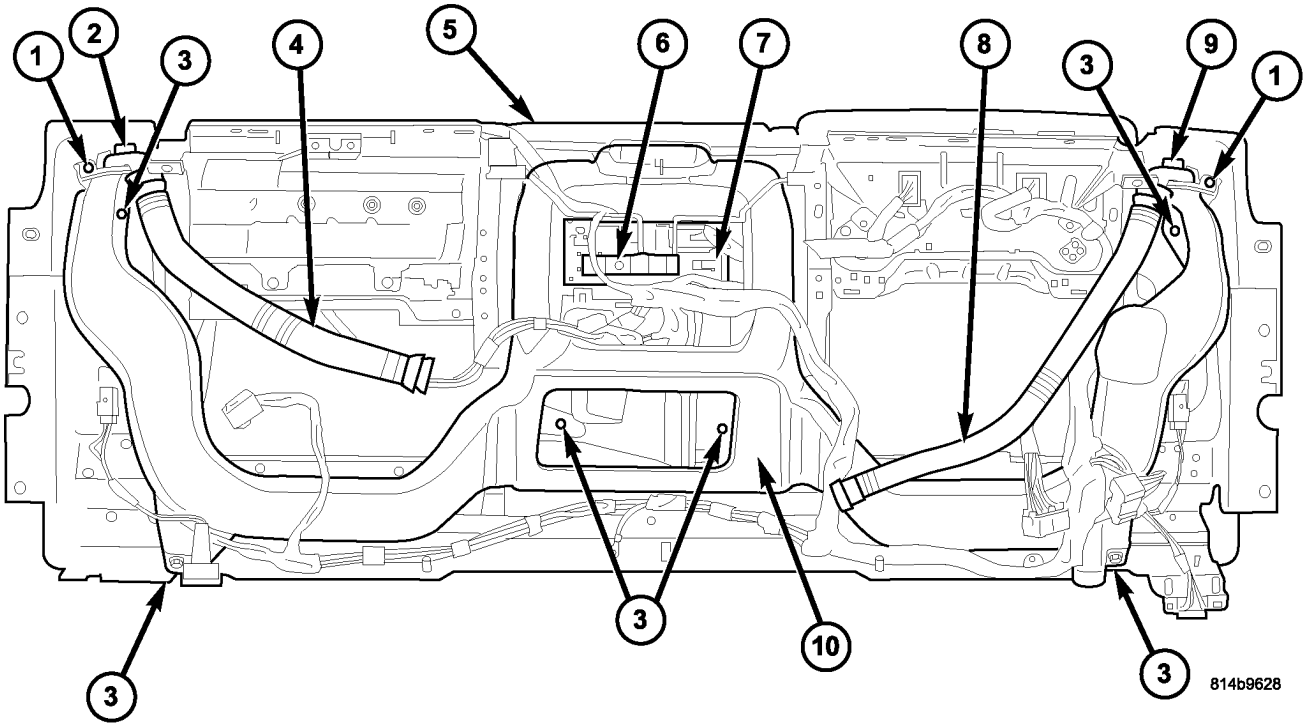

Fig. 37 Demister Ducts - IP Removed for Clarity

1 - SCREW (2)
2 - RH DEMISTER OUTLET
3 - SCREW (10)
4 - RH DEMISTER DUCT
5 - INSTRUMENT PANEL
6 - RADIO REAR SUPPORT BRACKET
7 - RADIO
8 - LH DEMISTER DUCT
9 - LH DEMISTER OUTLET
10 - INSTRUMENT PANEL DUCT

connect the demister ducts from the demister outlets and the defroster duct as necessary (Fig. 37).

DEMISTER OUTLETS

NOTE: Take the proper precautions to protect the front face of the instrument panel from cosmetic damage while performing this procedure.

(1) Remove the instrument panel assembly and place it on a workbench (Refer to 23 - BODY/INSTRUMENT PANEL/INSTRUMENT PANEL ASSEMBLY - REMOVAL)
(2) Disconnect the demister ducts from the demister outlets as necessary (Fig. 38).
(3) Remove the screw that secures each demister outlet to the instrument panel duct as necessary.
(4) Remove the demister outlets from the instrument panel as necessary.

INSTALLATION

NOTE: The two demister ducts can be serviced without removing the instrument panel. However, if either of the demister outlets require servicing, the instrument panel must be removed.

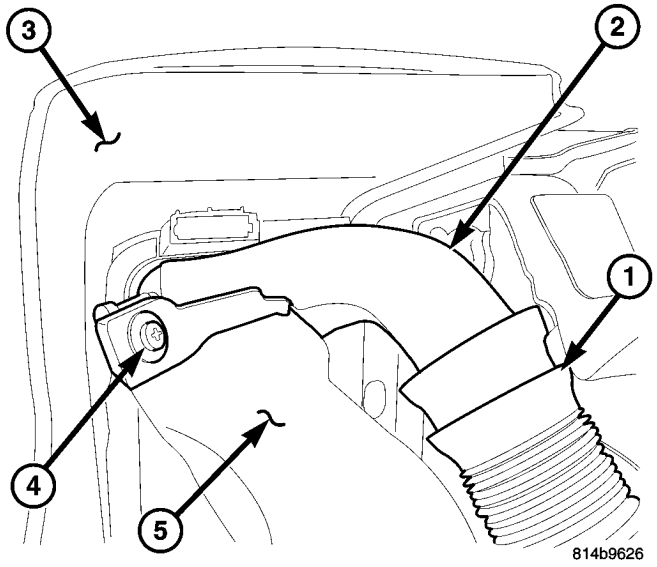

Fig. 38 Demister Outlet - Right Side shown, Left Side similar

1 - DEMISTER HOSE (2)
2 - DEMISTER OUTLET (2)
3 - INSTRUMENT PANEL
4 - SCREW (2)
5 - INSTRUMENT PANEL DUCT