NATURAL VACUUM LEAK DETECTION ASSEMBLY (Continued)

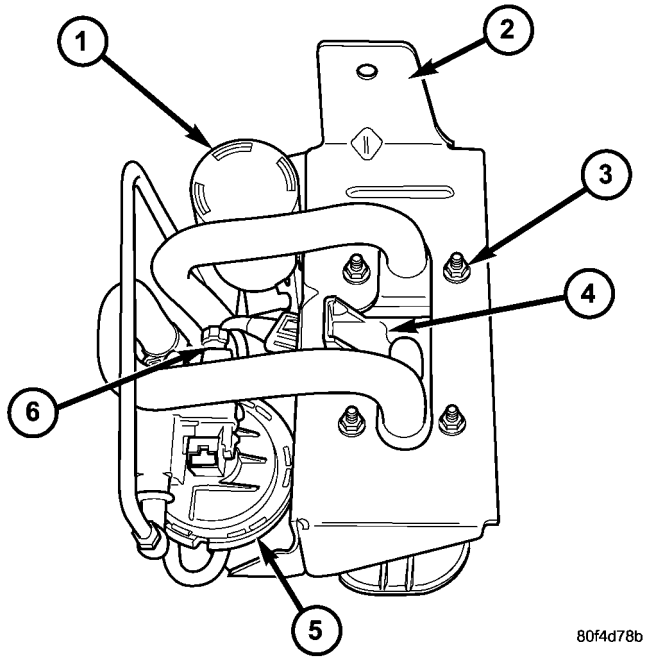


*Fig. 15 COMMON SUPPORT BRACKET ASSEMBLY*

1 - LDP FILTER
2 - COMMON SUPPORT BRACKET
3 - EVAP CANISTER NUTS (4)
4 - EVAP CANISTER
5 - LDP
6 - LDP ELEC. CONNECT.

(5) Remove common support bracket assembly (2) (Fig. 15) containing pump, pump filter and EVAP canister from vehicle. While lowering this assembly, disconnect pump electrical connector (6) (Fig. 15) at LDP pump. **Do not allow the assembly to hang from the wire harness.**

(6) Carefully separate hose at bottom of pump filter.

(7) Carefully remove vapor/vacuum lines at pump.

(8) If necessary, remove pump filter mounting bolt and remove filter.

(9) Remove EVAP canister from common support bracket by removing four nuts (3) (Fig. 15).

(10) Remove three pump mounting bolts (2) (Fig. 16) and remove pump from support bracket.

## INSTALLATION

(1) Install pump and three mounting bolts (3) (Fig. 17) to common support bracket. Tighten bolts to 1 N·m (11 in. lbs.) torque.

(2) If necessary, install pump filter to common support bracket. Tighten bolt to 7 N·m (65 in. lbs.) torque.

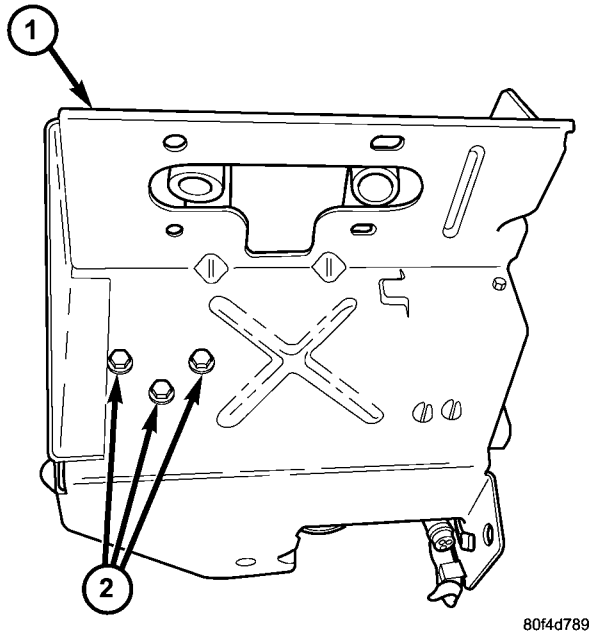


*Fig. 16 LDP MOUNTING BOLTS*

1 - COMMON SUPPORT BRACKET
2 - LDP MOUNTING BOLTS (3)

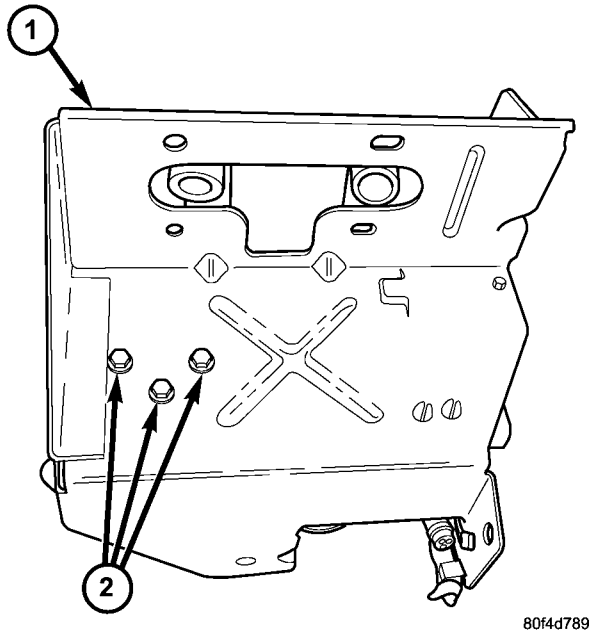


*Fig. 17 LDP MOUNTING BOLTS*

1 - COMMON SUPPORT BRACKET
2 - LDP MOUNTING BOLTS (3)