NATURAL VACUUM LEAK DETECTION ASSEMBLY (Continued)

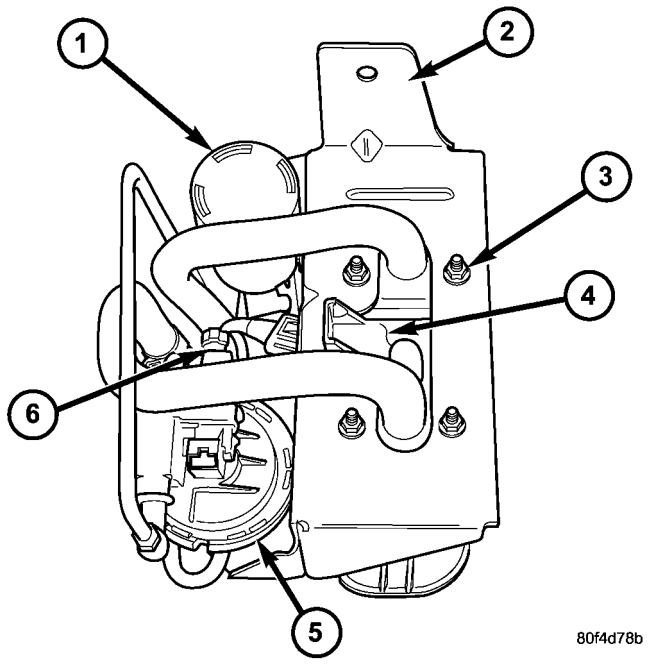

Fig. 18 COMMON SUPPORT BRACKET ASSEMBLY

1 - LDP FILTER
2 - COMMON SUPPORT BRACKET
3 - EVAP CANISTER NUTS (4)
4 - EVAP CANISTER
5 - LDP
6 - LDP ELEC. CONNECT.

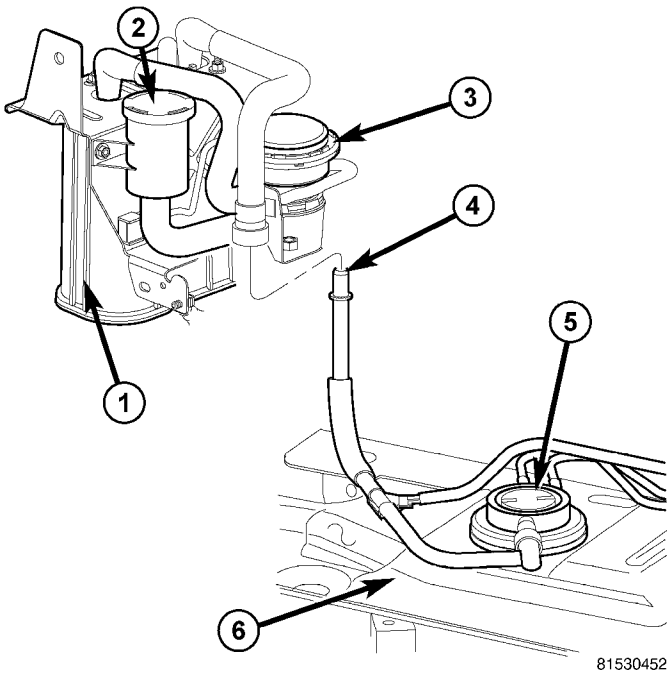

Fig. 19 ORVR VAPOR LINE

1 - EVAP CANISTER
2 - NVLD FILTER
3 - NVLD PUMP
4 - VAPOR LINES
5 - FLOW VALVE
6 - TOP OF FUEL TANK)

(3) Install EVAP canister to common support bracket and install four mounting nuts (3) (Fig. 18).

(4) Carefully install vapor/vacuum lines to pump, filter and EVAP canister. **The vapor/vacuum lines and hoses must be firmly connected. Check the vapor/vacuum lines at the LDP, LDP filter and EVAP canister purge solenoid for damage or leaks. If a leak is present, a Diagnostic Trouble Code (DTC) will be set.**

(5) Raise assembly into position while connecting electrical connector to pump. Do not allow this assembly to hang from the wire harness. While assembly is still being supported, connect vapor line (4) (Fig. 19) to fuel tank.

(6) Position common support bracket assembly to body. Install and tighten bolts.

(7) Install vertical support bracket.

(8) Install wheelhouse liner at right/rear wheel.

(9) Install right/rear tire/wheel.

VACUUM LINES

DESCRIPTION

A vacuum schematic for emission related items can be found on the VECI label. Refer to Vehicle Emission Control Information (VECI) Label for label location.

VAPOR CANISTER

DESCRIPTION

The EVAP (vapor) canister (1), Natural Vacuum Leak Detection (NVLD) pump (3) and pump filter are attached to a common support bracket. This support assembly is located to the rear of the right / rear tire under the plastic wheelhouse liner (Fig. 20).