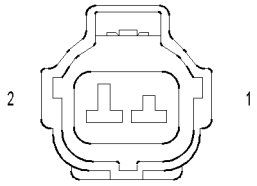

AMBIENT TEMPERATURE SENSOR (ENGINE)

AMBIENT TEMPERATURE SENSOR (ENGINE) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	G31 20VT/LG	AAT SIGNAL
2	K900 20DB/DG	SENSOR GROUND

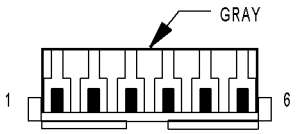

BRAKE LAMP SWITCH

BRAKE LAMP SWITCH - GRAY 6 WAY

CAV	CIRCUIT	FUNCTION
1	B15 20DG/WT	BRAKE SWITCH NO. 1 SIGNAL
1	B15 20DG/WT	BRAKE SWITCH NO. 1 SIGNAL
2	Z249 20BK/OR	GROUND
3	V32 20VT/YL (EXCEPT POSTAL)	S/C SUPPLY
4	V30 20VT/WT (EXCEPT POSTAL)	S/C BRAKE SWITCH OUTPUT
5	A103 18GY/RD	FUSED B(+)
6	L50 18WT/TN	BRAKE LAMP SWITCH OUTPUT

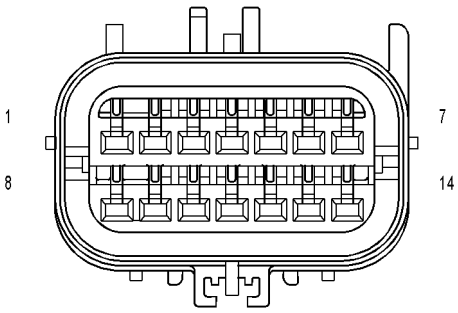

C102

C102 - (ENGINE SIDE)

CAV	CIRCUIT
1	A209 18RD
2	F26 16PK/OR
3	G301 20VT/LB (4.0L OFF-ROAD PACKAGE)
3	B1 18DG/OR (ABS)
4	A850 18RD/WT (4.0L OFF-ROAD PACKAGE)
4	B2 18DG/LB (ABS)
5	C20 20DB/YL (2.4L A/C)
6	G300 20VT/WT (4.0L OFF-ROAD PACKAGE)
6	B3 18DG/YL (ABS)
7	A750 18TN/RD (4.0L OFF-ROAD PACKAGE)
7	B4 18DG/GY (ABS)
8	N4 20DB/WT
9	L1 20WT/LG
10	F102 20PK/DB
11	K334 18BR
12	T750 14YL/GY
13	G93 20VT/LB
14	A109 18OR/RD