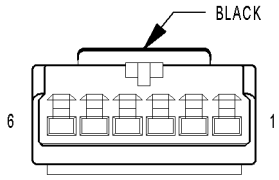

SENTRY KEY IMMOBILIZER MODULE

SENTRY KEY IMMOBILIZER MODULE - BLACK 6 WAY

CAV	CIRCUIT	FUNCTION
1	-	-
2	D25 20WT/VT	PCI BUS
3	-	-
4	F1 20PK/WT	FUSED IGNITION SWITCH OUTPUT (RUN-START)
5	Z120 20BK/WT	GROUND
6	L177 20WT/OR	FUSED B(+)

SUBWOOFER

SUBWOOFER - 12 WAY

CAV	CIRCUIT	FUNCTION
1	X54 18GY	RIGHT FRONT SPEAKER (+)
2	X56 18GY/BR	RIGHT FRONT SPEAKER (-)
3	X53 18DG	LEFT FRONT SPEAKER (+)
4	X55 18DG/BR	LEFT FRONT SPEAKER (-)
5	X60 20GY/OR	RADIO 12V OUTPUT
6	X13 16BK/RD	FUSED B(+)
7	X52 18GY/DB	RIGHT REAR SPEAKER (+)
8	X58 18GY/OR	RIGHT REAR SPEAKER (-)
9	X51 18DG/DB	LEFT REAR SPEAKER (+)
10	X57 18DG/OR	LEFT REAR SPEAKER (-)
11	-	-
12	Z513 16BK	GROUND

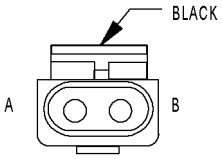

TRANSFER CASE SWITCH (EXCEPT OFF-ROAD PACKAGE)

TRANSFER CASE SWITCH (EXCEPT OFF-ROAD PACKAGE) - BLACK 2 WAY

CAV	CIRCUIT	FUNCTION
A	G93 20VT/LB	4WD INDICATOR
B	Z987 18BK	GROUND

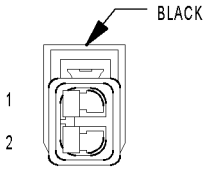

TRANSFER CASE SWITCH (OFF-ROAD PACKAGE)

TRANSFER CASE SWITCH (OFF-ROAD PACKAGE) - BLACK 2 WAY

CAV	CIRCUIT	FUNCTION
1	K77 18BR/WT	TRANSFER CASE POSITION SENSOR INPUT
2	K900 20DB/DG	SENSOR GROUND