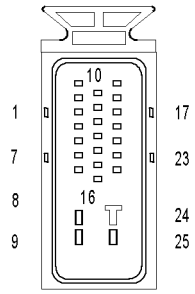

CONTROLLER
ANTILOCK
BRAKE

CONTROLLER ANTILOCK BRAKE - 25 WAY

CAV	CIRCUIT	FUNCTION
1	B1 18YL/DB	RIGHT REAR WHEEL SPEED SENSOR (-)
2	B3 18LG/DB	LEFT REAR WHEEL SPEED SENSOR (-)
3	B7 18WT	RIGHT FRONT WHEEL SPEED SENSOR (+)
4	B9 18RD	LEFT FRONT WHEEL SPEED SENSOR (+)
5	-	-
6	B41 18YL/VT	G-SWITCH NO. 1 SENSE
7	B42 18TN/WT	G-SWITCH NO. 2 SENSE
8	Z22 12BK/PK	GROUND
9	A20 12RD/DB	FUSED B(+)
10	B4 18LG	LEFT REAR WHEEL SPEED SENSOR (+)
11	B8 18RD/DB	LEFT FRONT WHEEL SPEED SENSOR (-)
12	L50 18WT/TN	BRAKE LAMP SWITCH OUTPUT
13	B43 18PK/OR	G-SWITCH TEST SIGNAL
14	-	-
15	-	-
16	G83 18GY/BK	ABS RELAY CONTROL
17	B2 18YL	RIGHT REAR WHEEL SPEED SENSOR (+)
18	B6 18WT/DB	RIGHT FRONT WHEEL SPEED SENSOR (-)
19	-	-
20	D21 18PK	SCI TRANSMIT
21	-	-
22	-	-
23	F20 18VT/WT	FUSED IGNITION SWITCH OUTPUT (RUN)
24	Z22 12BK/PK	GROUND
25	A10 12RD/DG	FUSED B(+)

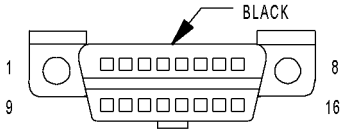

DATA LINK
CONNECTOR

DATA LINK CONNECTOR - BLACK 16 WAY

CAV	CIRCUIT	FUNCTION
1	-	-
2	D25 20VT/YL	PCI BUS
3	-	-
4	Z2 20BK/LG	GROUND
5	Z12 20BK/TN	GROUND
6	D32 20LG/WT	SCI RECEIVE
7	D21 20PK	SCI TRANSMIT
8	-	-
9	D23 20WT/BR	FLASH PROGRAM ENABLE
10	-	-
11	-	-
12	-	-
13	-	-
14	D20 20LG/PK	SCI RECEIVE
15	-	-
16	M1 20PK/WT	FUSED B(+)