FUSES (FB)

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	20A	L177 20WT/OR	FUSED B(+)
1	20A	L177 18WT/OR	FUSED B(+)
2	20A	A103 18GY/RD	FUSED B(+)
3	20A	X13 16BK/RD (SUBWOOFER)	FUSED B(+)
4	10A	Z902 20BK	GROUND
5	10A	F100 18PK/VT	FUSED IGNITION SWITCH OUTPUT (RUN)
6	20A	F302 18GY/PK (HARDTOP)	FUSED IGNITION SWITCH OUTPUT (RUN)
7	10A	F102 20PK/DB	FUSED IGNITION SWITCH OUTPUT (RUN)
8	10A	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
9	10A	F201 18PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
10	10A	F505 20PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
11	10A	F960 20PK/LG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
12	10A	F1 20PK/WT	FUSED IGNITION SWITCH OUTPUT (RUN-START)
13	10A	L5 20WT/LB	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
14	10A	X112 16DG/GY	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
15	10A	C15 12BK/WT	REAR WINDOW DEFOGGER RELAY OUTPUT
15	10A	C515 20LB/OR (HARDTOP)	FUSED REAR WINDOW DEFOGGER RELAY OUTPUT
16	10A	L45 18WT/OR (EXPORT)	DIMMER SWITCH LOW BEAM OUTPUT
16	10A	L45 18WT/OR (EXPORT)	DIMMER SWITCH LOW BEAM OUTPUT
17	25A	F993 12PK/YL	IGNITION SWITCH OUTPUT (RUN-ACC)
17	25A	F300 16OR/PK	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
18	15A	A207 18RD/LG	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
19	-	-	-
20	-	-	-

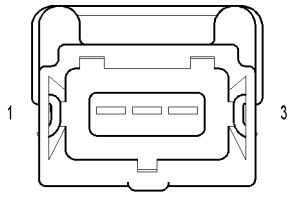

G-SWITCH

G-SWITCH - 3 WAY

CAV	CIRCUIT	FUNCTION
1	G119 20VT	G-SWITCH TEST SIGNAL
2	G117 20VT/LG	G-SWITCH NO. 1 SENSE
3	G118 20VT/YL	G-SWITCH NO. 2 SENSE

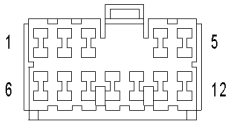

INSTRUMENT CLUSTER C1

INSTRUMENT CLUSTER C1 - 12 WAY

CAV	CIRCUIT	FUNCTION
1	L61 18WT/LG	LEFT TURN SIGNAL
2	L60 18WT/TN	RIGHT TURN SIGNAL
3	L300 16LG/WT	DIMMER SWITCH HIGH BEAM OUTPUT
4	L39 16WT/OR (EXCEPT EXPORT)	FOG LAMP FEED
4	L36 16WT/DB (EXPORT)	FOG LAMP FEED
5	L7 18WT/YL	HEADLAMP SWITCH OUTPUT
6	G305 20VT/LG (OFF-ROAD PACKAGE)	REAR LOCKER REQUEST
7	G301 20VT/LB (OFF-ROAD PACKAGE)	REAR LOCKER INDICATOR SWITCH SENSE
8	Z18 18BK/LB	GROUND
9	G303 20VT/DG (OFF-ROAD PACKAGE)	LOCKER ENABLE SIGNAL 2
10	D16 20WT/OR	SCI RECEIVE (TCM)
11	F505 20PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
12	M21 20YL/BR	FUSED B(+)