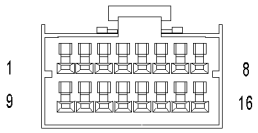

INSTRUMENT CLUSTER C2

INSTRUMENT CLUSTER C2 - 16 WAY

CAV	CIRCUIT	FUNCTION
1	C80 20DB (HARD TOP)	REAR WINDOW DEFOGGER SWITCH SENSE
2	G10 20VT/LG	SEAT BELT SWITCH SENSE
3	G76 20VT/YL	PASSENGER DOOR AJAR SWITCH SENSE
4	G75 20VT	DRIVER DOOR AJAR SWITCH SENSE
5	M22 20YL/OR	COURTESY LAMPS FEED
6	E2 20OR/BR	PANEL LAMPS FEED
7	C115 20DB (HARD TOP)	REAR WINDOW DEFOGGER RELAY CONTROL
8	G4 20VT/LB (ABS)	ABS WARNING INDICATOR DRIVER
9	B83 20DG/WT	BRAKE WARNING INDICATOR DRIVER
10	G304 20VT/DB (OFF-ROAD PACKAGE)	FRONT LOCKER REQUEST
11	G93 20VT/LB (OFF-ROAD PACKAGE)	4WD INDICATOR
12	D25 20WT/VT	PCI BUS
13	G15 20VT/TN	KEY-IN IGNITION SWITCH SENSE
14	G302 20VT/OR (OFF-ROAD PACKAGE)	LOCKER ENABLE SIGNAL 1
15	E19 20OR/BR	PANEL LAMPS DIMMER SIGNAL
16	G300 20VT/WT (OFF-ROAD PACKAGE)	FRONT LOCKER INDICATOR SWITCH SENSE

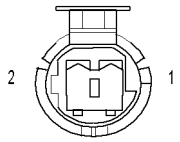

LEFT FRONT WHEEL SPEED SENSOR

LEFT FRONT WHEEL SPEED SENSOR - 2 WAY

CAV	CIRCUIT	FUNCTION
1	B8 18DG/TN	LEFT FRONT WHEEL SPEED SENSOR (-)
2	B9 18DG/LG	LEFT FRONT WHEEL SPEED SENSOR (+)

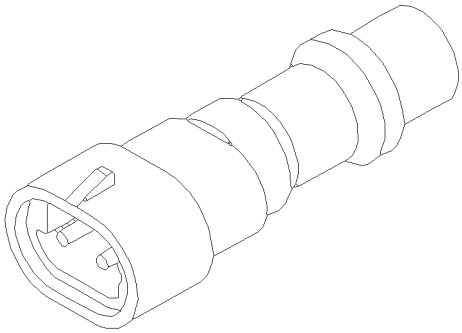

LEFT FRONT WHEEL SPEED SENSOR (COMPONENT SIDE)

LEFT FRONT WHEEL SPEED SENSOR (COMPONENT SIDE) - 2 WAY

CAV	CIRCUIT	FUNCTION
1	RD/DB	LEFT FRONT WHEEL SPEED SENSOR (-)
2	RD	LEFT FRONT WHEEL SPEED SENSOR (+)