1 - DRIVEPLATE
2 - TORQUE CONVERTER
3 - INPUT SHAFT
4 - UNDERDRIVE CLUTCH
5 - OVERDRIVE CLUTCH
6 - REVERSE CLUTCH
7 - FRONT PLANET CARRIER
8 - REAR PLANET CARRIER
9 - OUTPUT SHAFT
10 - SNAP RING
11 - STUB SHAFT
12 - LOW/REVERSE CLUTCH
13 - 2/4 CLUTCH
14 - OIL PUMP

TRANSMISSION IDENTIFICATION

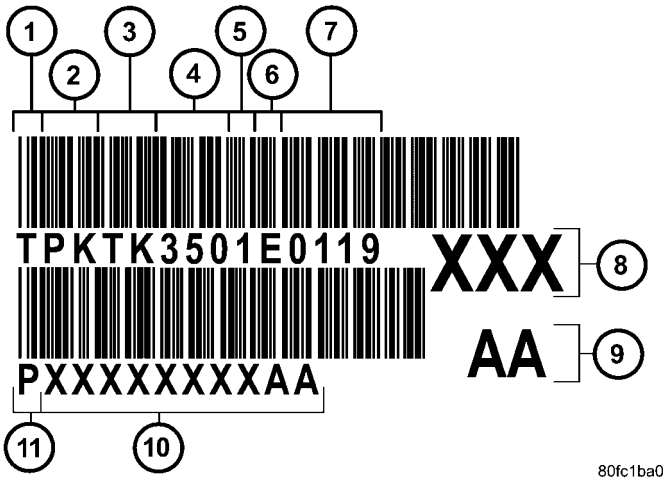

Fig. 2 Identification Label Breakdown

1 - T=TRACEABILITY
2 - SUPPLIER CODE (PK=KOKOMO)
3 - COMPONENT CODE (TK=KOKOMO TRANSMISSION)
4 - BUILD DAY (350=DEC. 15)
5 - BUILD YEAR (1=2001)
6 - ASSEMBLY LINE CODE
7 - BUILD SEQUENCE NUMBER
8 - LAST THREE OF P/N
9 - CHANGE LEVEL
10 - TRANSMISSION PART NUMBER
11 - P=PART NUMBER

The 42RLE transmission can be identified by a barcode label that is affixed to the upper left area of the bellhousing.

The label contains a series of digits that can be translated into useful information such as transmission part number (10), date of manufacture (4, 5), manufacturing origin (2), assembly line identifier (6), build sequence number (7), etc. (Fig. 2).

If the tag is not legible or is missing, the “PK” number, which is stamped into the left rear flange of the transmission case, can be referred to for identification. The entire part number, build code, and sequence number are stamped into the flange.

OPERATION

The 42RLE transmission ratios are:

First	2.84 : 1
Second	1.57 : 1
Third	1.00 : 1
Overdrive	0.69 : 1
Reverse	2.21 : 1