AUTOMATIC TRANSMISSION - 42RLE (Continued)

(15) Install low/reverse reaction plate snap ring (Fig. 100).

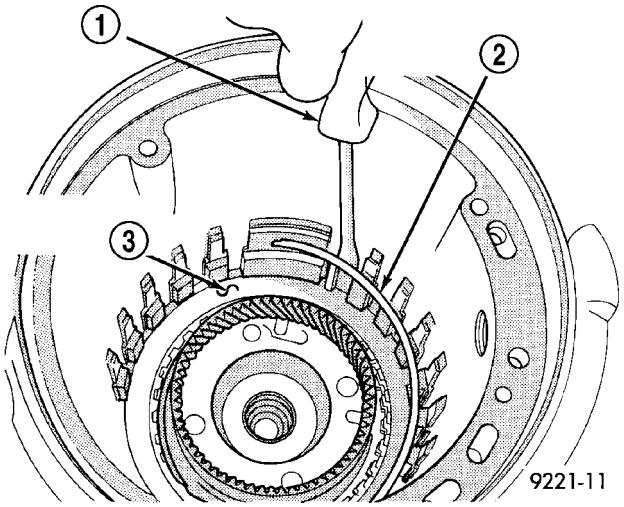


Fig. 100 Install Low/Reverse Reaction Plate Snap Ring

1 - SCREWDRIVER
2 - LOW/REVERSE REACTION PLATE FLAT SNAP RING
3 - DO NOT SCRATCH CLUTCH PLATE

(16) Install one low/reverse clutch disc (Fig. 101).

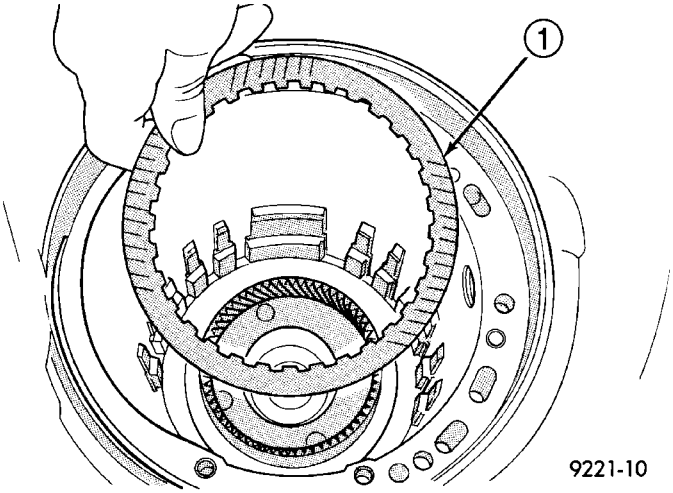


Fig. 101 Install One Disc

1 - ONE DISC FROM LOW/REVERSE CLUTCH

(17) Install low/reverse reaction plate with flat side up (Fig. 102).

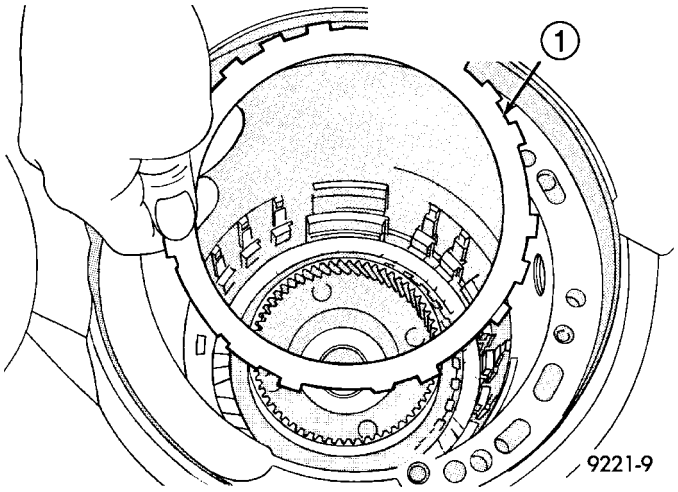


Fig. 102 Install Low/Reverse Reaction Plate

1 - LOW/REVERSE REACTION PLATE (FLAT SIDE UP)

(18) Install a new tapered snap ring (tapered side out) (Fig. 103). Make sure that the snap ring ends are oriented as shown (Fig. 104)

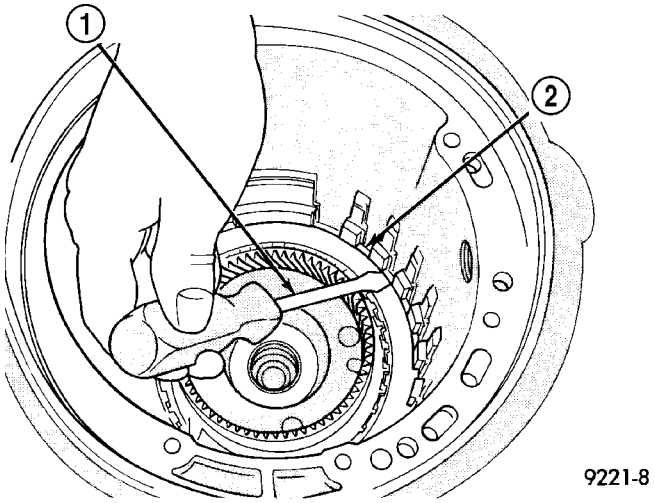


Fig. 103 Snap Ring Installed

1 - SCREWDRIVER
2 - TAPERED SNAP RING (INSTALL AS SHOWN)