VALVE BODY (Continued)

INSTALLATION

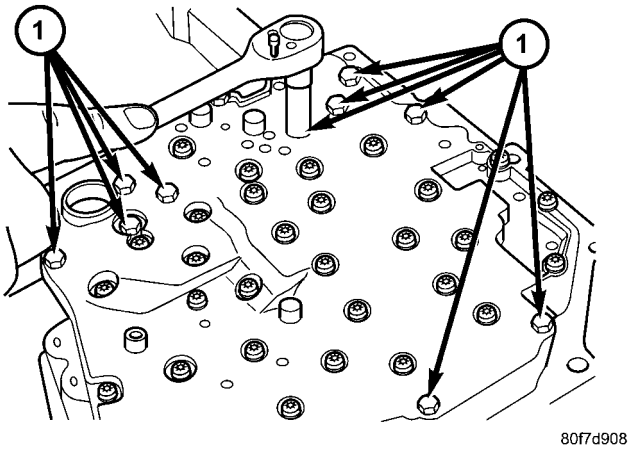

Fig. 303 Install Valve Body Bolts

1 - BOLTS

(1) Install valve body into position and start bolts (1). Torque valve body to transmission case bolts (1) (Fig. 303) to 12 N·m (105 in. lbs.) torque.

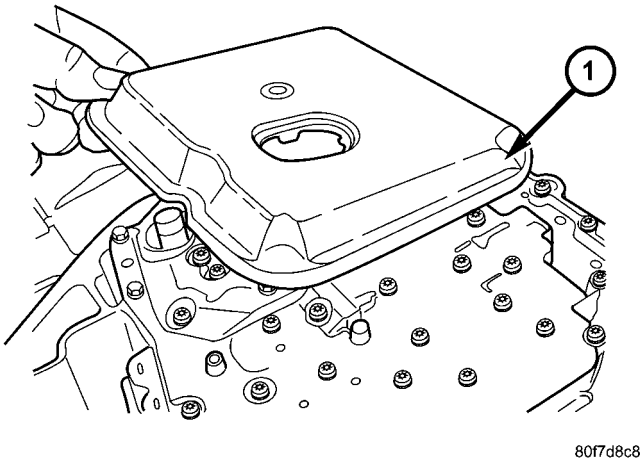

Fig. 304 Install Transmission Filter

1 - TRANSMISSION FILTER

(2) Install transmission oil filter (1) (Fig. 304).

NOTE: Before installing the oil pan bolt in the bolt hole (5) located between the torque converter clutch on and U/D clutch pressure tap circuits (Fig. 305), it will be necessary to replentish the sealing patch on the bolt using Mopar® Lock & Seal Adhesive.

(3) Make sure oil pan (1) and case rail are clean and dry. Install an 1/8" bead of RTV to the transmission oil pan and install to case. Tighten bolts (2) (Fig. 306) to 20 N·m (14.5 ft. lbs.).

(4) Lower vehicle and connect the TRS connector.

(5) Connect solenoid/pressure switch assembly connector.

(6) Lower vehicle.

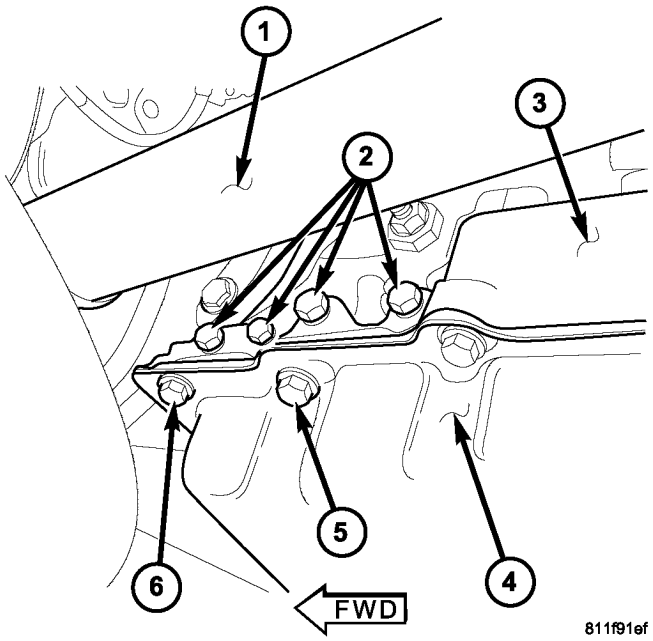

Fig. 305 Pan Fastener Location

1 - FRONT DRIVESHAFT
2 - PRESSURE PORTS
3 - TRANSMISSION CASE
4 - TRANSMISSION OIL PAN
5 - SECOND TRANSMISSION OIL PAN BOLT ON LEFT SIDE
6 - FIRST TRANSMISSION OIL PAN BOLT

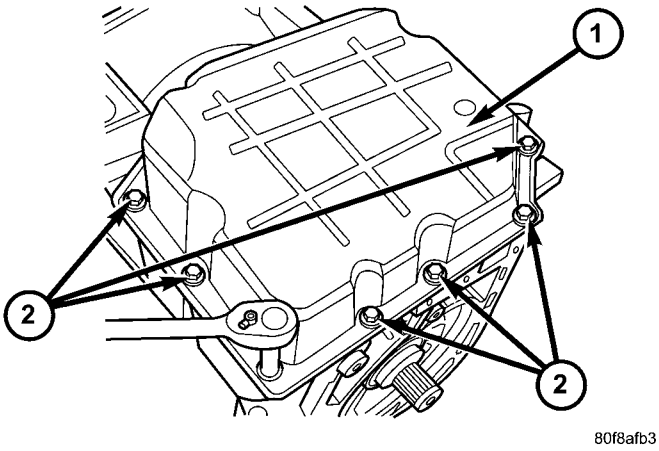

Fig. 306 Install Transmission Oil Pan Bolts

1 - TRANSMISSION OIL PAN
2 - BOLTS

(7) Fill transmission with ATF+4, Automatic Transmission Fluid. Verify proper fluid level. (Refer to 21 - TRANSMISSION/AUTOMATIC - 42RLE/ FLUID - STANDARD PROCEDURE)

NOTE: If the valve body has been reconditioned or replaced, it is necessary to perform the Quick Learn Procedure. (Refer to 8 - ELECTRICAL/ELECTRONIC CONTROL MODULES/TRANSMISSION CONTROL MODULE - STANDARD PROCEDURE)