
Modification to run CPU09CMI on 3MHz bus.

Replace xtal into 12MHz Replace GAL CMI_1 by CMI-4_1

On solder side:

Cut trace between U13-19 and via (OVMA) Place 22K resistor between U13-19 and Gnd

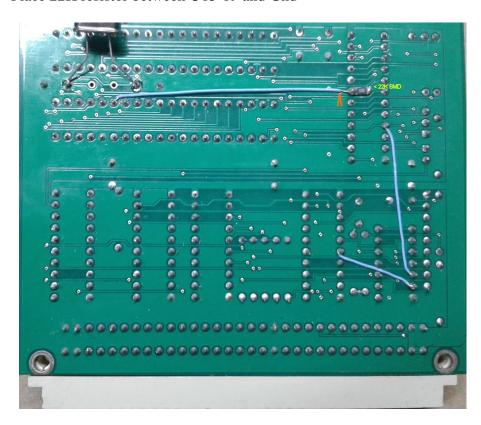


To keep CPUxxCMI 6802 compatible:

On top side:

Cut trace between U3-4 and U3-5

On solder side:

Place wire from U3-5 to U13-9 Place wire from U3-6 to U4-6

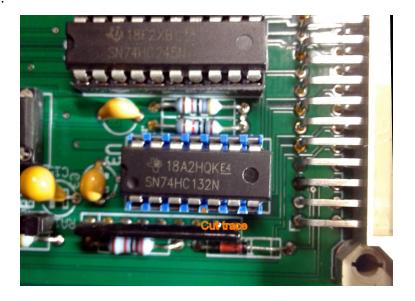

Remarks:

Still some work to do on FLEX/MON switch. Not tested with 6802.