


. INSTALL REAR COMBINATION LIGHT ASSEMBLY

- (a) Install the 3 light bulbs into the 3 light sockets.
- (b) To install the 3 light bulb sockets and 3 bulbs, turn them in the direction indicated by the arrow in the illustration.
- (c) Install the wire harness clamp.



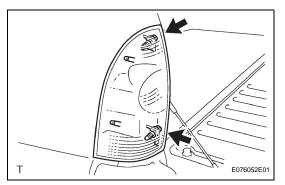

(d) Connect the connector, then install the tail light (rear combination light) assembly LH with the 2 bolts.Torque: 5.4 N*m (55 kgf*cm, 48 in.*lbf)

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)