


SAT-PWR-001 Satellite Power-Up Procedure

This procedure brings the training satellite from eclipse survival to payload power. Operators must confirm the power conditioning and distribution unit (PCDU) before closing the payload switch.

Power path

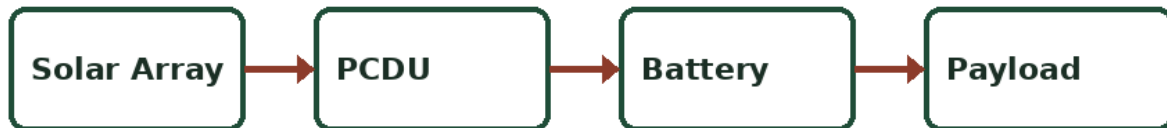

The diagram shows Solar Array to PCDU to Battery to Payload. Do not connect the payload until the regulated bus is inside the limit below.

Bus voltage limits

Check	Limit	Action if failed
Regulated bus	28.0 V +/- 0.5 V	Stop. Open payload switch.
Battery	Above 22.0 V	Stay on solar array only.
Payload inrush	Below 4.0 A	Command payload off.

Step 4. When the regulated bus reads 28.0 V plus or minus 0.5 V, close the payload switch. Step 5. Confirm payload current stays below 4.0 A for 30 seconds.