Point Defects in Crystals from Freysoldt *et al.*

Duy M. Dao

November 10, 2026

1 The Formation Energy as a Grand Potential

Reservoirs and the grand potential. A crystal supercell exchanges atoms of each species i with a reservoir at the chemical potential μ_i, and exchanges electrons with a reservoir at the electron chemical potential, the Fermi level E_F. The reservoirs represent the surroundings of the supercell. They fix the temperature T and the chemical potentials, and the supercell has a fixed volume V. The Legendre transform of the internal energy U with the natural variables $(T, V, \{\mu_i\}, E_F)$ is the grand potential Φ. Here, N_i denotes the number of atoms of species i and N_e the number of electrons in the pristine supercell. The grand potential of the pristine supercell is

$$\Phi_{\text{bulk}} = U_{\text{bulk}} - TS_{\text{bulk}} - \sum_i \mu_i N_i - E_F N_e = F_{\text{bulk}} - \sum_i \mu_i N_i - E_F N_e.$$

Neutral defects. Here, n_i denotes the number of atoms of species i that enter the supercell to form the defect X. A positive n_i adds atoms, for example an interstitial, and a negative n_i removes atoms, for example a vacancy. The grand potential of the supercell with the defect is

$$\Phi[X] = F[X] - \sum_i \mu_i \left(N_i + n_i\right) - E_F N_e.$$

The formation energy of the defect is the change of the grand potential at fixed $(T, V, \{\mu_i\}, E_F)$,

$$\boxed{E^f[X] = \Phi[X] - \Phi_{\text{bulk}} = F[X] - F_{\text{bulk}} - \sum_i \mu_i n_i.} \tag{1.1}$$

The natural variables are the same before and after the defect forms, but $\Phi[X]$ and Φ_{bulk} describe two different systems, so the two values differ.

Charged defects. A defect in the charge state q, written X^q, has released q electrons to the electron reservoir, so the supercell holds $N_e - q$ electrons,

$$\Phi[X^q] = F[X^q] - \sum_i \mu_i \left(N_i + n_i\right) - E_F \left(N_e - q\right).$$

The terms in N_i and N_e cancel against Φ_{bulk}, and the formation energy is

$$\boxed{E^f[X^q] = F[X^q] - F_{\text{bulk}} - \sum_i \mu_i n_i + qE_F.} \tag{1.2}$$

Formation energy from DFT at 0 K. At $T = 0$, the free energy equals the internal energy, $F = U$. A DFT calculation gives the total energy E_{tot} of the supercell with the nuclei at rest. The nuclei still vibrate at $T = 0$, so the internal energy also contains the zero-point energy of the phonon modes. Here, $E_{\text{ZPE}} = \frac{1}{2}\sum_k \hbar\omega_k$ denotes the zero-point energy of a supercell with the phonon frequencies ω_k. With $U = E_{\text{tot}} + E_{\text{ZPE}}$, the formation energy reads

$$\boxed{E^f[X^q] = \big(E_{\text{tot}}[X^q] + E_{\text{ZPE}}[X^q]\big) - \big(E_{\text{tot}}[\text{bulk}] + E_{\text{ZPE}}[\text{bulk}]\big) - \sum_i \mu_i n_i + qE_F.} \tag{1.3}$$

The total energies come from the DFT calculations, and the zero-point energies from the phonon frequencies of the two supercells. The phonon frequencies scale as $M^{-1/2}$ with the nuclear mass M, and most modes are the same in both supercells, so the difference of the zero-point energies is negligible for heavy nuclei and matters mainly for light atoms such as hydrogen. The chemical potentials μ_i and the Fermi level E_F describe the reservoirs and enter as parameters.

2 Charge-State Transition Levels and the U Parameter

The formation energy as a function of the Fermi level. Here, $E_0^f[X^q]$ denotes the formation energy at $E_F = 0$, with E_F measured from the valence-band maximum (VBM). The formation energy of Section 1 depends on the Fermi level through the term qE_F only,

$$E^f[X^q] = E_0^f[X^q] + qE_F.$$

In a plot against E_F, each charge state is a straight line with the slope q. At a given E_F, the defect takes the charge state with the lowest formation energy, so the stable charge state follows the lower envelope of the lines (red in Fig. 1). The Fermi level ranges from the VBM to the conduction-band minimum (CBM).

Charge-state transition levels. The charge-state transition level $\varepsilon(q/q')$ is the Fermi level at which the charge states q and q' have equal formation energies. Equating the two lines gives

$$\boxed{\varepsilon(q/q') = \frac{E_0^f[X^{q'}] - E_0^f[X^q]}{q - q'}.} \tag{2.1}$$

Below $\varepsilon(q/q')$, the more positive charge state is stable, and above $\varepsilon(q/q')$, the more negative one is stable. The transition levels are the kinks of the lower envelope.

The stability window of a charge state. Three consecutive charge states $q+1$, q and $q-1$ have two transition levels, $\varepsilon(q+1/q) = E_0^f[X^q] - E_0^f[X^{q+1}]$ and $\varepsilon(q/q-1) = E_0^f[X^{q-1}] - E_0^f[X^q]$. The charge state q is stable only for Fermi levels between the two. The width of this window defines the U parameter,

$$\boxed{U \equiv \varepsilon(q/q-1) - \varepsilon(q+1/q) = E^f[X^{q+1}] + E^f[X^{q-1}] - 2E^f[X^q].} \tag{2.2}$$

The terms in E_F cancel, because $(q+1) + (q-1) - 2q = 0$, so U does not depend on the Fermi level.

U as a reaction energy. The right-hand side of the definition is the energy change of the disproportionation reaction

$$2X^q \to X^{q+1} + X^{q-1},$$

in which one defect passes an electron to another. The electron does not reach the reservoir, which explains why E_F drops out.

The sign of U. A second electron on the same defect feels the Coulomb repulsion of the first, which favors $U > 0$. The charge state q is then stable in a window of width U (Fig. 1a). The lattice around the defect can relax differently in each charge state, and a large relaxation can outweigh the repulsion, so that $U < 0$. The disproportionation then releases energy, the line of the charge state q lies above the crossing of the lines $q+1$ and $q-1$ for every E_F, and the defect changes directly from $q+1$ to $q-1$ at the level $\varepsilon(q+1/q-1)$ (Fig. 1b). The vacancy in silicon is an example, with an unstable V^+.

More charge states. With more than three charge states, the lower envelope selects the stable ones in order of decreasing charge from the VBM to the CBM. Each charge state that appears has a window of its own width, and a charge state with a negative U drops out, so that the envelope jumps by two units of slope at a single kink (Fig. 1c).

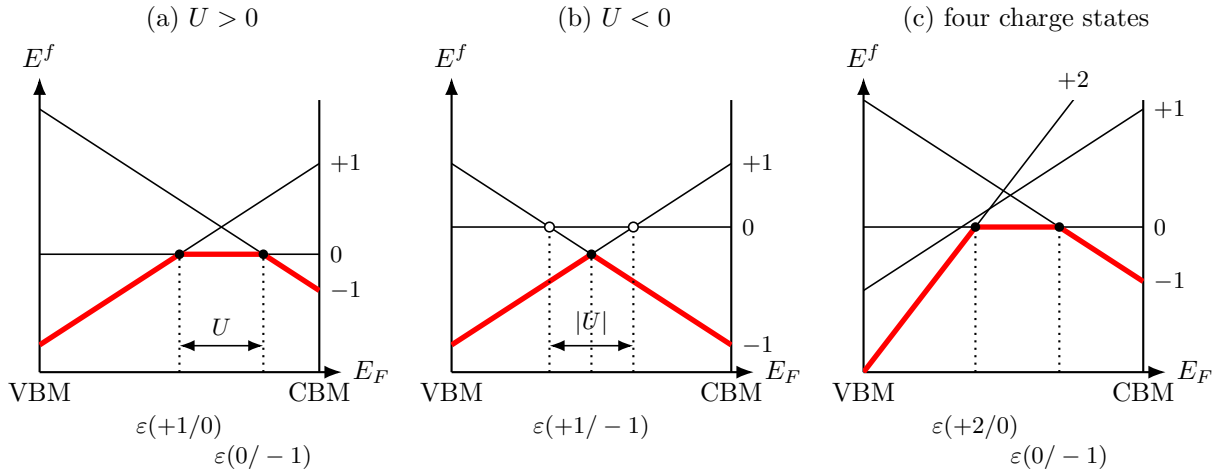


Figure 1: Formation energy against the Fermi level for three model defects, with the lower envelope in red. (a) Charge states +1, 0 and −1 with $U > 0$ and a window for the neutral state. (b) The same charge states with $U < 0$. Open circles: crossings with the neutral line above the envelope. (c) Charge states +2, +1, 0 and −1, with the state +1 skipped and a direct level $\varepsilon(+2/0)$.

3 Configurational entropy and the equilibrium concentration

A crystal has N sites and n defects to occupy them. Each defect has g_x internal orientation. The problem is essentially counting how many way to put n defects into $g_x N$ orientational sites.

There are $g_x N - (i-1)$ way to place the i th defect. Therefore, there are

$$W = \prod_{i=1}^{n} (g_x N - i + 1) = \frac{(g_x N)!}{(g_x N - n)!} \tag{3.1}$$

way to place n defects into the supercell. At large N, we can use the Stirling approximation

$$x! = \sqrt{2\pi x}\left(\frac{x}{e}\right)^x \tag{3.2}$$

$$\frac{(g_x N)!}{(g_x N - n)!} \approx \sqrt{\frac{N}{N-n}} \frac{(g_x N)^{g_x N}}{(g_x N - n)^{g_x N - n}} e^{1 - n/(g_x N)} \tag{3.3}$$

We are interested in the limit where the defects concentration is very diluted or $n << N$.

$$\lim_{n/N \to 0} \sqrt{\frac{N}{N-n}} \frac{(g_x N)^{g_x N}}{(g_x N - n)^{g_x N - n}} e^{1 - n/(g_x N)} = (g_x N)^n \tag{3.4}$$

If the defects are identical, then we can permute the arrangement and the configuration still remains the same. There are $n!$ permutation of one distinct configuration, thus, the number of way to put n indistinguishable into a crystall is

$$W = \frac{(g_x N)!}{(g_x N - n)! n!} \approx \frac{(g_x N)^n}{n!} \tag{3.5}$$

We define the Configurational entropy of the defect system at fixed interal energy, crystal volume and particle number

$$S[\text{conf}] = k_B \ln W \tag{3.6}$$

Using Stirling formula

$$n! = n \ln n - n \tag{3.7}$$

we obtain

$$S[\text{conf}] = k_B[n\ln(g_x N) - n\ln n + n] \tag{3.8}$$

We can rewrite it as a function of defect concentration $c = n/N$

$$S[conf] = k_B[cN\ln(g_x N) - cN\ln cN + cN] \tag{3.9}$$

$$= Nk_B[c\ln g_x - c\ln c + c] \tag{3.10}$$

Assuming that each defect site is independent so that entropy is additive, the Configurational entropy per site is

$$S[c]^{\text{conf}} = k_B[c\ln g_x - c\ln c + c] \tag{3.11}$$

.

In the first section, in DFT calculation, we have neglected the temperature dependence of the defects formation energy by setting temperature equal to $0\,K$. Here we will restore it, with the assumption that δU is independent to temperature.

We also want a ensemble that can be compared to realistic experimental set-up. Although theoretically, mu, V, T is the correct ensemble, but experiments are done in N, P, T, so the chemical potential is set by the reservoir, not something we can tune. The natural thermodynamic potential would therefore be the Gibbs free energy

$$G[\text{bulk}] = \Phi[\text{bulk}] + \sum_i \mu_i N_i + E_F N_e + PV \tag{3.12}$$

$$G[X^q] = \Phi[X^q] + \sum_i \mu_i (N_i + n_i) + E_F(N_e + q) + PV \tag{3.13}$$

At finite temperature, the change in Gibbs free energy include the change in entropy of the defect and bulk system. There are actually 3 contribution - the electronic, the vibrational, and the Configurational entropy. For now, we consider only the configurational entropy contribution.

$$nG^f = U[X^q] - U[\text{bulk}] + TS[conf] \tag{3.14}$$

where G^f is the defect formation gibbs energy per defect