Prisma SD-WAN

Configure Probes

Previous
Add Performance Policy SLA

Next
Monitor Probes

Where Can I Use This?

- Prisma SD-WAN (Managed by Strata Cloud Manager)

What Do I Need?

- Prisma SD-WAN
- Physical and virtual ION devices running software version 6.4.1 and higher

Prisma SD-WAN supports always-on probing, enabling measurement of key metrics such as round trip latency, packet loss, jitter and other metrics to any ICMP/DNS/HTTP/HTTPS service across all transports (Direct, Fabric, Standard VPN). These results are available to the administrator and serve in making path selection decisions with precise control using performance policy. Furthermore, the system can utilize the same application health probes to determine L3 Reachability. At the tenant level, you can configure probes by specifying the probe type, endpoints, and frequency.

Probe Profiles, which are global objects containing probe configurations, are defined at the tenant level and linked to Circuit Categories and Circuits. **Probe Configs** are created with parameters such as Protocol Type (ICMP, DNS, HTTP, HTTPS), EndPoints (IP/FQDN/URL), Frequency, Probe Cycle Duration, and Path Type (Direct, Standard VPNs, Prisma SD-WAN VPNs).

STEP 1 - To configure **Probe Profiles**, go to **Configuration > Prisma SD-WAN > Resources > Probes > Probe Profiles**.

View the list of configured probe profiles and their configurations. Use the **Actions** options to **Edit** a probe profile, view the **Audit Logs**, or any system configuration changes and remove a probe profile. To add a new **Probe Profile**:

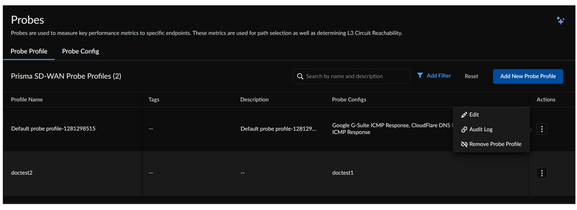

1. Select **Add New Probe Profile** and enter a **Name** for the profile and optionally, **Description** and **Tags**.
2. From the **Probe Configs** drop down, select a probe profile. You can select up to 8 probe configs for a probe profile. The default probe configs are:

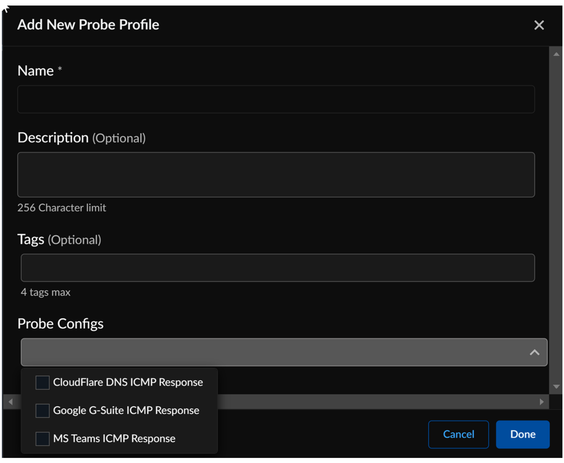

3. **Save** your changes.

The system automatically applies default probe profiles to all circuit categories, while default probe configurations are disabled by default for existing tenants. You can't remove a default probe profile, but you have the option to delete a default probe configuration.

STEP 2 - To configure **Probe Configs**, go to **Configuration > Prisma SD-WAN > Resources > Probes > Probe Configs**.

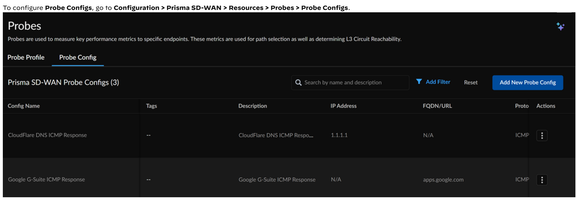

View the list of configured probe configurations and their details. Use the **Actions** options to **Edit** a probe config, view the **Audit Logs** or any system configuration changes. To add a new **Probe Config**:

1. Select **Add New Probe Config**. For existing tenants, the default Probe Configs will be present in Disabled mode. However, for new tenants, they will be in Enabled mode by default.

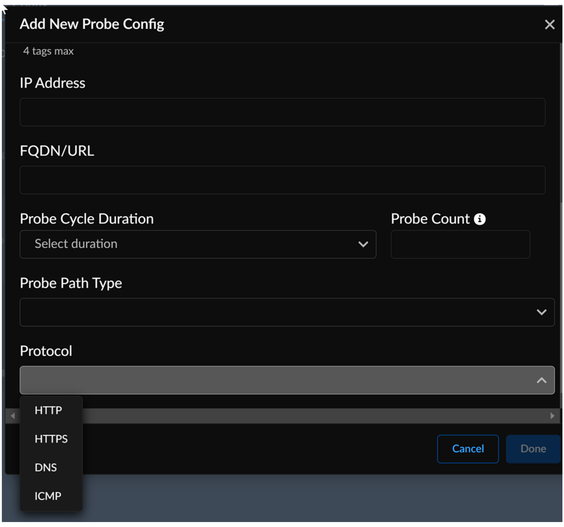

2. Enter a **Name** for the probe config and optionally, **Description** and **Tags**.
3. Enter an **IP address** or **FQDN** for the probe configuration.
4. Select the **Probe Cycle Duration** to be in minutes or seconds. The minimum value is 1 second and the maximum value is 60 minutes. The results of the probe are used in path selection (in combination with an SLA) and will trigger flow moves for existing flows and avoidance for new flows if the defined SLA is not being met.
5. Enter the **Probe Count** value as a multiple of the probe cycle duration; multiples of 1, 2, and 3 are accepted.
6. Select the **Probe Path Type** as Direct, Prisma SD-WAN VPN, and Direct VPN.
7. Select the Protocol as,
   - **HTTP**: Enter the **HTTP Response Code** from the drop-down and the **HTTP Response String**.
   - **HTTPS**: Enter the **HTTPS Response Code** from the drop-down and the **HTTPS Response String**.
   - **DNS**: Enter the **DNS Server IP address**.

     The IP / FQDN address will be used as the PTR / DNS record lookup criteria.
   - **ICMP**
8. **Save** your changes.

Related CLIs

- debug performance policy
- inspect performance policy fec status
- inspect performance policy hits analytics
- inspect performance policy incidents
- inspect performance policy lookup
- dump performance policy config policy rules
- dump performance policy config policy sets
- dump performance policy config policy set stacks
- dump performance policy config threshold profile

Previous
Add Performance Policy SLA

Next
Monitor Probes

© 2026 Palo Alto Networks, Inc. All rights reserved.